
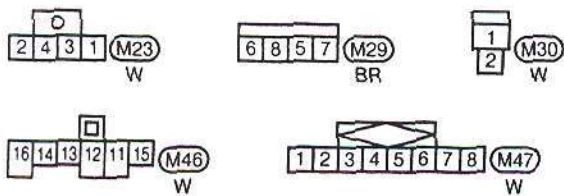


TROUBLE DIAGNOSES

Wiring Diagram — HEATER —

HA-HEATER-01

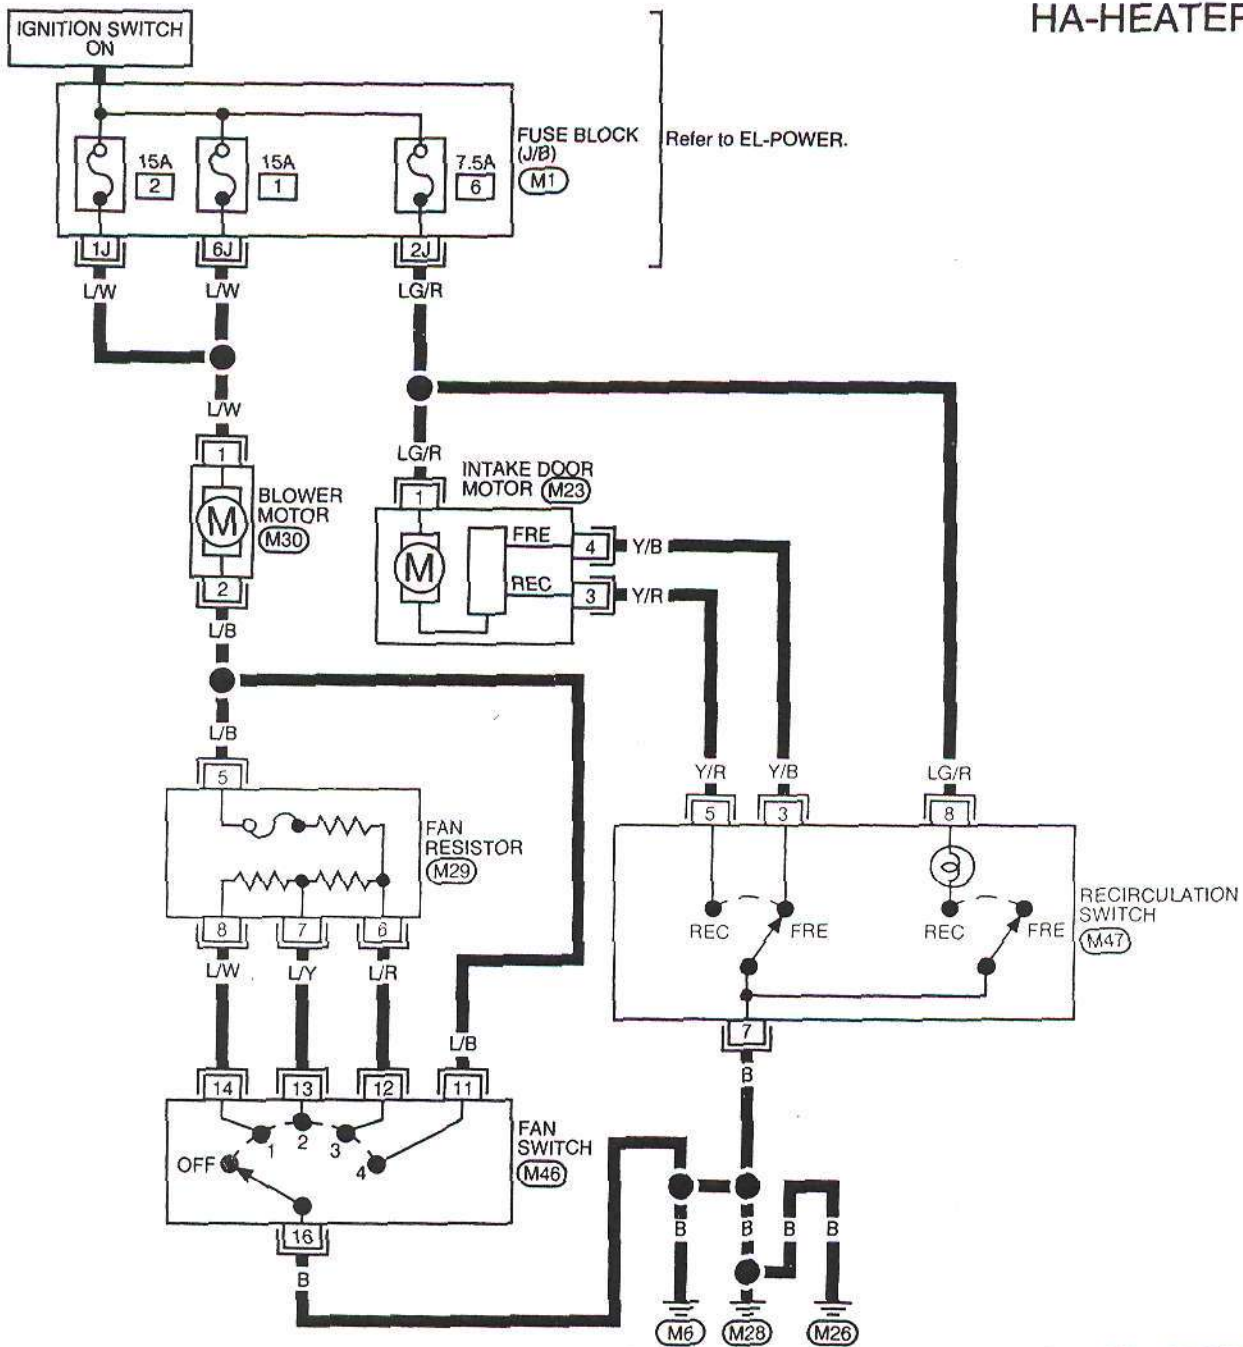



Refer to last page (Foldout page).

(M1)

TROUBLE DIAGNOSES

Wiring Diagram — A/C —

HA-A/C-01

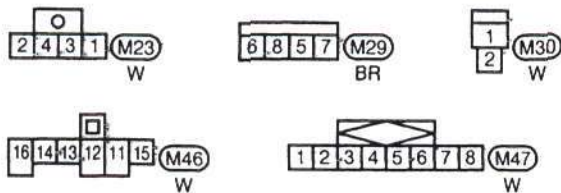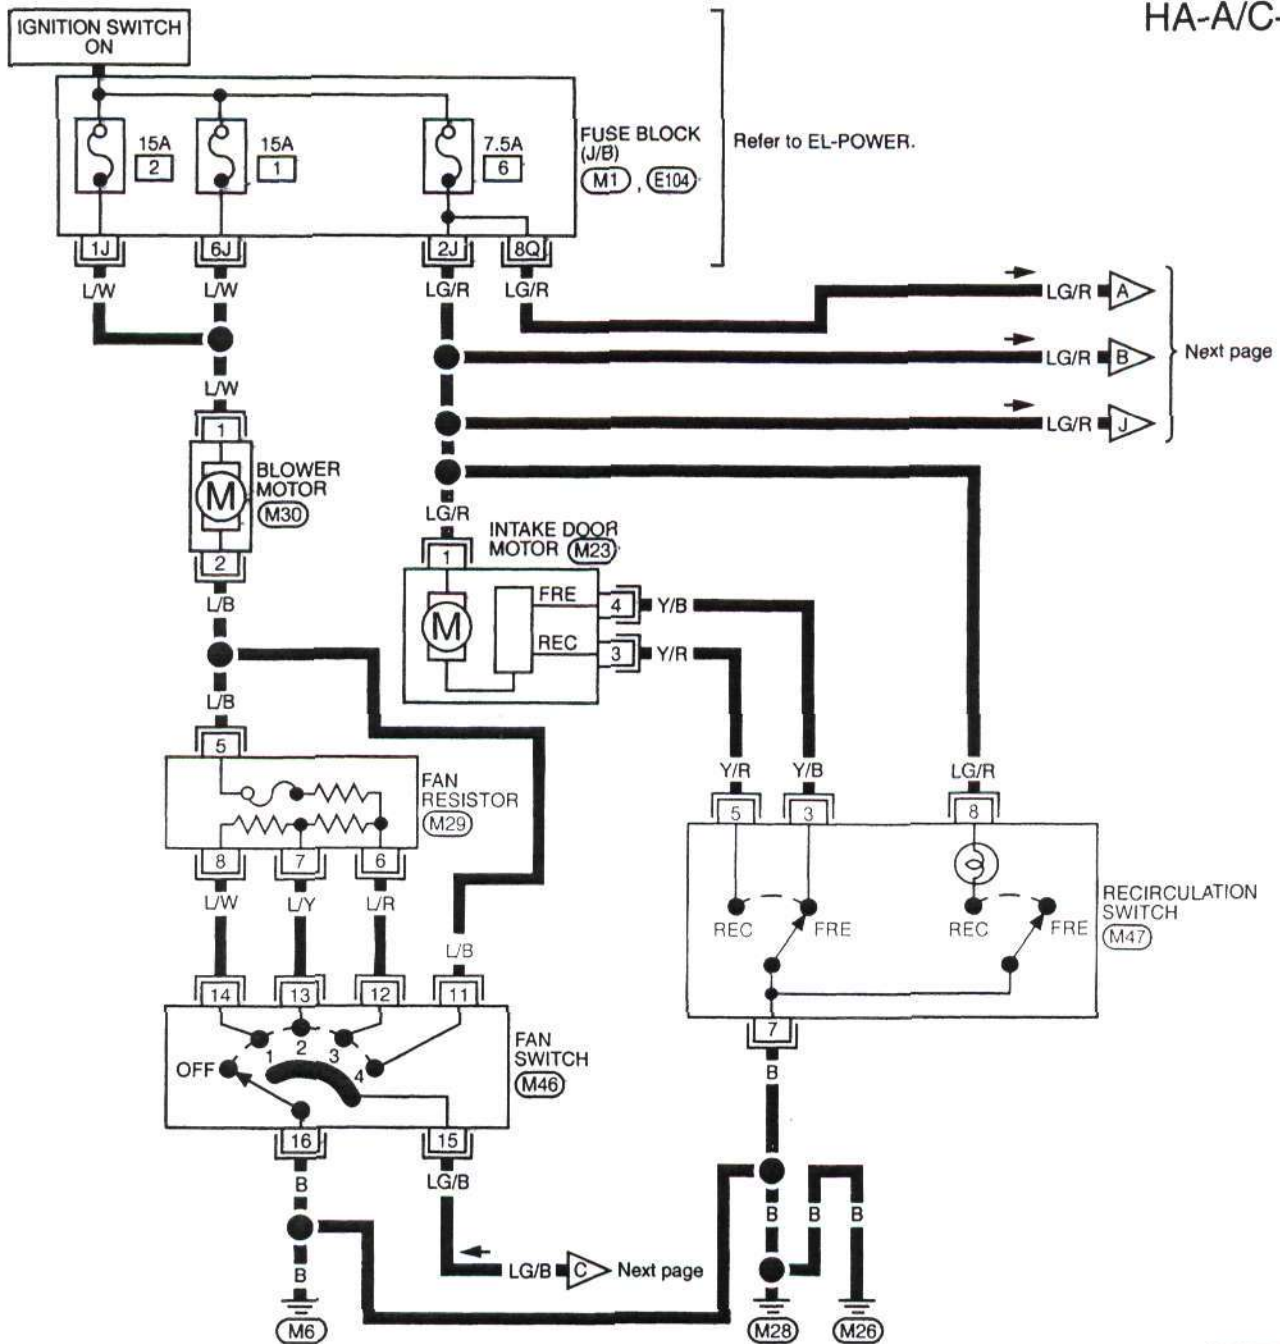

Refer to last page (Foldout page).

(M1)
(E104)

TROUBLE DIAGNOSES


Wiring Diagram — A/C — (Cont'd)

HA-A/C-02

ECM (ECCS/ECCS-D CONTROL MODULE)







(F101) : GS
(F106) : DI

- *1 41: GS 62: DI
- *2 11: GS 28: DI
- *3 9: GS 54: DI
- *4 1: GA 3: XG
- *5 4: GA 2: XG

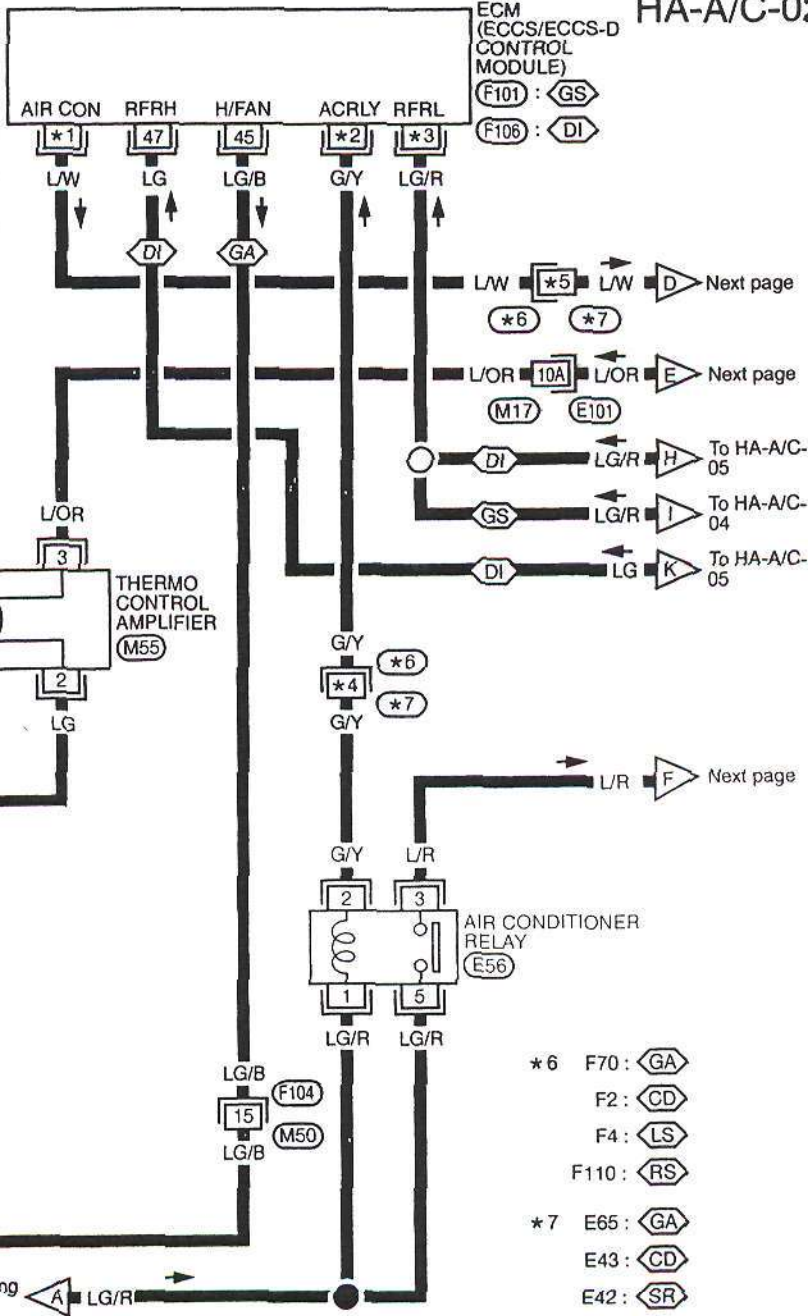

- GS : With gasoline engine
- DE : With diesel engine
- GA : With GA engine
- XG : Except for GA engine
- CD : With CD engine
- SR : With SR engine
- LS : LHD models and SR engine
- RS : RHD models and SR engine

      - *6 F70: GA
- F2: CD
- F4: LS
- F110: RS
- *7 E65: GA
- E43: CD
- E42: SR



Refer to last page (Foldout page).

(M17) , (E101)
(F101)
(F106)



TROUBLE DIAGNOSES

Wiring Diagram — A/C — (Cont'd)

HA-A/C-03

- (GS) : With gasoline engine
 (DI) : With diesel engine
 (SR) : With SR engine
 (GA) : With GA engine
 (L) : LHD models
 (R) : RHD models
 (LS) : LHD models and SR engine
 (RS) : RHD models and SR engine



- *1 3: (GA)
 8: (LS)
 9: (RS)
 *2 E65: (GA)
 E42: (SR)
 *3 F70: (GA)
 F4: (LS)
 F110: (RS)
 *4 B: (GA)
 LY: (GA)

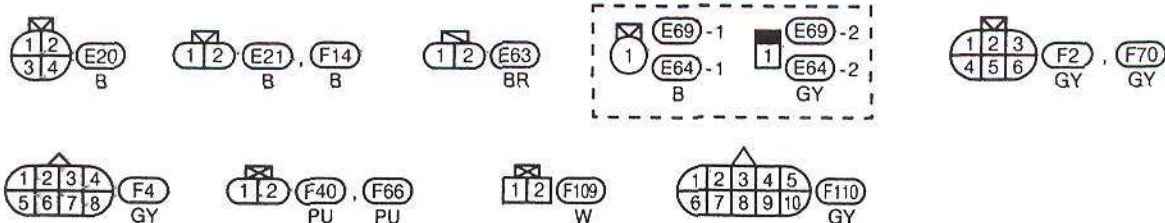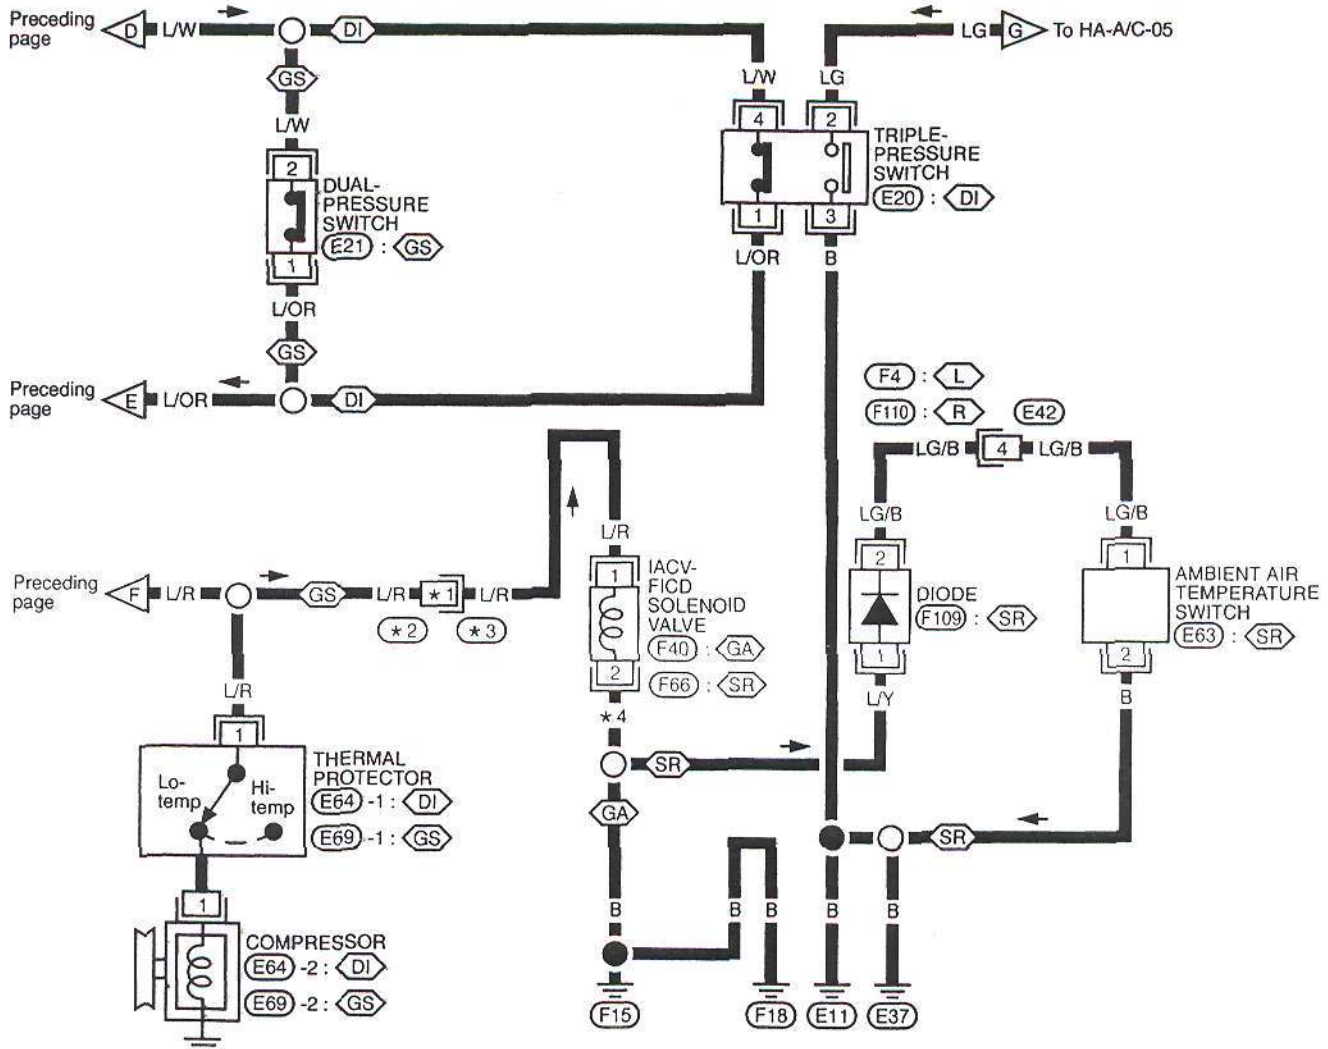

TROUBLE DIAGNOSES

Wiring Diagram — A/C — (Cont'd)

HA-A/C-04

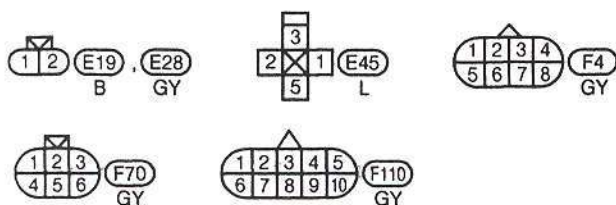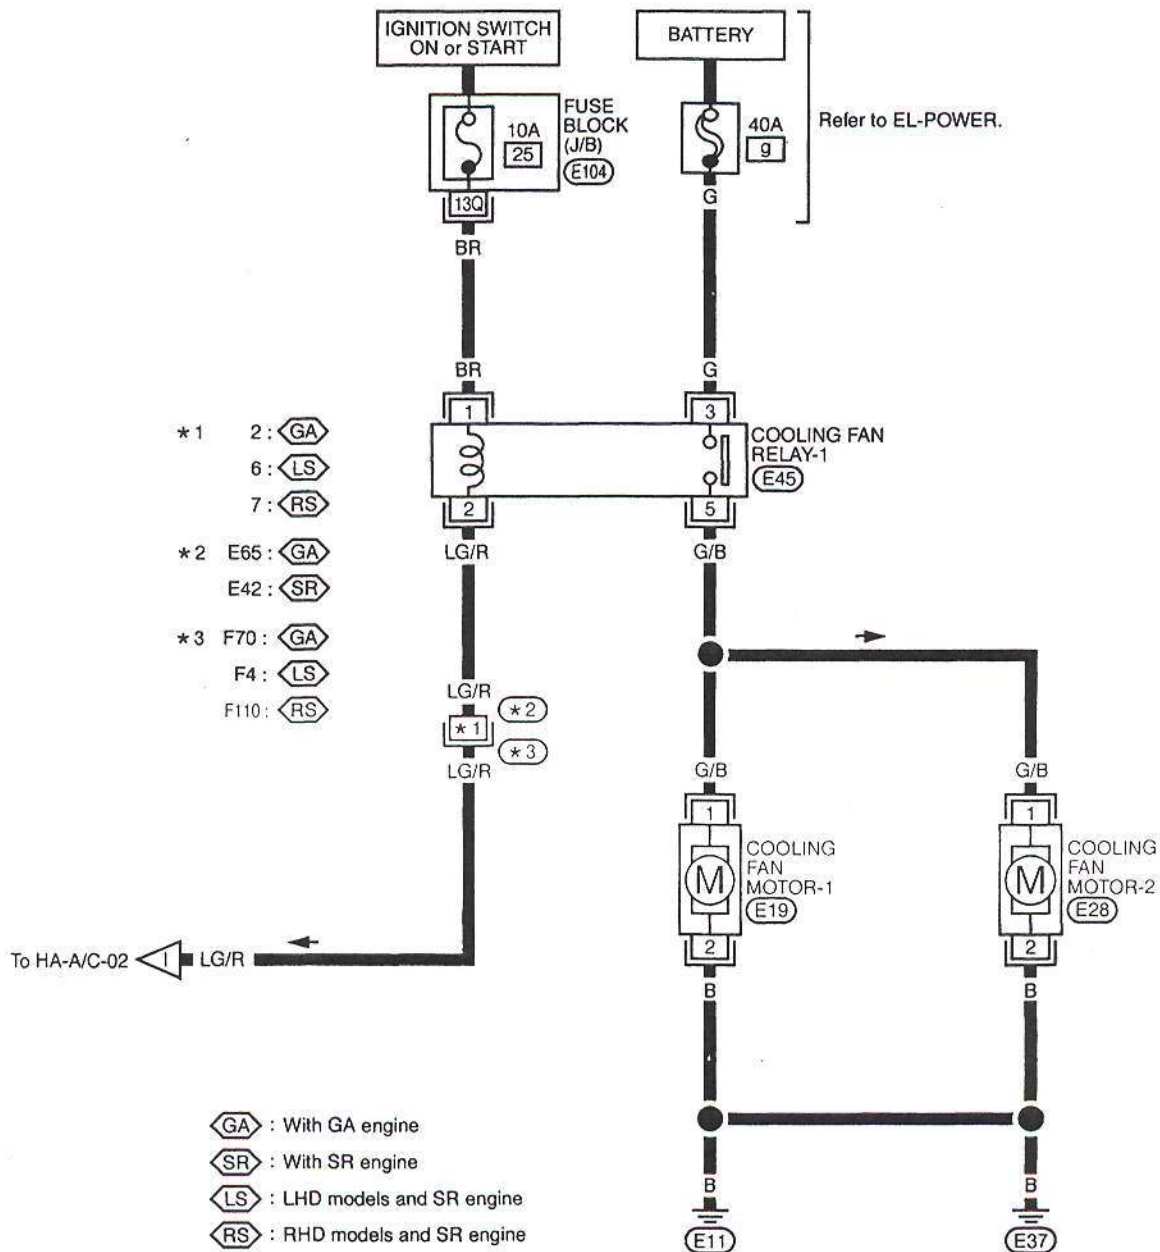


Refer to last page (Foldout page).

(E104)

TROUBLE DIAGNOSES

Wiring Diagram — A/C — (Cont'd)

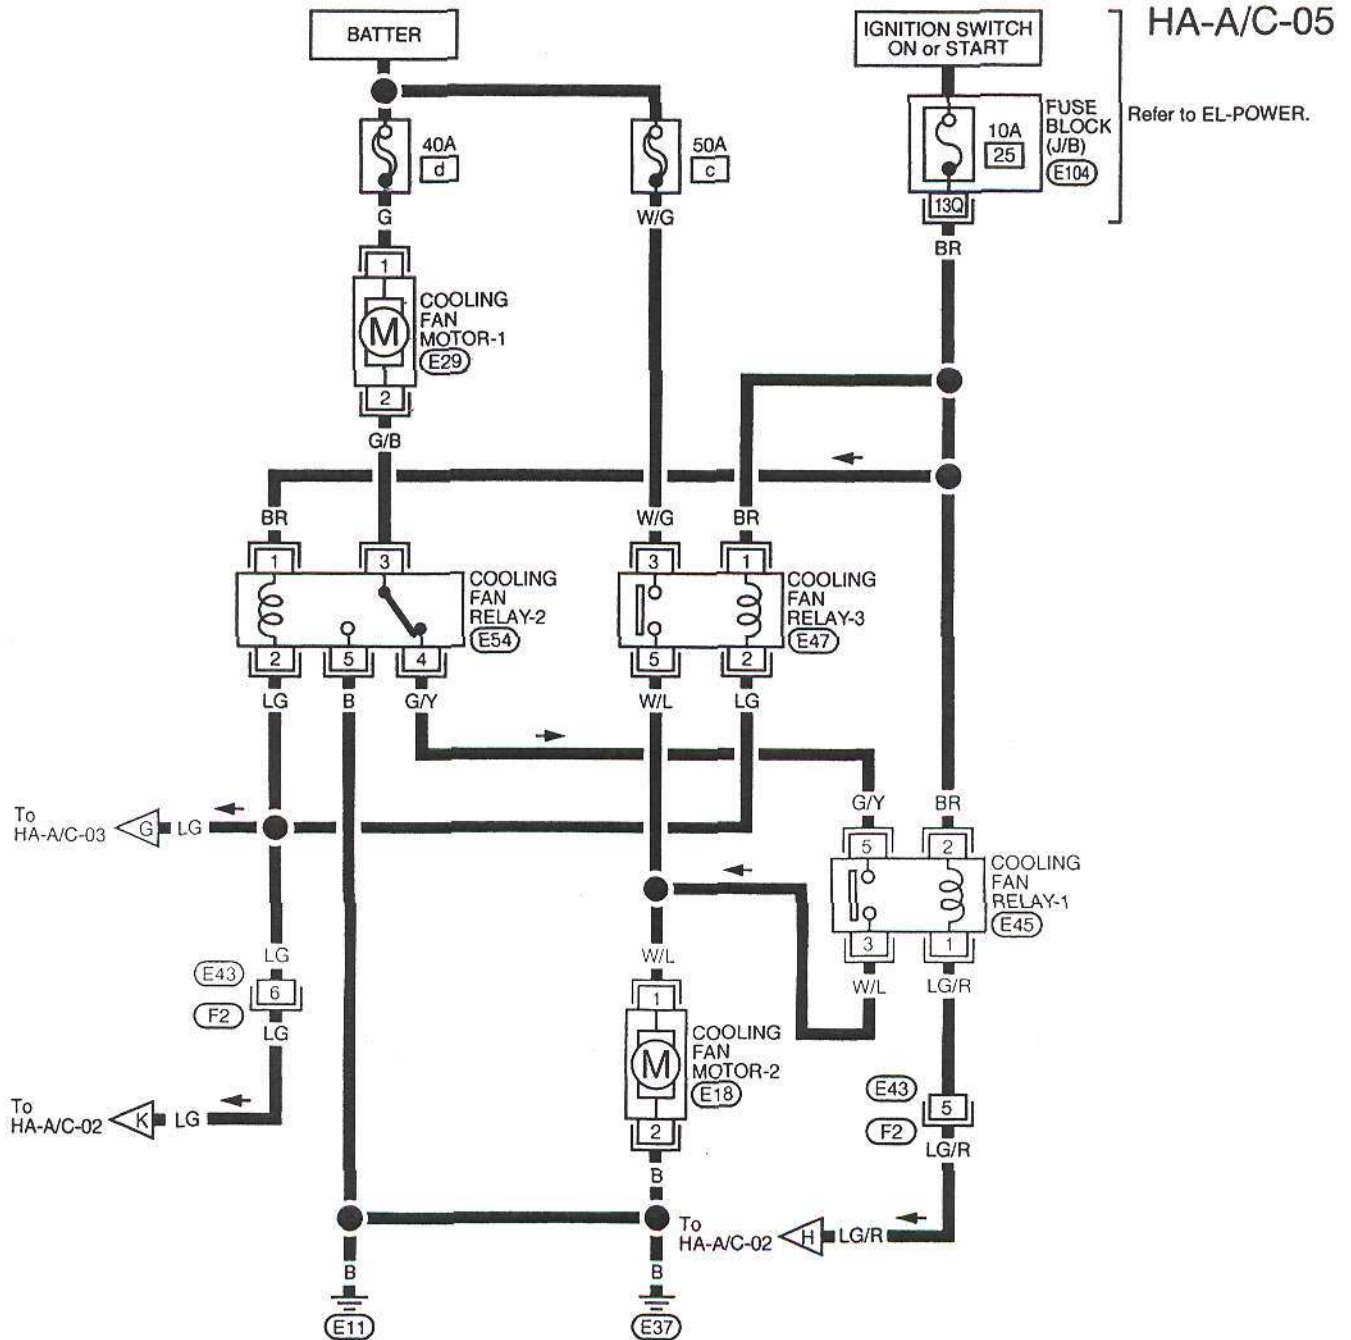

Refer to last page (Foldout page).
(E104)