

SECTION **EI**

EXTERIOR & INTERIOR

CONTENTS

PRECAUTIONS	3	CENTER MUD GUARD	18
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	Removal and Installation	18
Precautions	3	REMOVAL	18
CLIP AND FASTENER	4	INSTALLATION	18
Clip and Fastener	4	ROOF SIDE MOLDING	19
FRONT BUMPER	7	Removal and Installation	19
Removal and Installation	7	REMOVAL	20
REMOVAL	9	INSTALLATION	20
INSTALLATION	9	LICENSE PLATE FINISHER	21
REAR BUMPER	10	Removal and Installation	21
Removal and Installation	10	REMOVAL	21
REMOVAL	11	INSTALLATION	21
INSTALLATION	11	DOOR FINISHER	22
FRONT GRILL	12	Removal and Installation	22
Removal and Installation	12	REMOVAL	22
REMOVAL	12	INSTALLATION	23
INSTALLATION	12	BACK DOOR TRIM	24
COWL TOP	13	Removal and Installation (Wagon Models)	24
Removal and Installation	13	REMOVAL	24
REMOVAL	13	INSTALLATION	24
INSTALLATION	13	Removal and Installation (Hatchback Models)	25
FENDER PROTECTOR	14	REMOVAL	25
Removal and Installation	14	INSTALLATION	25
DOOR OUTSIDE MOLDING	15	BODY SIDE TRIM	26
Removal and Installation	15	Removal and Installation	26
REMOVAL	15	REMOVAL	26
INSTALLATION	15	INSTALLATION	27
REAR FENDER FINISHER	16	Removal and Installation (Wagon Models)	28
Removal and Installation	16	REMOVAL	28
REMOVAL	16	INSTALLATION	29
INSTALLATION	16	Removal and Installation (Hatchback Models)	30
REAR DOOR OUTSIDE FINISHER	17	REMOVAL	30
Removal and Installation	17	LUGGAGE SIDE LOWER FINISHER	30
REMOVAL	17	LUGGAGE REAR UPPER FINISHER	30
INSTALLATION	17	INSTALLATION	31
		REAR PARCEL SHELF FINISHER	32
		Removal and Installation	32
		REMOVAL	32
		INSTALLATION	32

FLOOR TRIM	34	HEADLINING	36
Removal and Installation	34	Removal and Installation	36
REMOVAL	34	REMOVAL	36
INSTALLATION	35	INSTALLATION	38
		TRUNK ROOM TRIM AND TRUNK LID TRIM	39
		Removal and Installation	39

PRECAUTIONS

PRECAUTIONS

PFP:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EIS002H0

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harness connectors.

Precautions

EIS002H1

- When removing or disassembling any part, be careful not to damage or deform it. Protect parts, which may get in the way with cloth.
- When removing parts with a screwdriver or other tool, protect parts by wrapping them with vinyl or tape.
- Keep removed parts protected with cloth.
- If a clip is deformed or damaged, replace it.
- If an un reusable part is removed, replace it with a new one.
- Tighten bolts and nuts firmly to the specified torque.
- After re-assembly has been completed, make sure each part functions correctly.
- Remove stains in the following way.

Water-soluble stains:

Dip a soft cloth in warm water, and then squeeze it tightly. After wiping the stain, wipe with a soft dry cloth.

Oil stain:

Dissolve a synthetic detergent in warm water (density of 2 to 3% or less), dip the cloth, then clean off the stain with the cloth. Next, dip the cloth in fresh water and squeeze it tightly. Then clean off the detergent completely. Then wipe the area with a soft dry cloth.

- Do not use any organic solvent, such as thinner or benzene.

CLIP AND FASTENER

CLIP AND FASTENER

PFP:76906


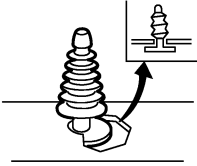
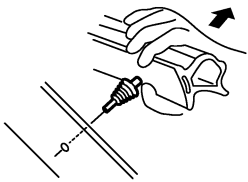

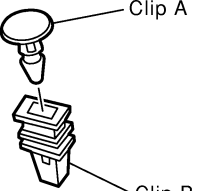
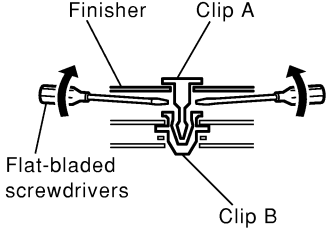

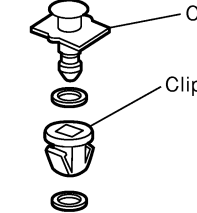
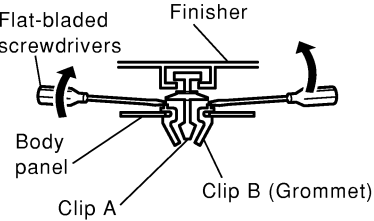

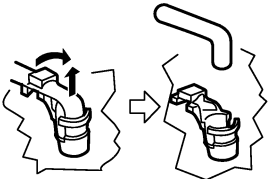

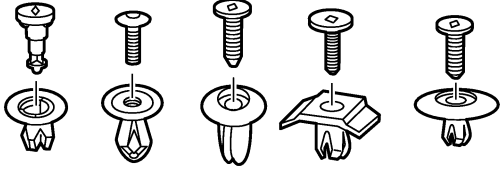

Clip and Fastener

EIS002H2

Symbol No.	Shapes	Removal & Installation
C101		<p>Removal: Remove by bending up with flat-bladed screwdrivers or clip remover.</p>
C103		<p>Removal: Remove with a clip remover.</p>
C203		<p>Removal: Push center pin to catching position. (Do not remove center pin by hitting it.)</p> <p>Push</p> <p>Installation:</p> <p>Push</p>
C205		<p>Removal: Flat-bladed screwdriver</p>
C206		<p>Removal:</p>




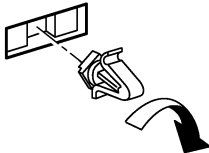










SIIA0315E

CLIP AND FASTENER

Symbol No.	Shapes	Removal & Installation
<div>CE103</div> <div></div>		Removal: 
<div>CF110</div> <div></div>	<div>Clip A</div> <div></div> <div>Clip B</div>	Removal: <div>Finisher</div> <div>Clip A</div> <div>Flat-bladed screwdrivers</div> <div>Clip B</div> 
<div>CF118</div> <div></div>	<div>Clip A</div> <div></div> <div>Clip B (Grommet)</div>	Removal: <div>Flat-bladed screwdrivers</div> <div>Finisher</div> <div>Body panel</div> <div>Clip A</div> <div>Clip B (Grommet)</div> 
<div>CR103</div> <div></div>		Removal: Holder portion of clip must be spread out to remove rod. 
<div>CS101</div> <div></div>		Removal: 1. Screw out with a Phillips screwdriver. 2. Remove female portion with flat-bladed screwdriver. 

A
B
C
D
E
F
G
H
EI
J
K
L
M

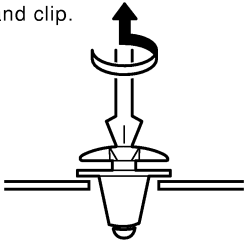CLIP AND FASTENER

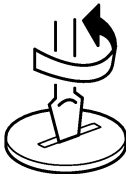Symbol No.	Shapes	Removal & Installation	
CG101 		Removal:  Rotate 45° to remove	Installation: 
		Removal: 	
CS102 			
CS113 		Removal: Disconnect upper connection of clip with a flat-bladed screwdriver, then remove clip while inserting a flat-bladed screwdriver between body panel and clip. 	
C111 			

- Bumper fascia is made of resin. Do not apply strong force to it, and be careful to prevent contact with oil.

A

B

C

D

E

F

G

H

EI

J


K

L

M

FRONT BUMPER

SEC. 620

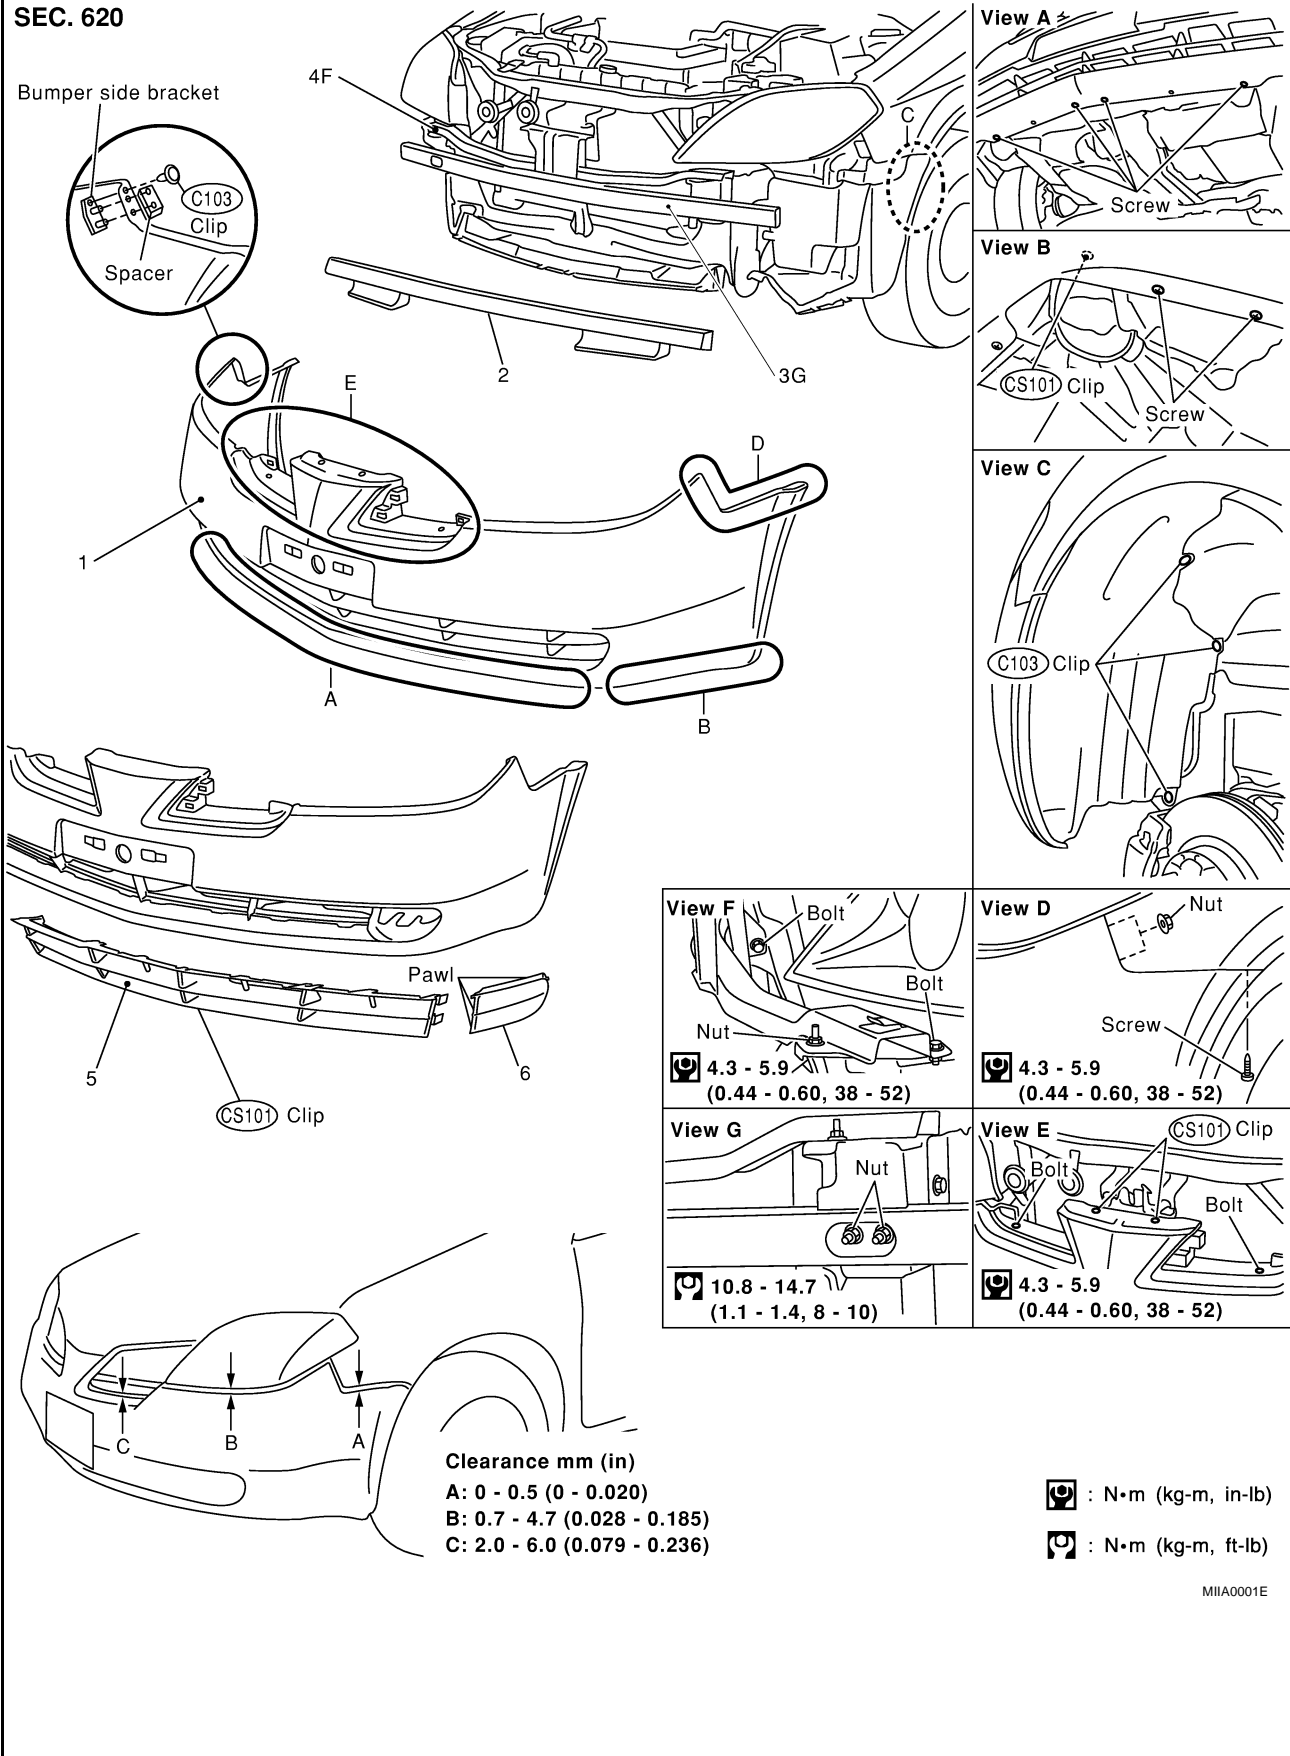

1. Front bumper fascia
4. Bumper upper retainer

2. Energy shock absorber
5. Bumper grill

3. Bumper reinforcement
6. Bumper finisher

FRONT BUMPER

REMOVAL

1. Remove front grille. Refer to [EI-12, "FRONT GRILL"](#) .
2. Remove mounting screws on engine under cover.
3. Remove RH/LH front fender protector mounting screws and clips.
4. Remove front bumper fascia mounting screws and nuts from RH/LH front fender.
5. Remove front bumper fascia mounting clips and bolts from bumper upper retainer.
6. Remove headlamp cleaner hose (If so equipped.).
7. Remove front bumper fascia.
8. Remove energy shock absorber.
9. Remove mounting nuts from bumper reinforcement assembly.
10. Remove mounting bolts from bumper upper retainer assembly.

INSTALLATION

Install in the reverse order of removal.

NOTE:

After installation, adjust the clearance.

A

B

C

D

E

F

G

H

EI

J

K

L

M

REAR BUMPER


REAR BUMPER

PFP:H5022

Removal and Installation

EIS002H4

- Bumper fascia is made of resin. Do not apply strong force to it, and be careful to prevent contact with oil.

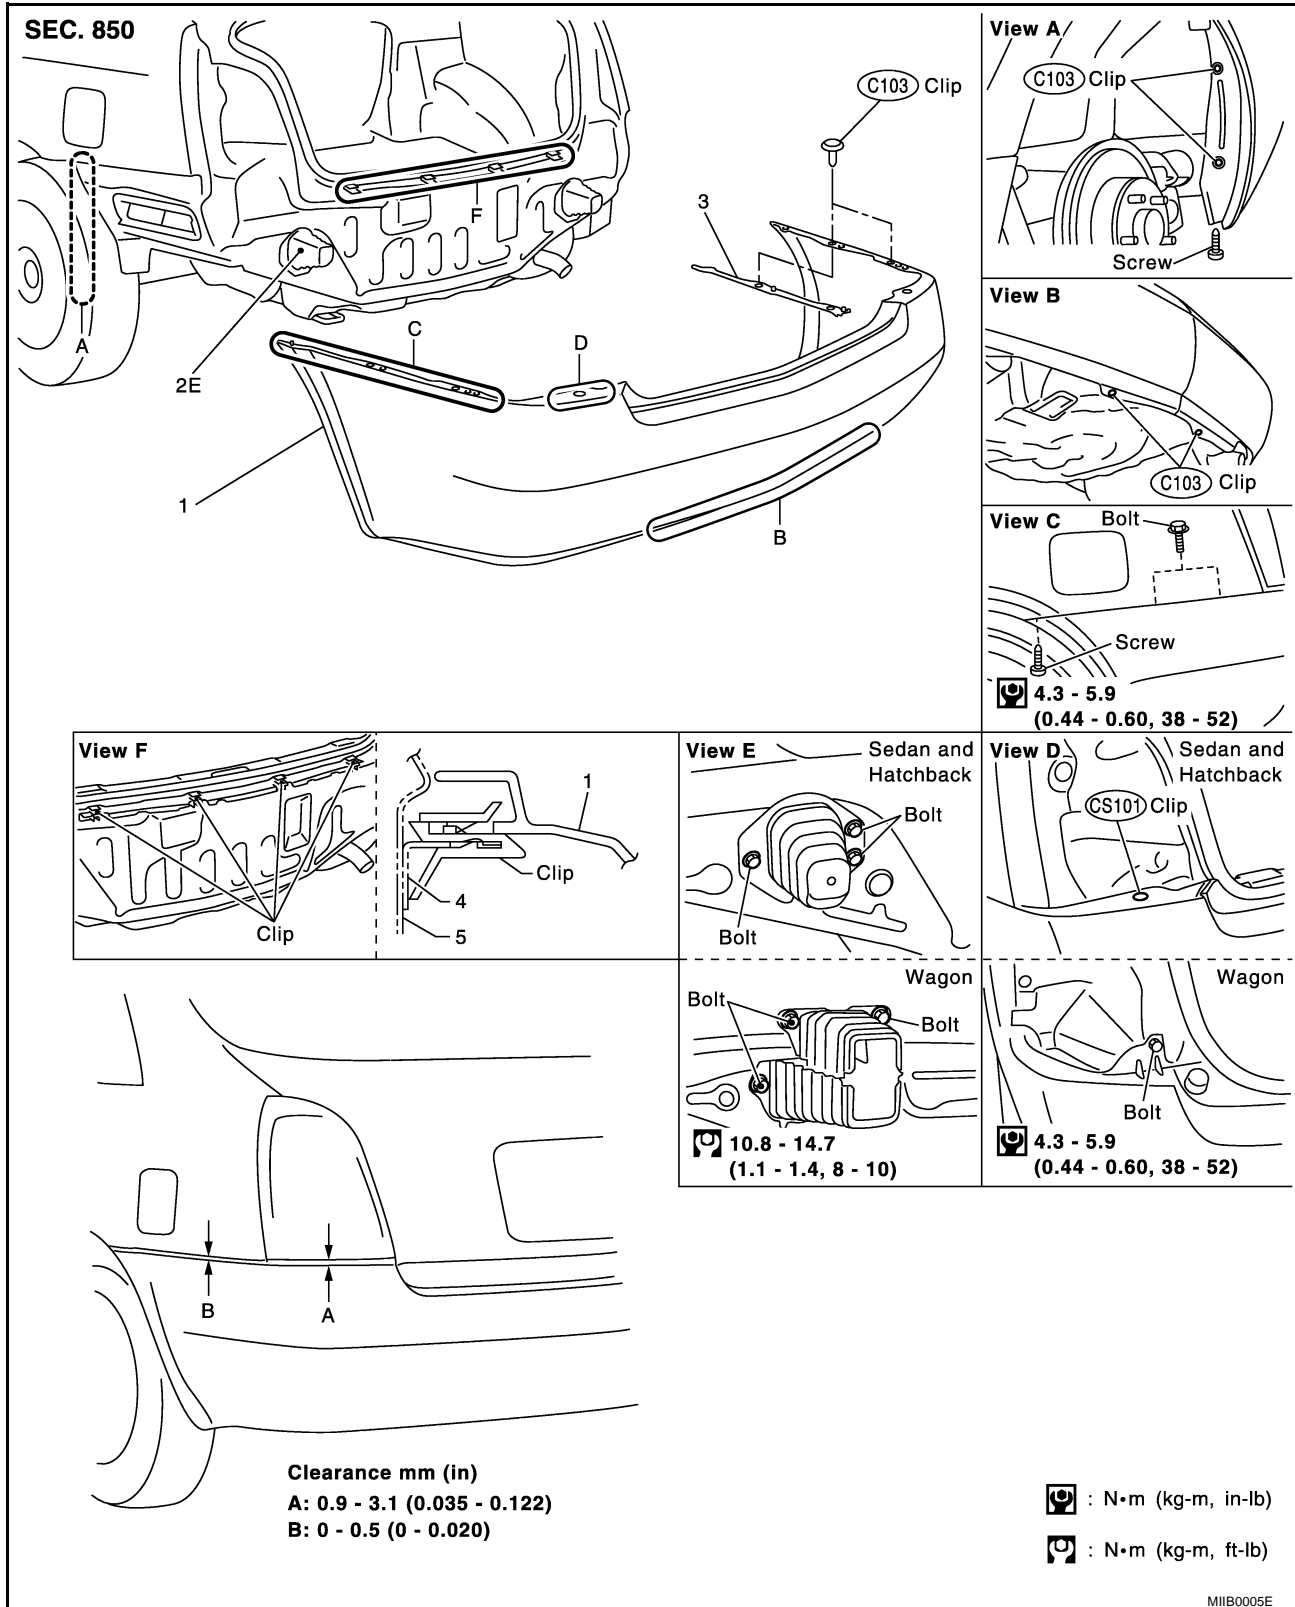

1. Rear bumper fascia

2. Bumper stay

3. Bumper side bracket

4. Bumper retainer

5. Rear panel

REAR BUMPER

REMOVAL

NOTE:

Concerning removal and installation sedan models and wagon models are basically the same.

1. Remove trunk side finisher for sedan models or luggage side boxes for wagon models.
2. Remove LH/RH rear combination lamps. Refer to [LT-91, "Removal and Installation"](#) .
3. Remove RH/LH chipping protector.
4. Remove mounting clips on rear bumper fascia.
5. Remove rear bumper fascia mounting screws, bolts and clips from LH/RH rear fender.
6. Pull rear bumper fascia center portion upper side. Then unfasten clips.
7. Remove rear bumper fascia.
8. Remove mounting bolts on bumper stay.

INSTALLATION

Installation is in the reverse order of removal.

NOTE:

After installation, adjust the clearance.

A

B

C

D

E

F

G

H

EI

J

K

L

M


FRONT GRILL

FRONT GRILL

PFP:62310

Removal and Installation

EIS002H5

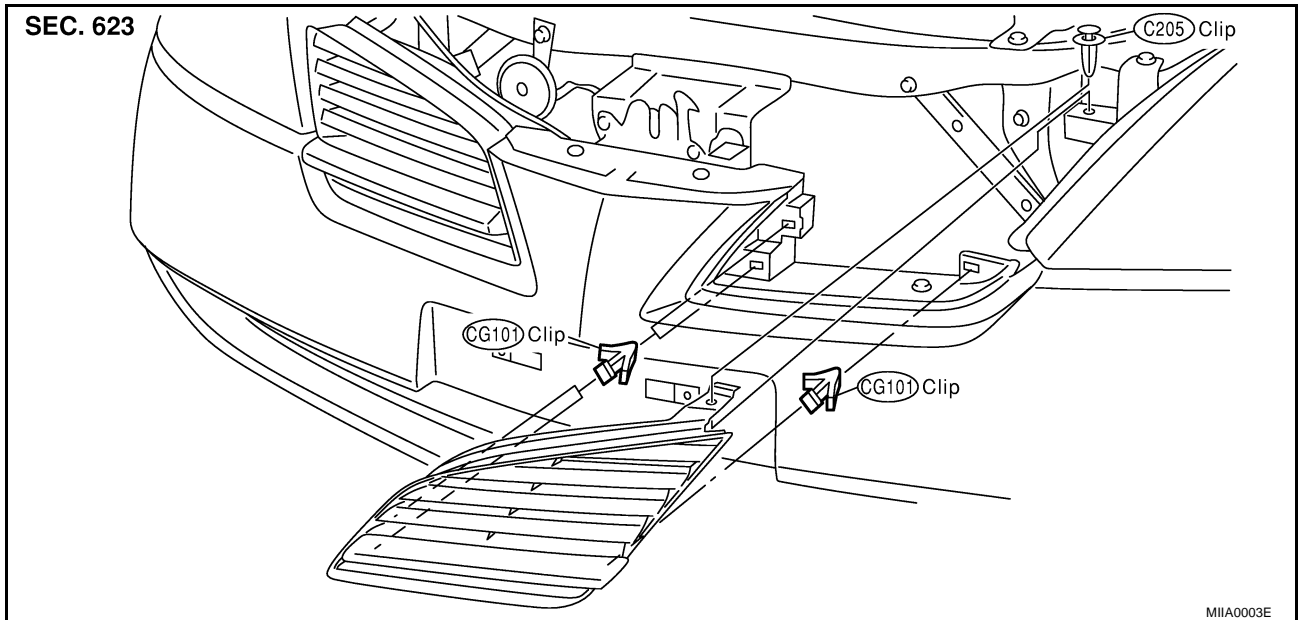

REMOVAL

1. Remove installation clips from top edge of grille.
2. Remove clips from the reverse side of grille, and pull to remove.

INSTALLATION

Install in the reverse order of removal.


COWL TOP

COWL TOP

PFP:66100

Removal and Installation

EIS002H6

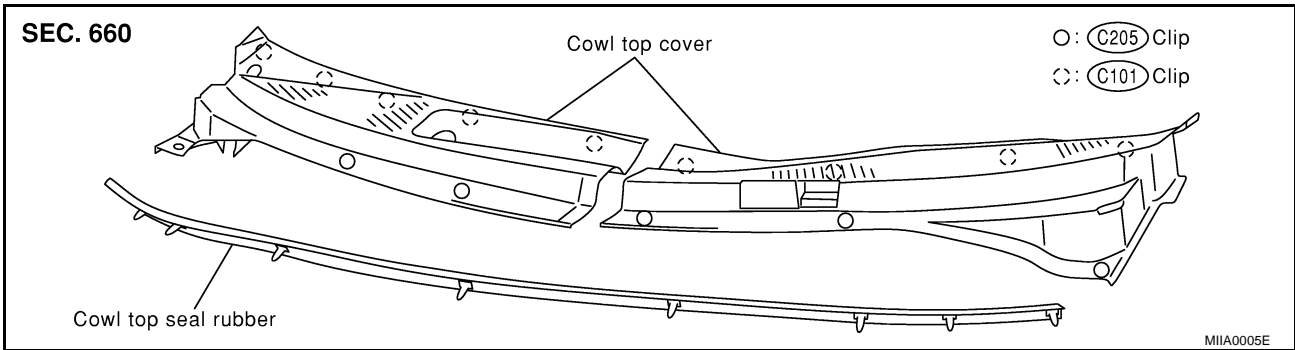

REMOVAL

1. Remove wiper arms (left and right). Refer to [WW-11, "Removal and Installation for Front Wiper Arms, Adjustment for Wiper Arms Stop Location"](#).
2. Remove cowl top seal rubber.
3. Remove cowl top rubber mounting clips. Then remove cowl top cover.

INSTALLATION

Install in the reverse order of removal.

NOTE:

- If RH cowl top cover is removed, the seal behind the cowl top cover must also be replaced.

FENDER PROTECTOR

FENDER PROTECTOR Removal and Installation


PFP:63840

EIS002H7

SEC. 630

⇐ : Clips

➡ : Screws

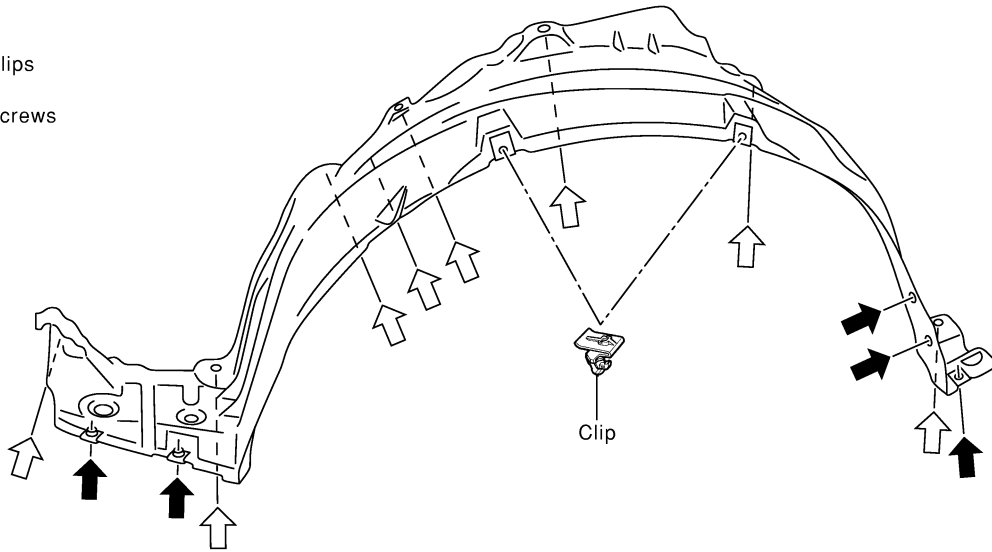

MIIA0006E


DOOR OUTSIDE MOLDING

DOOR OUTSIDE MOLDING

PFP:82820

Removal and Installation

EIS002H8

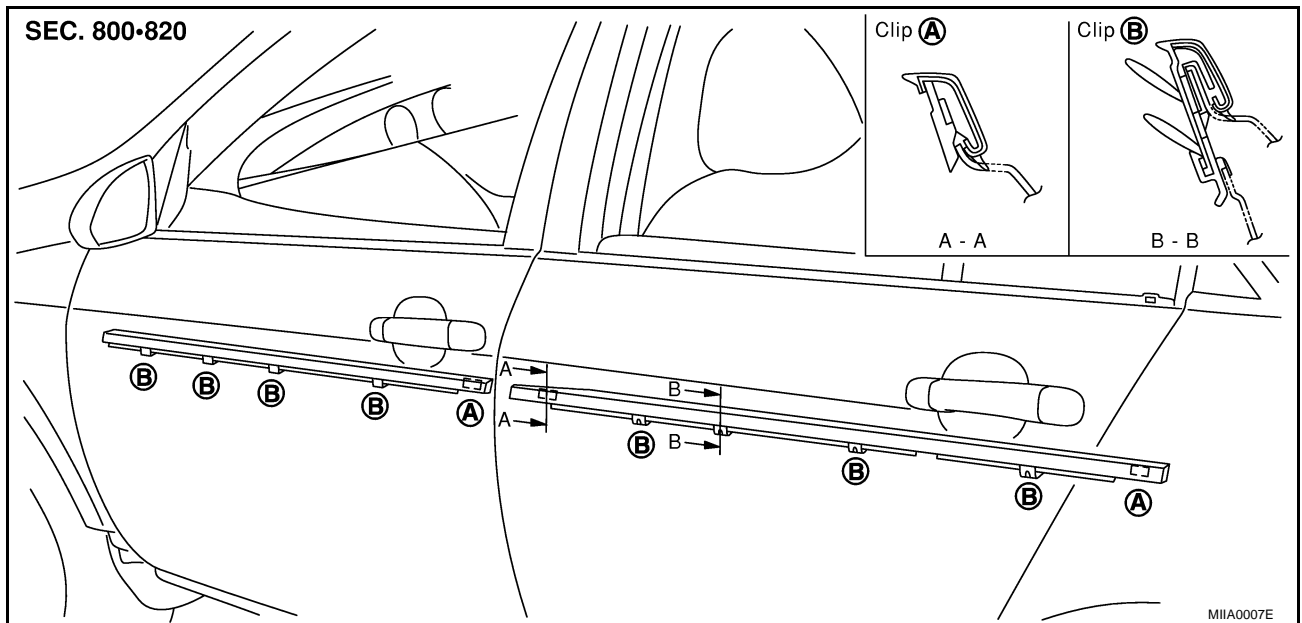

REMOVAL

Front

1. Roll the front door window all the way up.
2. Remove front door finisher. Refer to [EI-22, "DOOR FINISHER"](#).
3. Remove corner cover and door mirror. Refer to [GW-66, "Removal and Installation"](#).
4. Disengage front door outside molding tab (1).
5. Reaching from inner side of door, use a clip clamp tool to disengage front door outside molding from the tab.

Rear

1. Roll the rear door window all the way up.
2. Remove rear door finisher. Refer to [EI-22, "DOOR FINISHER"](#).
3. Disengage rear door outside mold tabs (2).
4. Reaching from inner side of door, use a clip clamp tool to disengage rear door outside molding from the tab.

INSTALLATION

To install, press molding into the outer panel flange and engage the tabs.

REAR FENDER FINISHER

REAR FENDER FINISHER


PFP:78126

Removal and Installation

EIS002H9

REMOVAL

1. Insert a screwdriver, wrapped with a cloth, into the front edge of rear fender finisher. Unfasten the clips.

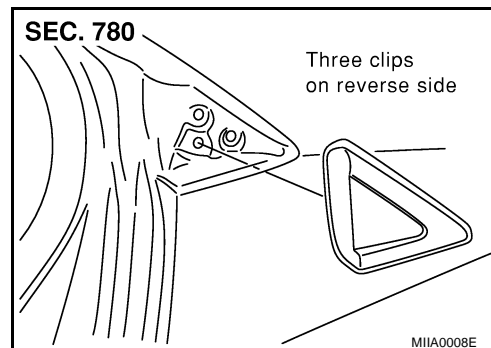

INSTALLATION

Install in the reverse order of removal.

REAR DOOR OUTSIDE FINISHER

REAR DOOR OUTSIDE FINISHER


PFP:82290

Removal and Installation

EIS002HA

REMOVAL

1. Remove installation screws from reverse side of weatherstrip.
2. Cut off a double-faced adhesive tape, then remove rear door outside finisher.

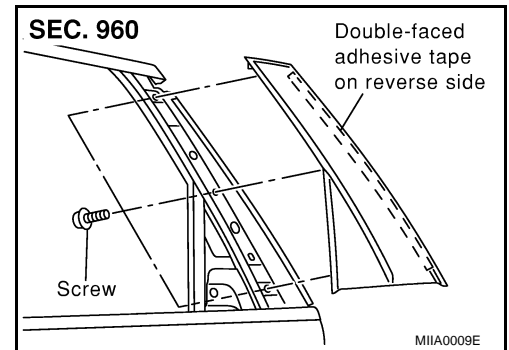

INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

EI

J

K

L

M


CENTER MUD GUARD

CENTER MUD GUARD

PFP:76850

Removal and Installation

EIS002HK

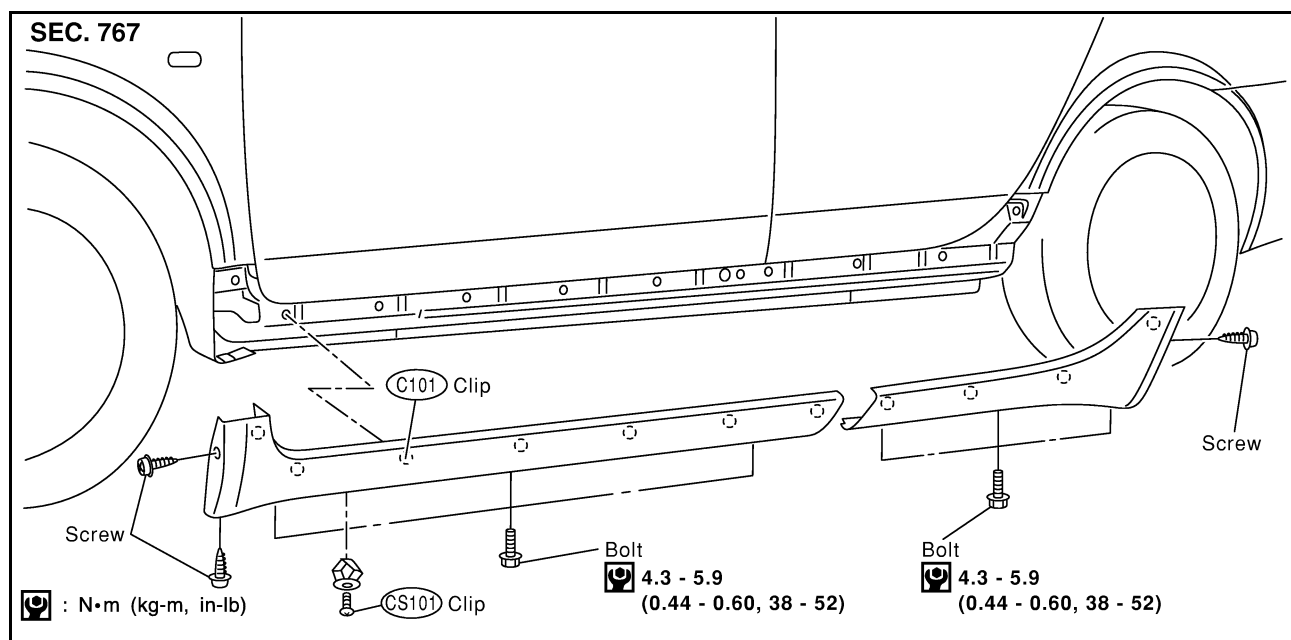

REMOVAL

1. Remove installation screws and bolts.
2. Unfasten clips on the reverse side of center mud guard.
3. Remove center mud guard.

INSTALLATION

Install in the reverse order of removal.

ROOF SIDE MOLDING

ROOF SIDE MOLDING


PFP:73854

Removal and Installation


EIS0021E

SEC. 730

Sedan

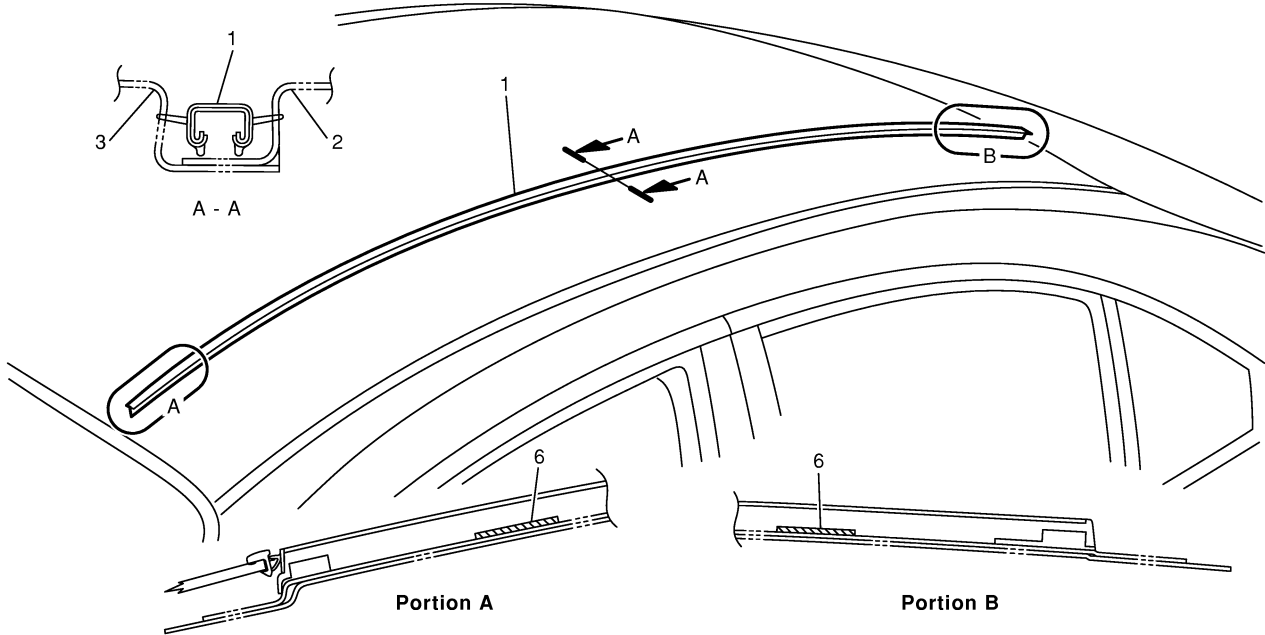

Wagon

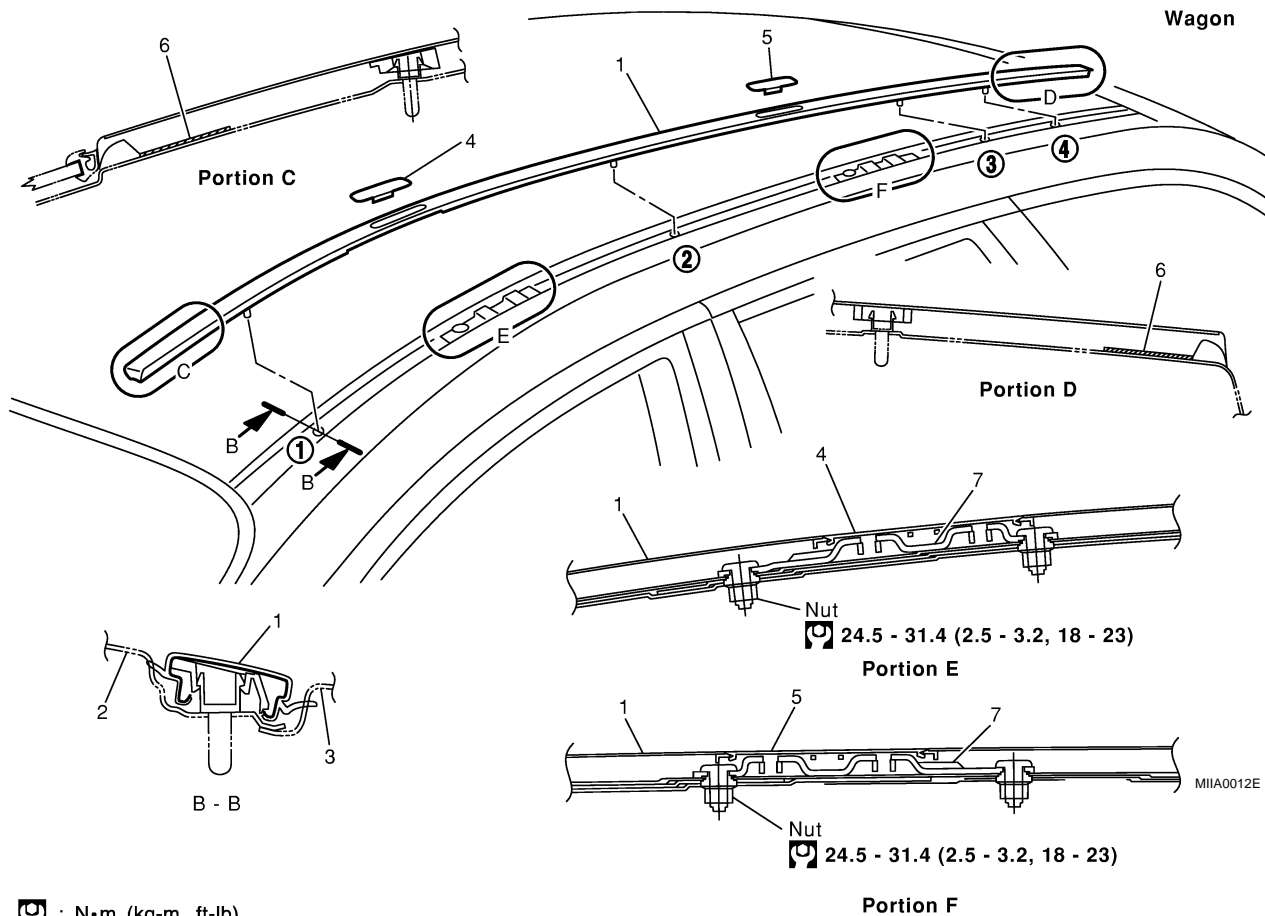

: N•m (kg-m, ft-lb)

MIIA0012E

ROOF SIDE MOLDING

- | | | |
|----------------------|---------------|-------------------------------|
| 1. Roof side molding | 2. Roof panel | 3. Body side outer panel |
| 4. Front cap | 5. Rear cap | 6. Double-faced adhesive tape |
| 7. Roof side bracket | | |

REMOVAL

Sedan Models

1. Cut off the sealant and double-faced adhesive tape from the end of roof side molding using a plastic squeezer or equivalent. Remove roof side molding.

Wagon Models

1. Cut off the double-faced adhesive tape from the end of roof side molding using a resin squeezer or equivalent.
2. Pull roof side molding upwards and disconnect clips. Remove roof side molding.

INSTALLATION

Sedan Models

Make sure to perform installation as follows:

- Apply primer (Genuine Nissan Urethane Adhesive Kit or equivalent) on areas where double-faced adhesive tape contacts the vehicle body.

Wagon Models

Make sure to perform installation as follows:

- Apply primer (Genuine Nissan Urethane Adhesive Kit or equivalent) on areas where double-faced adhesive tape contacts the vehicle body.

LICENSE PLATE FINISHER

PFP:84810

Removal and Installation


EIS002HM

SEC. 843

Sedan

Nut
4.3 - 5.9 (0.44 - 0.60, 38 - 52)


Reverse side

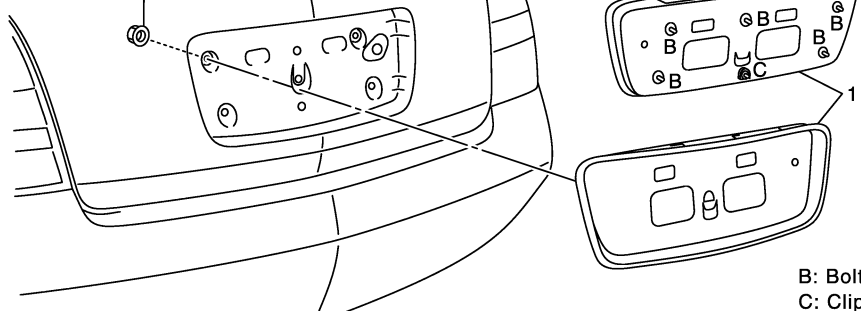

Wagon


Nut
4.3 - 5.9 (0.44 - 0.60, 38 - 52)

Reverse side

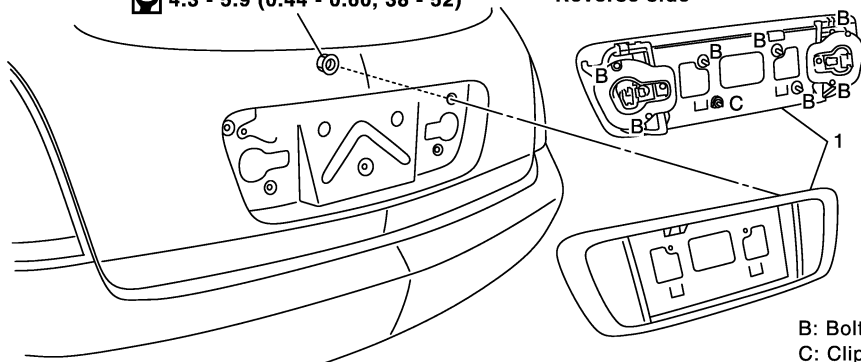

Hatchback

Nut
4.3 - 5.9 (0.44 - 0.60, 38 - 52)

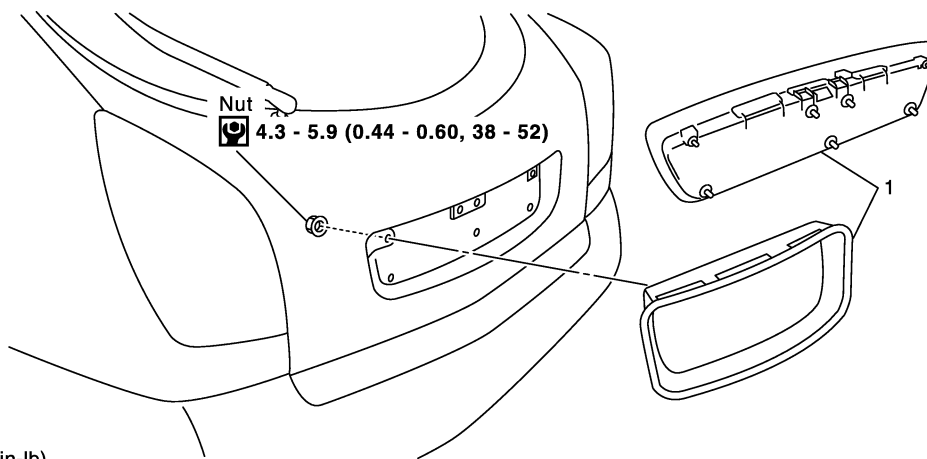

: N•m (kg-m, in-lb)

MIIB0006E

1. License plate finisher

REMOVAL

1. Remove trunk lid finisher or back door finisher. Refer to [EI-24, "BACK DOOR TRIM"](#).
2. Remove installation clips and nuts. Then remove license plate finisher.

INSTALLATION

Install in the reverse order of removal.

DOOR FINISHER



PFP:80900

EIS0021F


DOOR FINISHER

Removal and Installation


SEC. 805-809-825-829

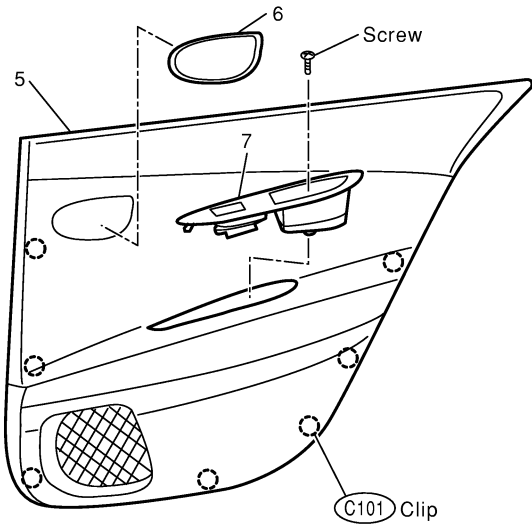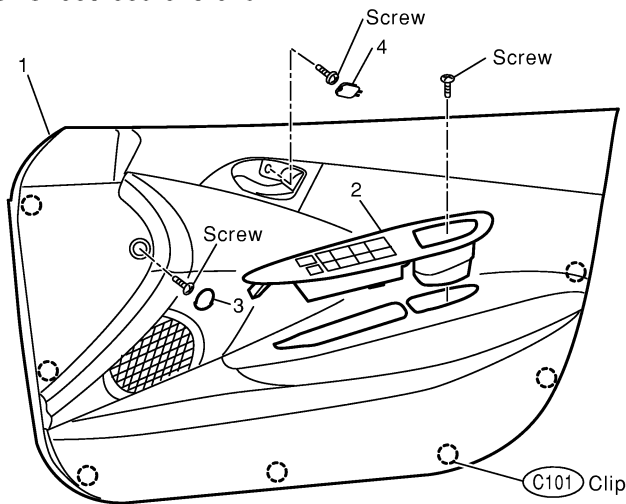

Power window switch finisher

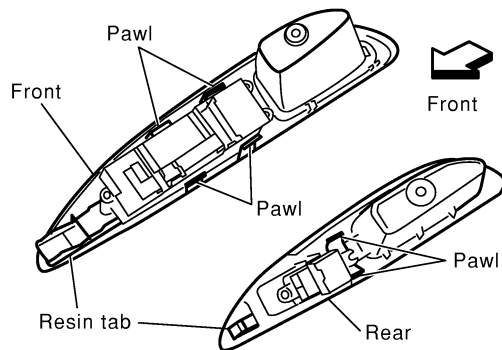

Rear door inside handle escutcheon

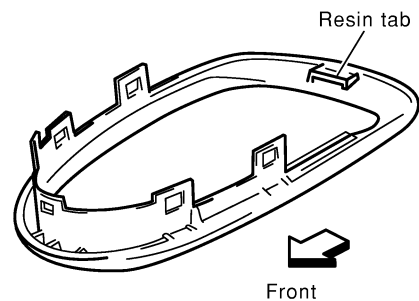


MIIA0015E

- | | | |
|---|--|-----------------------------|
| 1. Front door finisher | 2. Power window switch finisher (Front door) | 3. Cap |
| 4. Mask | 5. Rear door finisher | 6. Inside handle escutcheon |
| 7. Power window switch finisher (Rear door) | | |

REMOVAL

Front

1. Remove door finisher cap and inside handle mask. Remove screws.
2. Remove installation screw from power window switch finisher.
3. Insert a screwdriver, wrapped with a cloth, into the cutout on the lower part of finisher. Unfasten the clips.
4. Pull the door finisher upwards to remove.
5. Insert a screwdriver, wrapped with a shop cloth, into door trim on the inside handle escutcheon. Disengage the tabs on the front upper side (2) and lower side (2). Slide rearwards to remove.
6. Remove installation screws (3). Then remove inside handle.

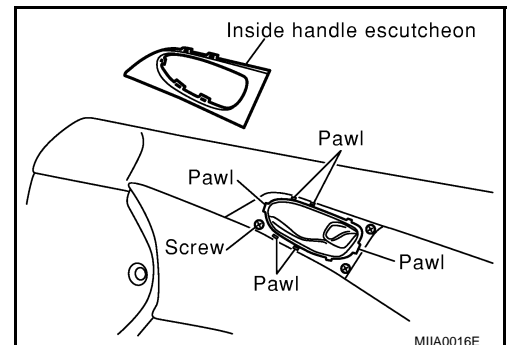


MIIA0016E

DOOR FINISHER


NOTE:

- Insert a clip driver or clip clamp remover into the part shown by the arrow (between the body side panel and the clips). Remove finisher.
- To install the finisher, confirm clips are surely aligned with the holes on the body side panel, then press in.

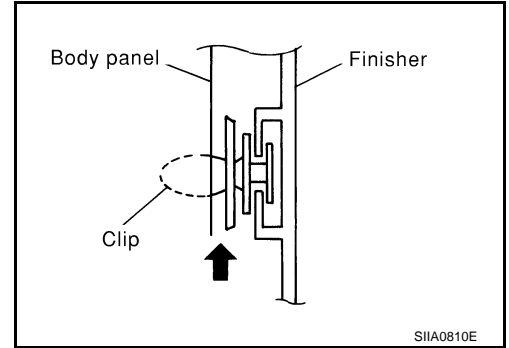

Rear


1. Insert a screwdriver, wrapped with a cloth, into the gap and remove inside handle escutcheon rear side pawl. Disengage the tabs on the front, upper side (2) and lower side (2). Remove inside handle escutcheon.

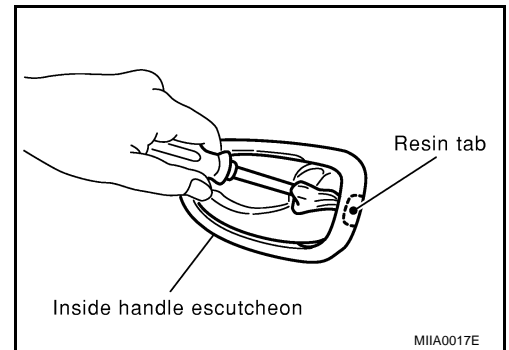

2. Remove installation screw from power window switch finisher.
3. Insert a screwdriver, wrapped with a cloth, into the cutout on the lower part of finisher. Unfasten the clips.
4. Pull the door finisher upwards to remove.

NOTE:

- Insert a clip driver or clip clamp remover into the part shown by the arrow (between the body side panel and the clips). Remove finisher.
- To install the finisher, confirm clips are surely aligned with the holes on the body side panel, then press in.

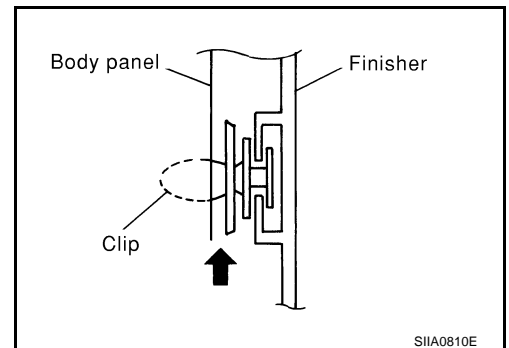

INSTALLATION

Install in the reverse order of removal.


BACK DOOR TRIM

BACK DOOR TRIM

PFP:90900

Removal and Installation (Wagon Models)

EIS0021G

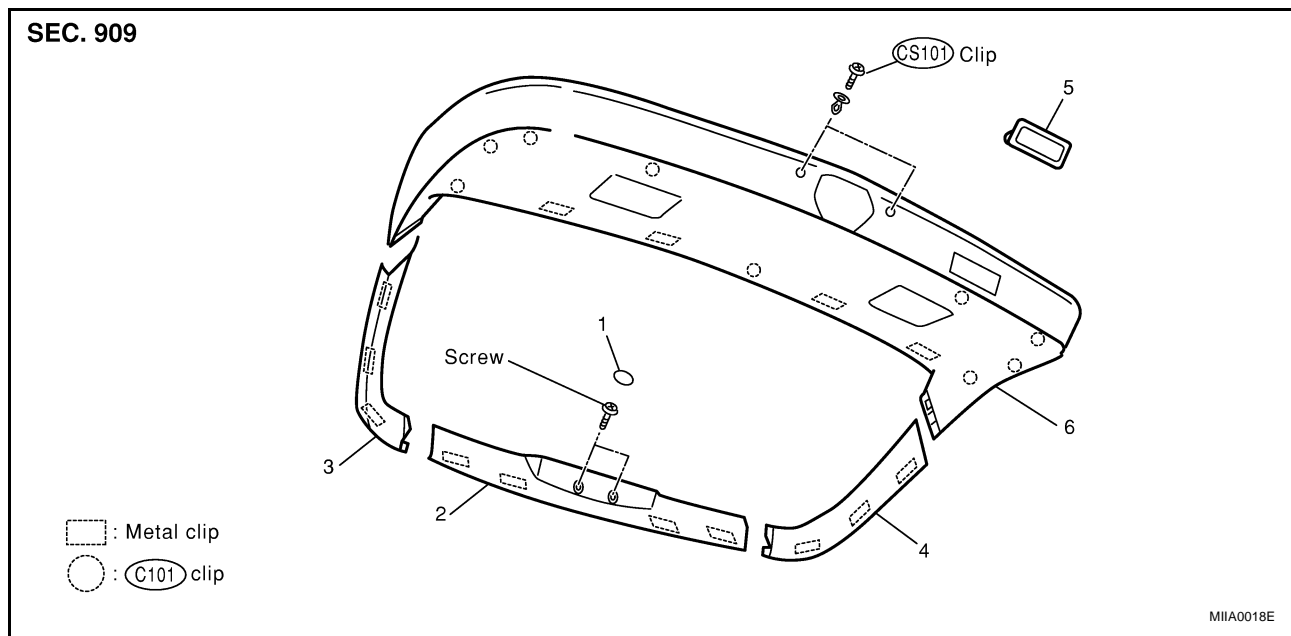

REMOVAL


1. Remove cap of back door upper garnish. Then remove installation screws.
2. Remove back door upper garnish.
3. Remove RH/LH back door side garnish.
4. Remove pull handle.
5. Remove installation screws. Then remove back door finisher.

INSTALLATION

Install in the reverse order of removal.

NOTE:


- Insert a clip driver or clip clamp remover into the part shown by the arrow (between the clips and the body side panel). Remove clips.
- When installing, confirm clips are surely aligned with the holes on the body side panel, then press in.

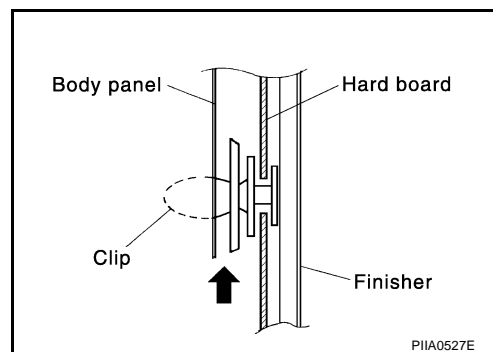

BACK DOOR TRIM

Removal and Installation (Hatchback Models)

EIS003AC

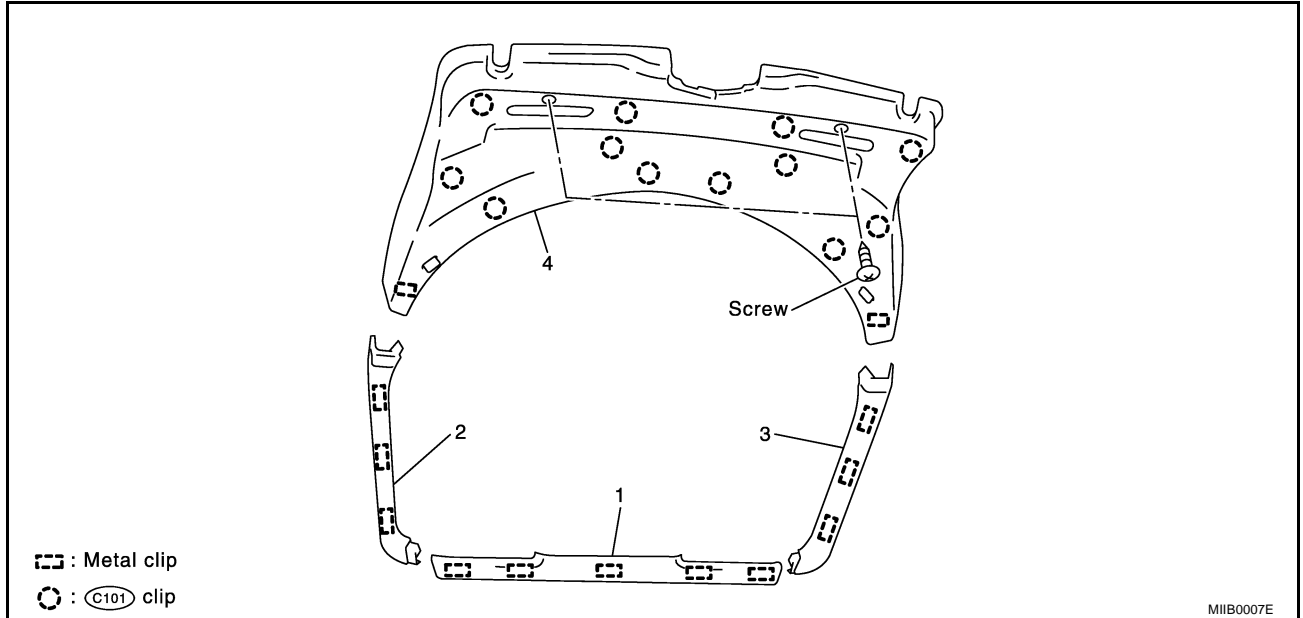

1. Back door upper garnish
2. Back door side garnish (LH)
3. Back door side garnish (RH)
4. Back door finisher

REMOVAL


1. Remove back door upper garnish.
2. Remove RH/LH back door side garnish.
3. Remove installation screws. Then remove back door finisher.

INSTALLATION

Install in the reverse order of removal.

NOTE:

- Insert a clip driver or clip clamp remover into the part shown by the arrow (between the clips and the body side panel). Remove clips.
- When installing, confirm clips are surely aligned with the holes on the body side panel, then press in.

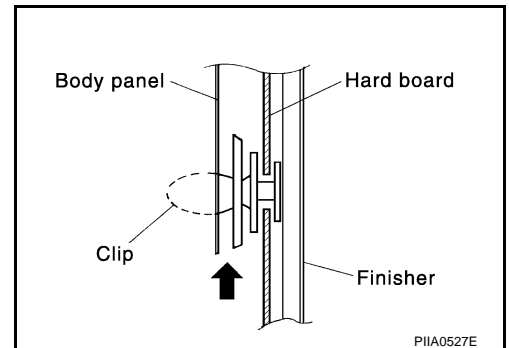


BODY SIDE TRIM

PFP:76913

Removal and Installation

EIS0021H

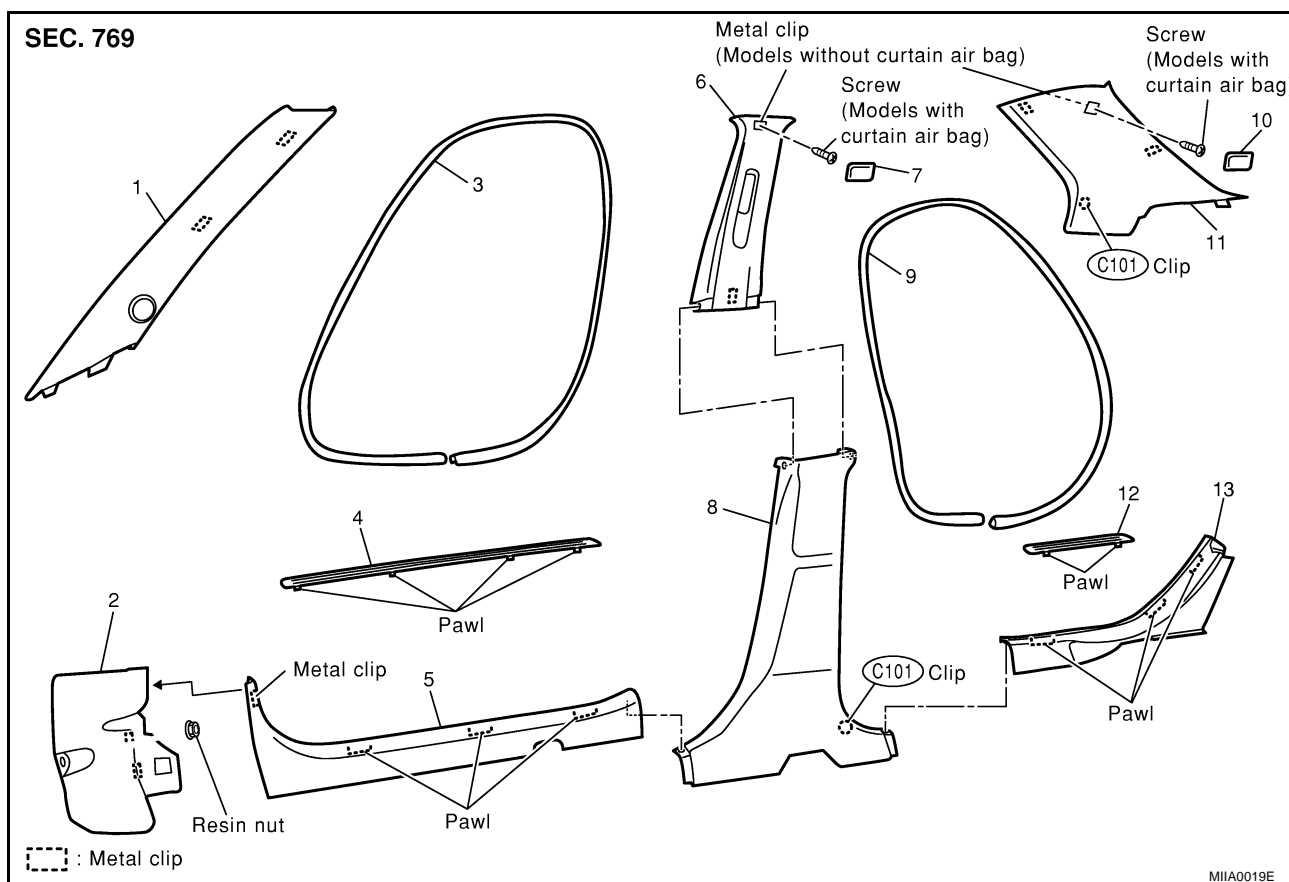


REMOVAL

Front Pillar Garnish

1. Remove front body side welt.
2. Remove front pillar garnish.

Center Pillar Lower Garnish

1. Remove front and rear body side welt.
2. Remove front and rear kick panels.
3. Remove center pillar lower garnish.

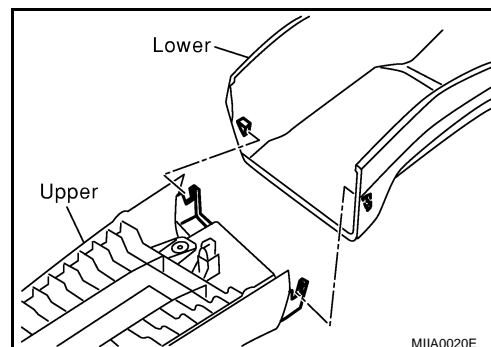

BODY SIDE TRIM

Center Pillar Upper Garnish

1. Remove center pillar lower garnish.
2. Remove front seat belt shoulder anchor. Refer to [SB-3, "Removal and Installation of Front Seat Belt"](#).
3. Remove center pillar cap. Then installation screw. (With curtain air bag models)
4. Remove center pillar upper garnish.

Rear Pillar Finisher

1. Remove rear body side welt.
2. Remove rear pillar cap. Then installation screw. (With curtain air bag models)
3. Remove rear pillar finisher.

Dashboard Side Finisher

1. Remove front kick panel.
2. Remove front body side welt.
3. Remove resin nut.
4. Remove dashboard side finisher.

Body Side Welt


1. Remove front and rear kick panels.
2. Remove center pillar lower garnish.
3. Remove center pillar upper garnish.

INSTALLATION

Install in the reverse order of removal.

NOTE:

- Insert a screwdriver, wrapped with a shop cloth, into the part shown by an arrow (between the body side panel and clips). Remove clips.
- When installing, confirm clips are aligned with the body side panel holes, and then press in.

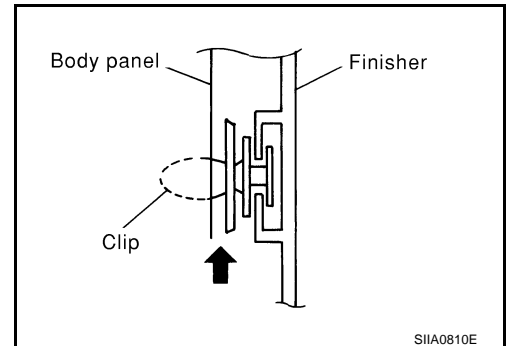


BODY SIDE TRIM

Removal and Installation (Wagon Models)

EIS00211

SEC. 849

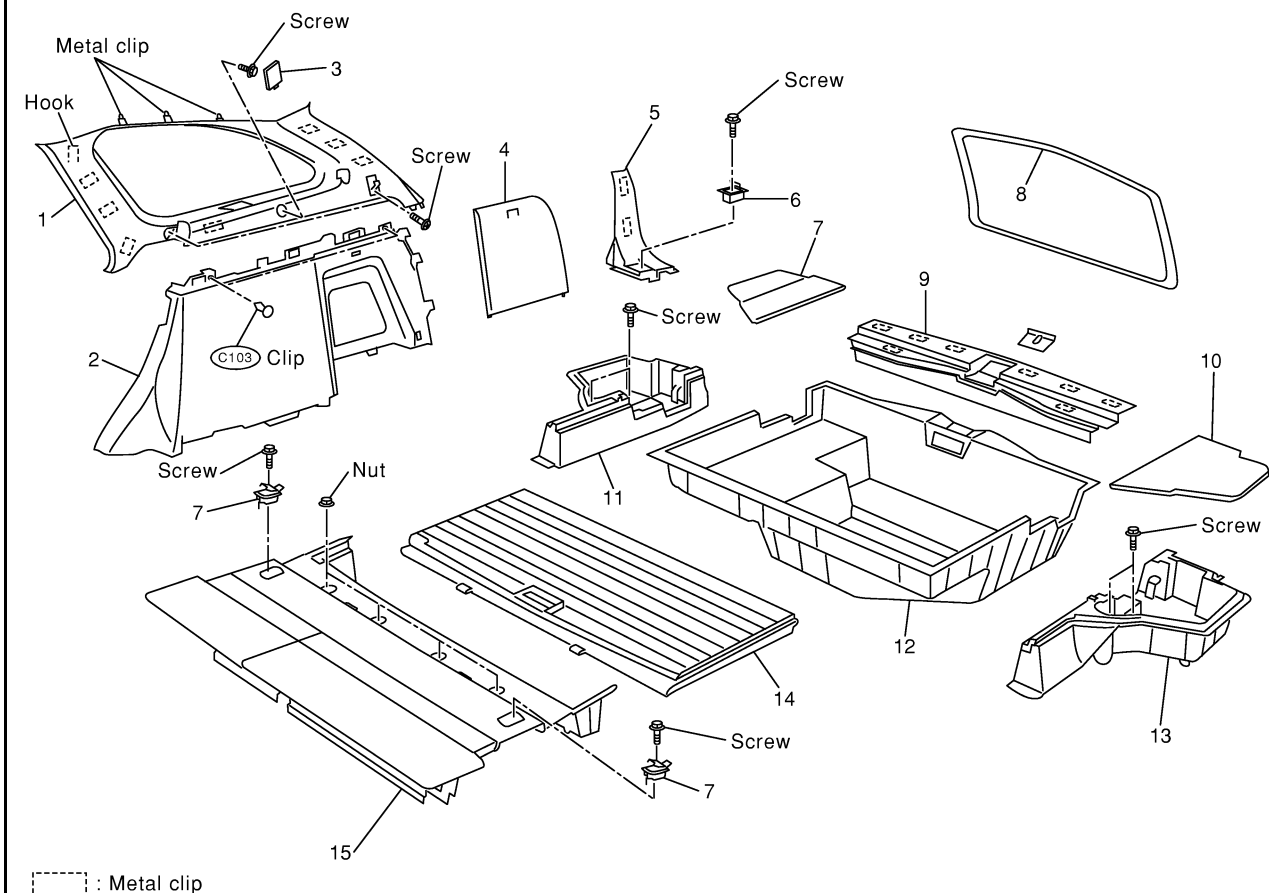

- | | | |
|------------------------------------|--|---|
| 1. Luggage side upper finisher | 2. Luggage side lower finisher | 3. Luggage trim cap |
| 4. Luggage side lid | 5. Tail gate kick panel | 6. Rope hook |
| 7. Luggage floor finisher (RH) | 8. Back door weatherstrip | 9. Luggage rear spacer |
| 10. Luggage floor finisher (LH) | 11. Luggage floor side spacer (RH) | 12. Luggage floor box |
| 13. Luggage floor side spacer (LH) | 14. Luggage floor center rear finisher | 15. Luggage floor center front finisher |


REMOVAL

Luggage Side Upper Finisher

1. Remove luggage floor center rear finisher and luggage floor box.
2. Remove back door weatherstrip.
3. Remove luggage rear spacer.
4. Remove rope hook and tail gate kick panel.
5. Remove luggage trim cap. Then remove screw.


BODY SIDE TRIM

6. Remove luggage side upper finisher.

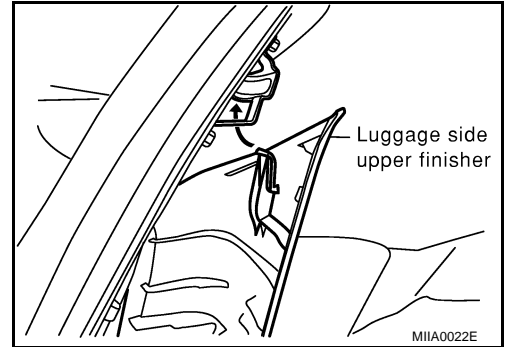


Luggage Side Lower Finisher

1. Remove luggage side upper finisher.
2. Remove luggage side lid.
3. Remove rear kick panel (Inner).
4. Remove clips from the upper of luggage side lower finisher, and lift upwards to remove.

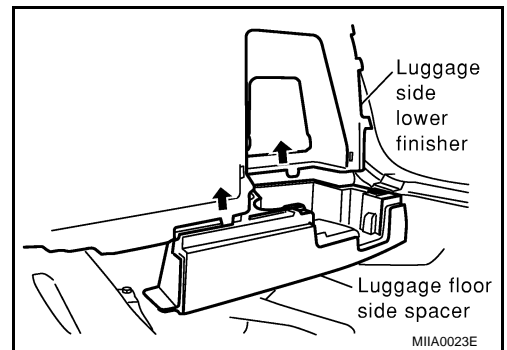

Luggage Floor Center Front Finisher

1. Remove luggage side lower finisher.
2. Remove installation screw from luggage floor side spacer. Then pull luggage floor side spacer rearwards to remove.

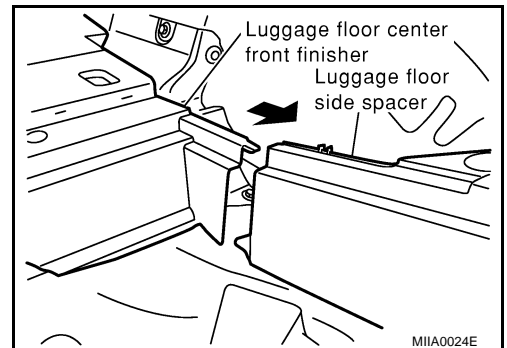


3. Remove rope hook. Pull luggage floor center front finisher upwards to remove.

INSTALLATION

Install in the reverse order of removal.

NOTE:


- Insert a clip driver or clip clamp remover into the part shown by the arrow (between the clips and the body side panel). Remove clips.
- When installing, confirm clips are surely aligned with the holes on the body side panel, then press in.

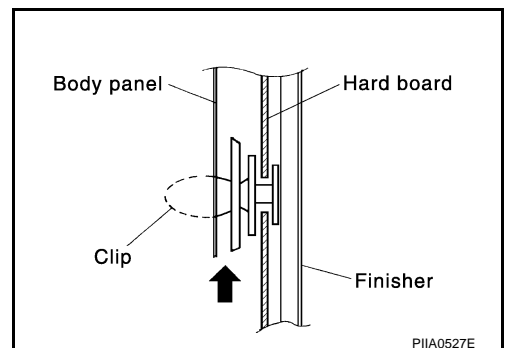

BODY SIDE TRIM

Removal and Installation (Hatchback Models)

EIS003AD

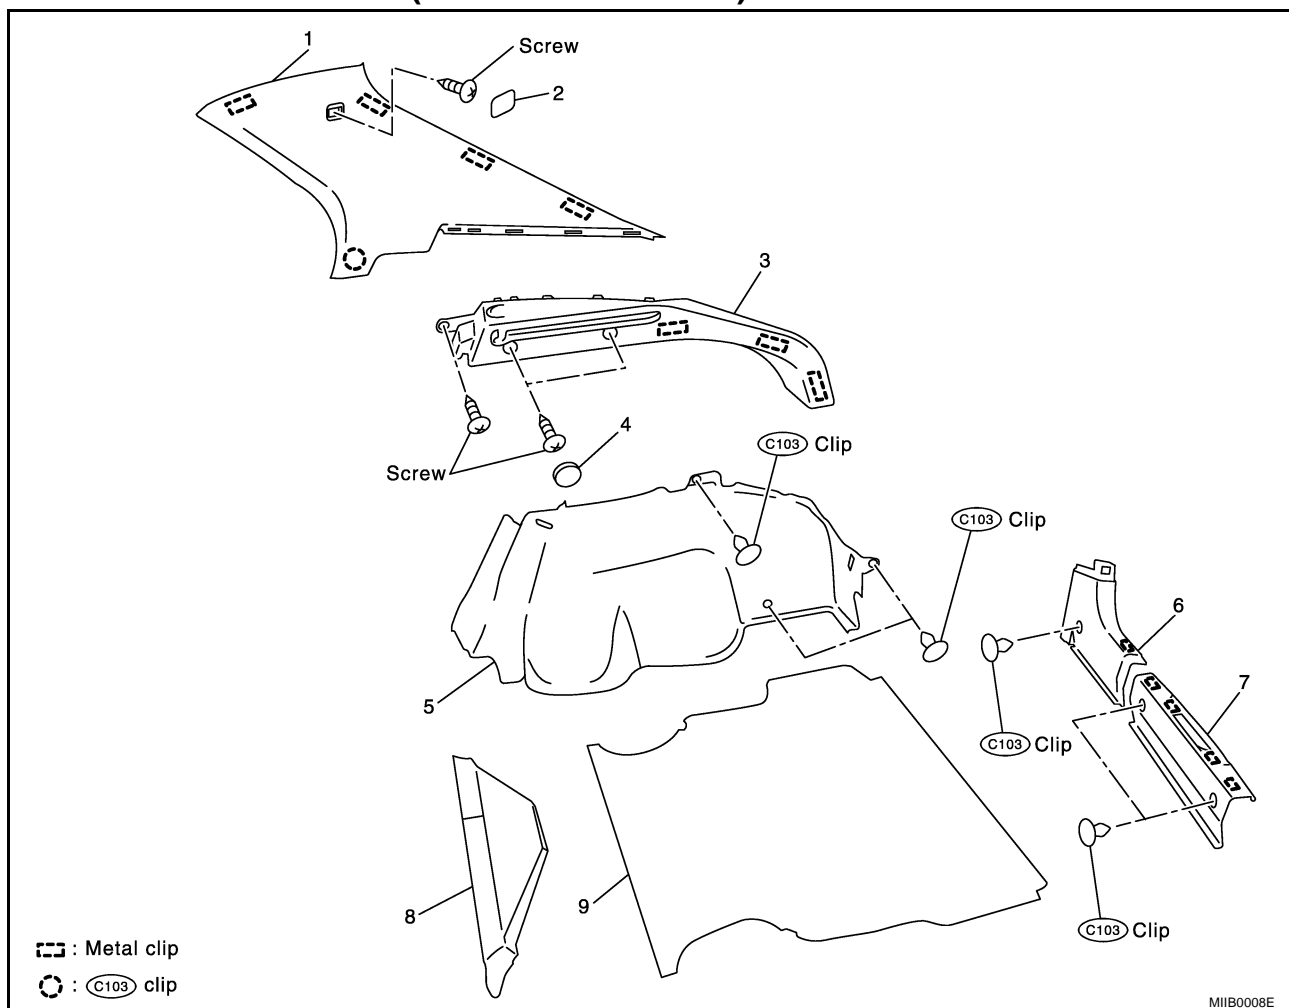

- | | | |
|---------------------------------------|--------------------------------|------------------------------------|
| 1. Rear pillar finisher | 2. Rear pillar cap | 3. Rear pillar/shelf side finisher |
| 4. Rear pillar/shelf side cap | 5. Luggage side lower finisher | 6. Luggage rear upper finisher |
| 7. Luggage rear upper center finisher | 8. Luggage front spacer | 9. Luggage floor finisher |

REMOVAL

Rear Pillar Finisher

1. Remove rear body side welt.
2. Remove back door weatherstrip.
3. Remove rear pillar cap. Then remove installation screw.
4. Remove rear pillar finisher.

Rear Pillar/Shelf Side Finisher

1. Remove rear pillar/shelf side cap. Then remove installation screw.
2. Remove pillar/shelf side finisher.

LUGGAGE SIDE LOWER FINISHER

1. Remove rear pillar finisher.
2. Remove luggage side lower finisher.

LUGGAGE REAR UPPER FINISHER

1. Remove back door weatherstrip.
2. Remove rear upper finisher.
3. Remove rope hook. Pull luggage floor center front finisher upwards to remove.


BODY SIDE TRIM

INSTALLATION

Install in the reverse order of removal.

NOTE:

- Insert a clip driver or clip clamp remover into the part shown by the arrow (between the clips and the body side panel). Remove clips.
- When installing, confirm clips are surely aligned with the holes on the body side panel, then press in.

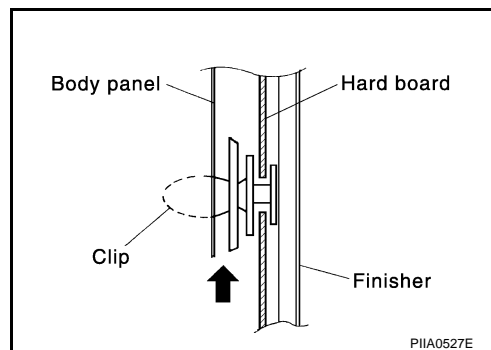

A

B

C

D

E

F

G

H

EI

J

K

L

M


REAR PARCEL SHELF FINISHER

REAR PARCEL SHELF FINISHER

PFP:79910

Removal and Installation

EIS002HH

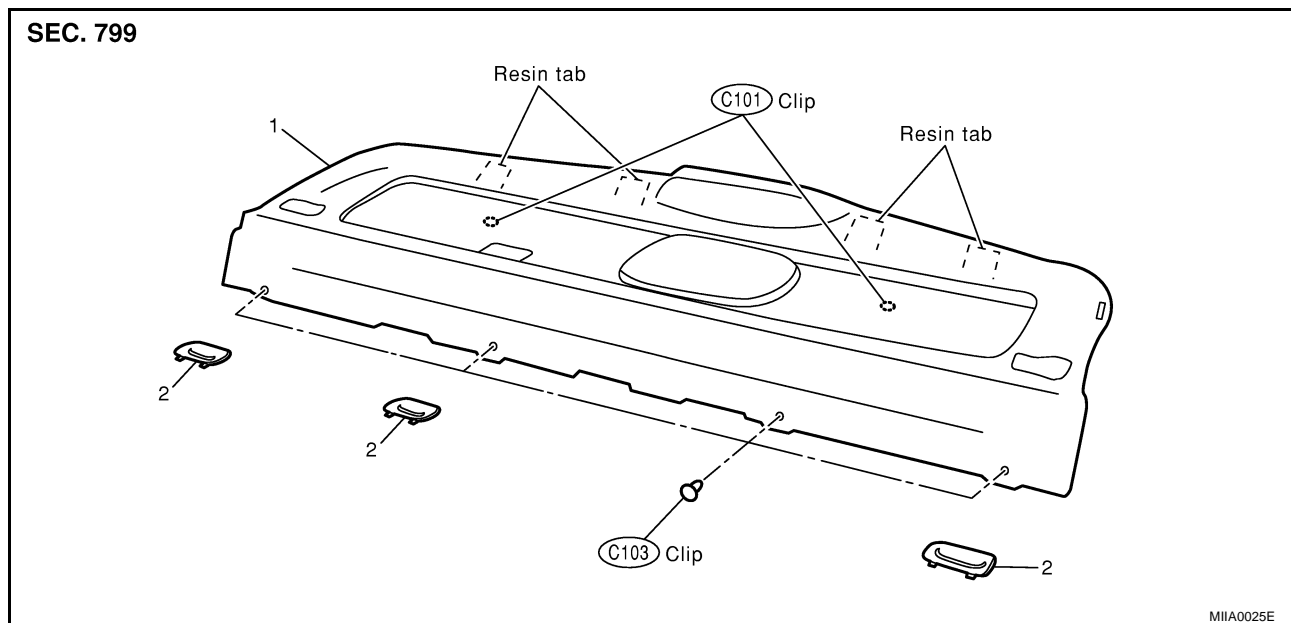


1. Rear parcel shelf finisher

2. Seat belt escutcheon

REMOVAL

1. Remove rear seat. Refer to [SE-17, "Removal and Installation"](#).
2. Remove rear pillar finisher.
3. Remove rear seat belt anchor bolt. Refer to [SB-4, "Removal and Installation of Rear Seat Belt"](#).
4. Remove RH/LH seat belt escutcheon.

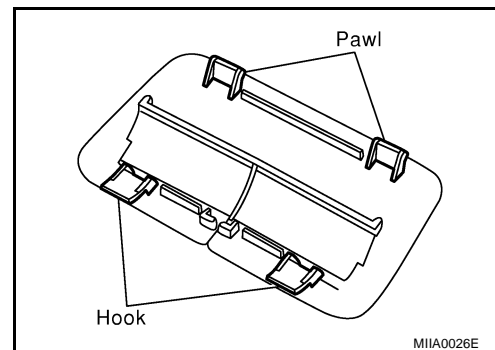

5. Remove high-mounted stop lamp connector from trunk room side.
6. Remove clips from the forward surface.
7. Remove clips from the reverse surface of rear parcel shelf finisher, and lift upwards to remove.


INSTALLATION

Install in the reverse order of removal.

REAR PARCEL SHELF FINISHER

NOTE:

- Insert a clip driver or clip clamp remover into the part shown by the arrow (between the clips and the body side panel). Remove clips.
- When installing, confirm clips are surely aligned with the holes on the body side panel, then press in.

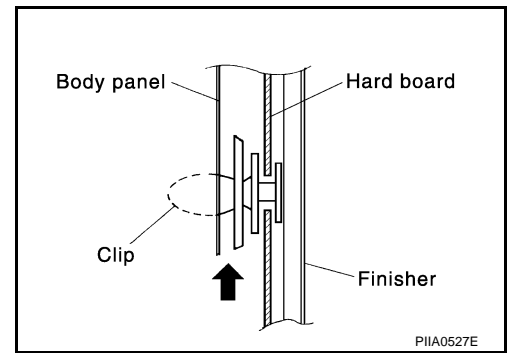

A

B

C

D

E

F

G

H

EI

J

K

L

M


FLOOR TRIM

FLOOR TRIM

PFP:74902

Removal and Installation

EIS002HI

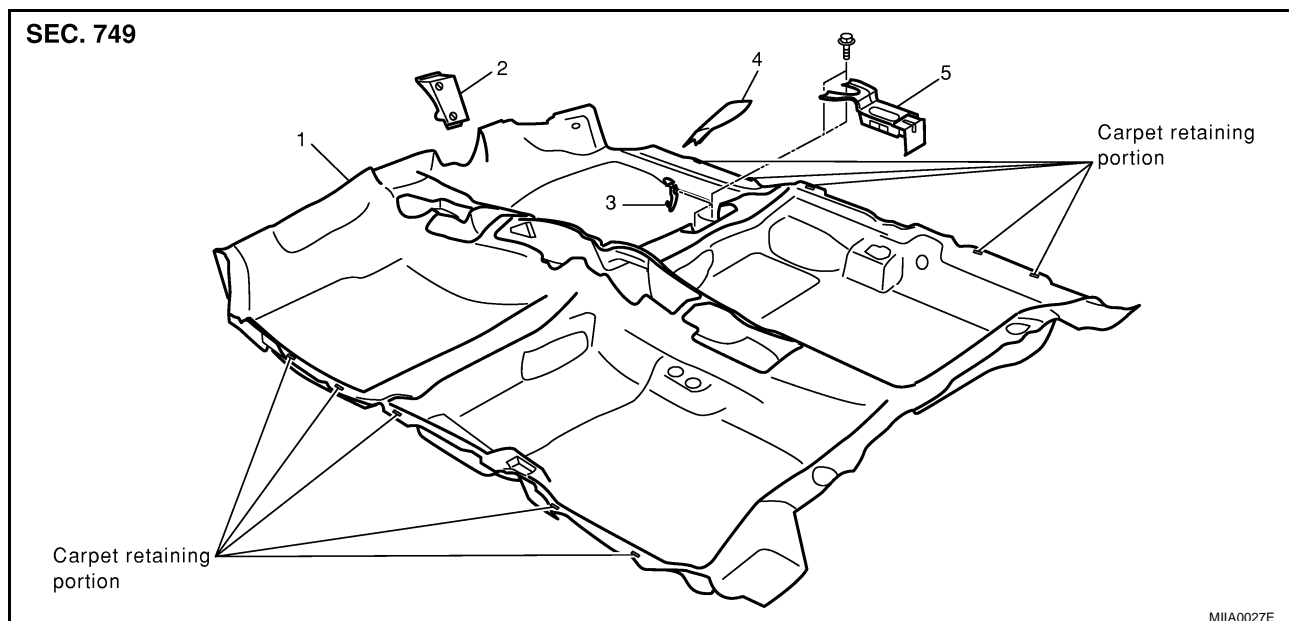


REMOVAL

1. Remove front seat and rear seat cushions. Refer to [SE-12, "Removal and Installation"](#) in the front seat section, and to [SE-17, "Removal and Installation"](#) in the rear seat section.
2. Remove center console.
3. Remove lower instrument cover.
4. Remove front floor console.
5. Remove floor anchor bolt of front seat belt. Refer to [SB-3, "Removal and Installation of Front Seat Belt"](#).
6. Remove front and rear kick panels. (Inner)
7. Remove center pillar lower garnish.
8. Remove front and rear body-side welts.
9. Remove the dashboard side finisher.
10. Remove resin screws to rotate counterclockwise. Remove foot-rest.

NOTE:

Installation: Plug in stud bolts on the body side.

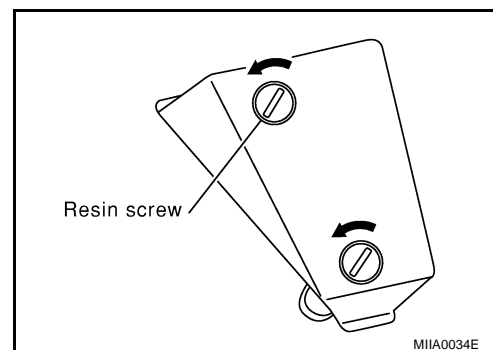

11. Remove carpet hooks and clips.
12. Remove carpet from the carpet anchor clips.
13. Remove floor carpet.

NOTE:

- For steps 2-4, refer to [IP-3, "Component Parts Drawing"](#).
- For steps 6-9, refer to [EI-26, "BODY SIDE TRIM"](#).

FLOOR TRIM

INSTALLATION

Install in the reverse order of removal.

- A
- B
- C
- D
- E
- F
- G
- H
- EI**
- J
- K
- L
- M


HEADLINING

PFP:73910

Removal and Installation

EIS0021J

SEC. 251•264•738•963•964

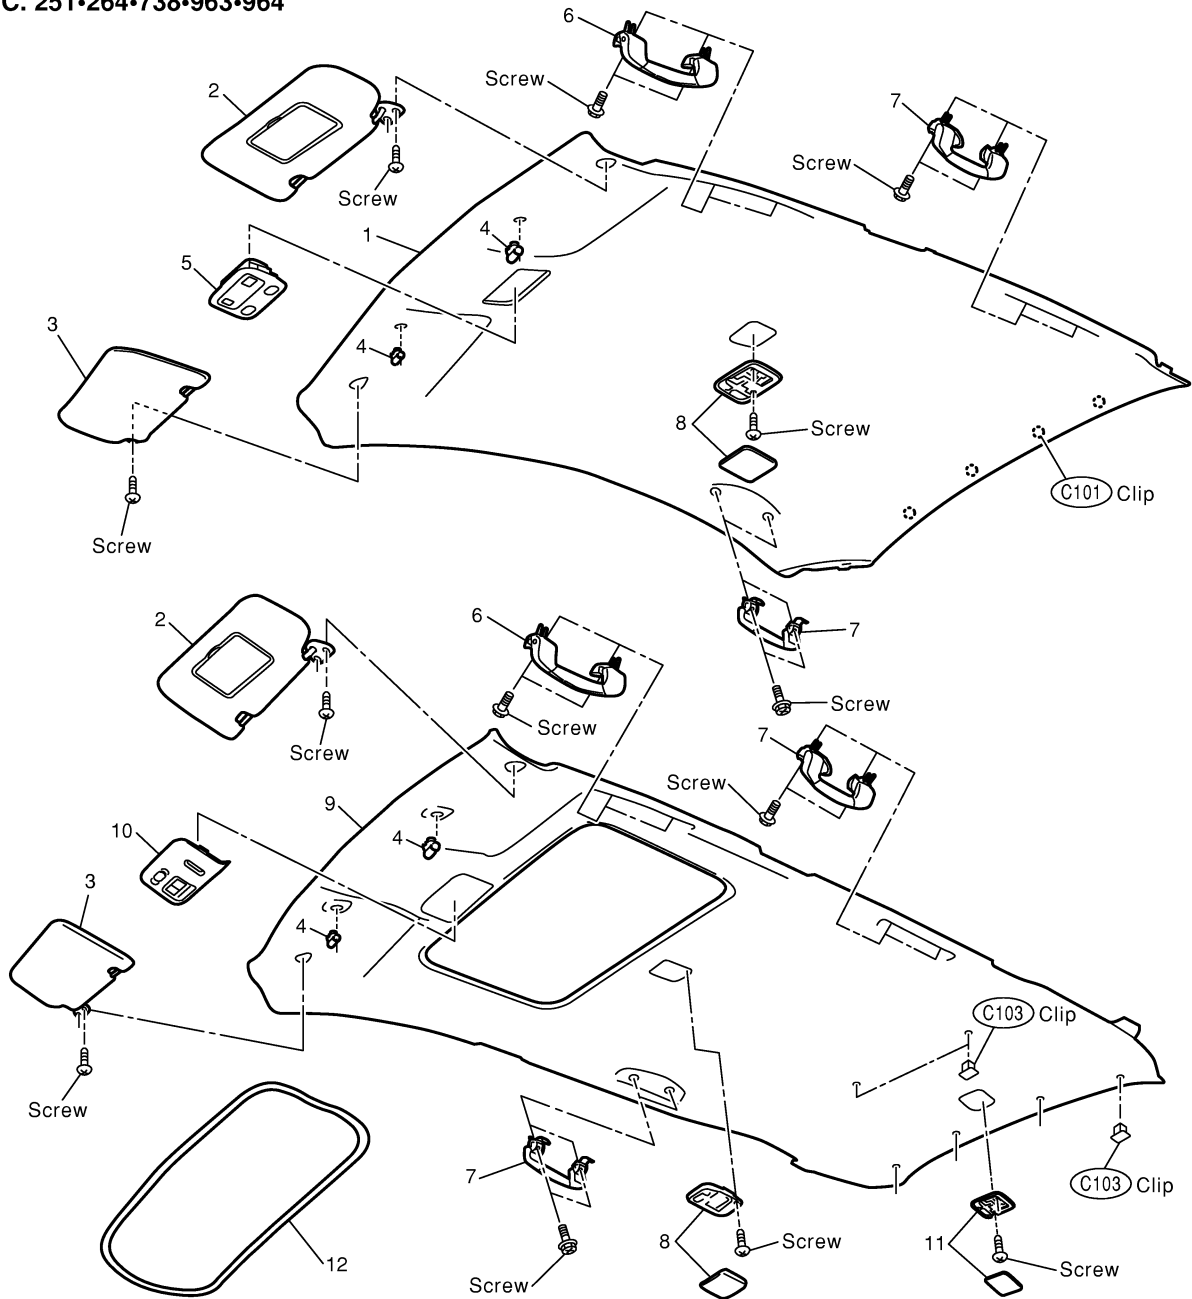

M11A0028E

- | | | |
|-----------------------------------|------------------------------|--|
| 1. Headliner (Sedan & Hatch-back) | 2. Sun visor (left) | 3. Sun visor (right) |
| 4. Sun visor holder | 5. Map lamp | 6. Assistance grip (Front) |
| 7. Assistance grip (Rear) | 8. Interior lamp | 9. Headliner (Wagon) |
| 10. Sunroof switch and map lamp | 11. Luggage compartment lamp | 12. Sunroof welt (With sunroof models) |

REMOVAL

Sedan Models


1. Remove front pillar and center pillar garnishes. Refer to [EI-26, "BODY SIDE TRIM"](#).
2. Remove body side welt. Refer to [EI-26, "BODY SIDE TRIM"](#).
3. Remove rear pillar finisher. Refer to [EI-26, "BODY SIDE TRIM"](#).

HEADLINING

4. Remove assistance grip.

NOTE:

Insert the screwdriver into the cutout and remove screws (1 each on left/right).

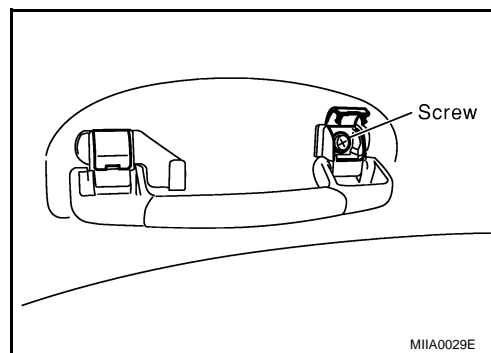

5. Remove map lamp, interior lamp, and luggage compartment lamp. Refer to [LT-102, "INTERIOR ROOM LAMP"](#), [LT-122, "SPOT, VANITY MIRROR AND TRUNK \(LUGGAGE\) ROOM LAMPS"](#).


6. Remove sun visors (driver side and passenger side).

7. Remove headliner rear clips.

8. Remove sun visor holder.

NOTE:


Insert a screwdriver into the cutout and rotate 90° to remove.

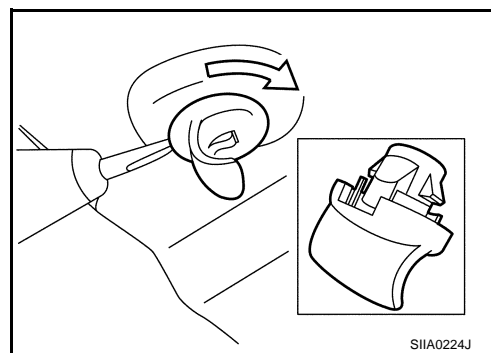


9. Slide headliner rearward. Remove clips. (Sedan models)

NOTE:

- If the headliner is removed with clips intact, it will crease because of the clips on the body panel side.

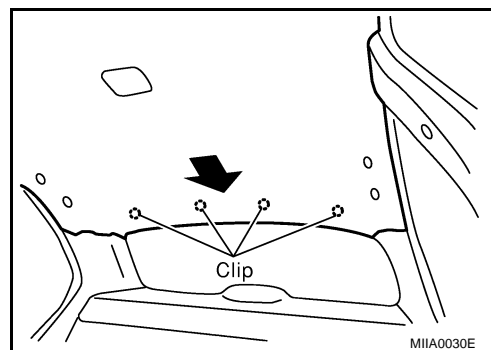

10. Remove headliner through the front passenger door opening. (Sedan models)

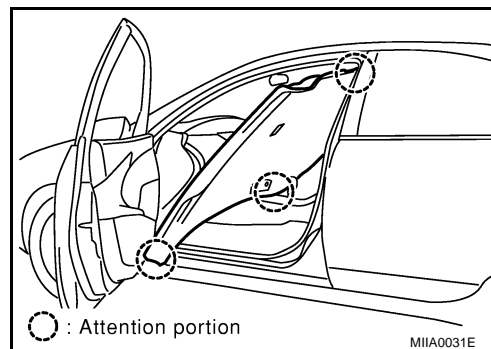

11. Remove installation clips from rear portion of headliner. (Wagon models)

HEADLINING

12. Remove headliner through the back door opening. (Wagon models)

NOTE:

- Removal and installation must be performed by 2 persons.
- Do not strongly bend the headliner.

INSTALLATION

Install in the reverse order of removal.

Remove the clips on the body panel, and install the headliner.

TRUNK ROOM TRIM AND TRUNK LID TRIM

TRUNK ROOM TRIM AND TRUNK LID TRIM


PFP:84900

Removal and Installation


EIS002HN

A
B
C
D
E
F
G
H
EI
J
K
L
M

SEC. 849

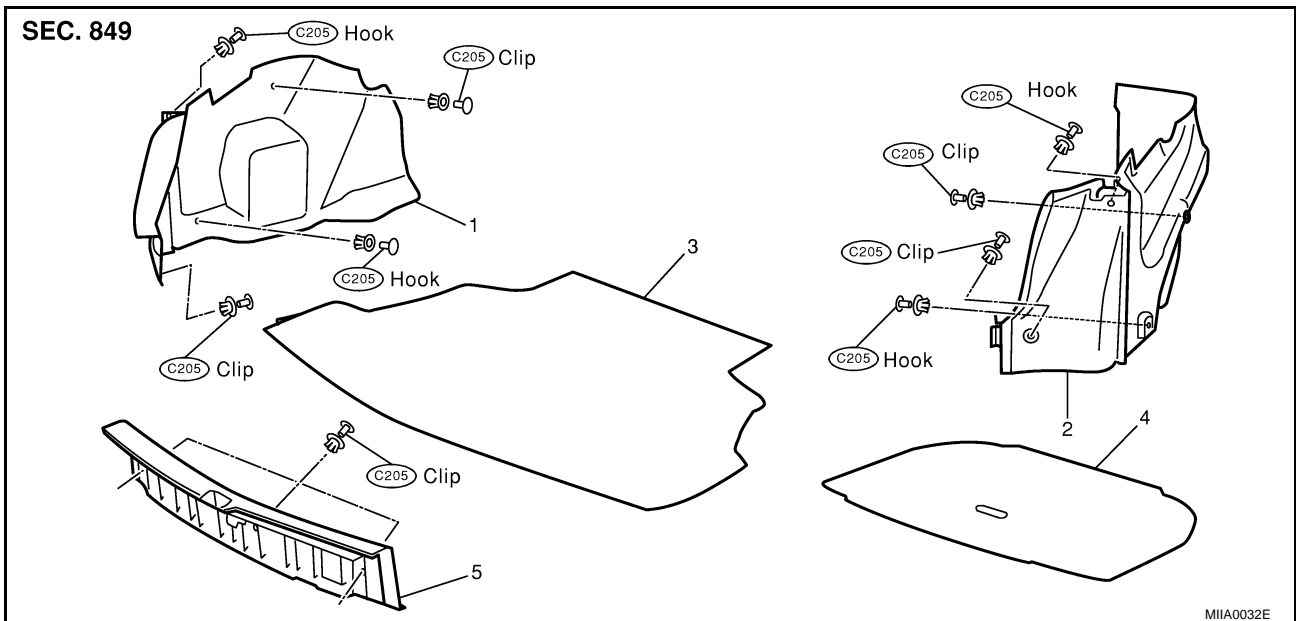

1. Rear wheel house finisher (LH)
2. Rear wheel house finisher (RH)
3. Trunk floor carpet
4. Spare tyre cover
5. Trunk room rear plate

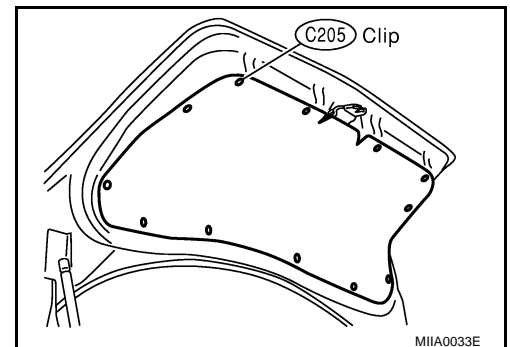

TRUNK ROOM TRIM AND TRUNK LID TRIM
