

# DI

## SECTION

### DRIVER INFORMATION SYSTEM

## CONTENTS

<b>PRECAUTIONS</b> .....	4	Trouble Diagnoses .....	39
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	4	PRELIMINARY CHECK .....	39
Wiring Diagrams and Trouble Diagnosis .....	4	SYMPTOM CHART .....	41
<b>COMBINATION METERS (LHD MODELS)</b> .....	5	Power Supply and Ground Circuit Check .....	42
System Description .....	5	Inspection/Vehicle Speed Signal (With ESP/TCS/ABS Control System) .....	43
UNIFIED CONTROL METER .....	5	Inspection/Vehicle Speed Signal (Without ESP/TCS/ABS Control System) .....	43
HOW TO CHANGE THE DISPLAY FOR ODO/TRIP METER .....	5	Inspection/Engine Speed Signal .....	43
POWER SUPPLY AND GROUND CIRCUIT .....	5	Inspection/Fuel Level Sensor Unit .....	44
WATER TEMPERATURE GAUGE .....	6	FUEL LEVEL SENSOR UNIT .....	44
TACHOMETER .....	6	LOW-FUEL WARNING LAMP .....	44
FUEL GAUGE .....	6	Inspection/Water Temperature Gauge .....	46
SPEEDOMETER .....	6	The Fuel Gauge Pointer Fluctuates Indicator Wrong Value or Varies .....	46
CAN Communication System Description .....	6	The Fuel Gauge Does Not Move to F-position .....	46
CAN Communication Unit for Gasoline Engine with CVT and A/T Models .....	7	The Fuel Gauge Does Not Work .....	47
TYPE 1/TYPE 2 .....	8	Electrical Components Inspection .....	48
TYPE 3/TYPE 4 .....	10	FUEL LEVEL SENSOR UNIT CHECK .....	48
TYPE 5/TYPE 6 .....	12	Removal and Installation for Combination Meter .....	48
TYPE 7/TYPE 8 .....	14	Disassembly and Assembly for Combination Meter .....	48
TYPE 9/TYPE 10 .....	16	<b>COMBINATION METERS (RHD MODELS)</b> .....	49
CAN Communication Unit for Gasoline Engine with M/T Models .....	18	System Description .....	49
TYPE 11/TYPE 12 .....	19	UNIFIED CONTROL METER .....	49
TYPE 13/TYPE 14 .....	21	HOW TO CHANGE THE DISPLAY FOR ODO/TRIP METER .....	49
TYPE 15/TYPE 16 .....	23	POWER SUPPLY AND GROUND CIRCUIT .....	49
CAN Communication Unit for Diesel Engine Models .....	25	WATER TEMPERATURE GAUGE .....	50
TYPE 33/TYPE 34 .....	26	TACHOMETER .....	50
TYPE 35/TYPE 36 .....	28	FUEL GAUGE .....	50
TYPE 37/TYPE 38 .....	30	SPEEDOMETER .....	50
TYPE 39/TYPE 40 .....	31	CAN Communication System Description .....	50
Component Parts and Harness Connector Location .....	32	CAN Communication Unit for Gasoline Engine with CVT and A/T Models .....	51
Combination Meter .....	33	TYPE 17/TYPE 18 .....	52
CHECK .....	33	TYPE 19/TYPE 20 .....	54
Schematic .....	34	TYPE 21/TYPE 22 .....	56
Wiring Diagram — METER — .....	35	TYPE 23/TYPE 24 .....	58
Combination Meter Self-Diagnosis .....	36	TYPE 25/TYPE 26 .....	60
PERFORMING SELF-DIAGNOSIS MODE .....	36	CAN Communication Unit for Gasoline Engine with	

M/T Models .....	62	AV Communication Line Check .....	102
TYPE 27/TYPE 28 .....	63	A/C Auto Amp. Circuit Check .....	103
TYPE 29/TYPE 30 .....	65	Self-Diagnosis Does Not Perform .....	103
TYPE 31/TYPE 32 .....	67	Air Conditioning Controls (Only) Are Ineffective (Rear Defogger Control Excluded). ....	104
CAN Communication Unit for Diesel Engine Models..	69	No Average Speed Displayed/LHD Models .....	106
TYPE 41/TYPE 42 .....	70	No Average Speed is Displayed/RHD Models ....	107
TYPE 43/TYPE 44 .....	72	No Fuel Information Is Displayed/LHD Models ....	108
Component Parts and Harness Connector Location..	73	No Fuel Information Is Displayed/RHD Models ...	109
Combination Meter .....	74	Multifunction Switch Does Not Operate. ....	109
CHECK .....	74	Removal and Installation of Multifunction switch .	110
Schematic .....	75	Removal and Installation of Display Unit .....	110
Wiring Diagram — METER — .....	76	<b>LCD (LIQUID CRYSTAL DISPLAY) .....</b>	<b>111</b>
Combination Meter Self-Diagnosis .....	77	System Description .....	111
PERFORMING SELF-DIAGNOSIS MODE .....	77	MULTIFUNCTION SWITCH SYSTEM .....	111
Trouble Diagnoses .....	80	PRECAUTION OF LCD MONITOR .....	111
PRELIMINARY CHECK .....	80	POWER SUPPLY AND GROUND .....	111
SYMPTOM CHART .....	82	AV COMMUNICATION LINE .....	111
Power Supply and Ground Circuit Check .....	83	VEHICLE INFORMATION SYSTEM .....	111
Inspection/Vehicle Speed Signal (With ESP/TCS/ ABS Control System) .....	84	WARNING INDICATIONS .....	114
Inspection/Vehicle Speed Signal (Without ESP/ TCS/ABS Control System) .....	84	Precautions for Display Unit Replacement .....	115
Inspection/Engine Speed Signal .....	84	Component Parts and Harness Connector and Har- ness Connector Location .....	116
Inspection/Fuel Level Sensor Unit .....	85	Schematic .....	117
FUEL LEVEL SENSOR UNIT .....	85	Wiring Diagram — COMM — .....	118
LOW-FUEL WARNING LAMP .....	85	Terminals and Reference Value for Display Unit ..	121
Inspection/Water Temperature Gauge .....	87	Terminals and Reference Value for Multifunction Switch .....	123
The Fuel Gauge Pointer Fluctuates Indicator Wrong Value or Varies .....	87	On Board Self-Diagnosis Function .....	124
The Fuel Gauge Does Not Move to F-position .....	87	DESCRIPTION .....	124
The Fuel Gauge Does Not Work .....	88	DIAGNOSIS ITEM .....	124
Low Fuel Warning Lamp Illuminate or Not Illuminate..	88	Self-Diagnosis Mode .....	124
Electrical Components Inspection .....	89	OPERATION PROCEDURES .....	124
Removal and Installation for Combination Meter ...	89	SELF-DIAGNOSIS RESULT .....	127
Disassembly and Assembly for Combination Meter..	89	CONFIRMATION/ADJUSTMENT Mode .....	128
<b>VFD (VACUUM FLUORESCENT DISPLAY) .....</b>	<b>90</b>	OPERATION PROCEDURE .....	128
System Description .....	90	DISPLAY DIAGNOSIS .....	129
MULTIFUNCTION SWITCH SYSTEM .....	90	VEHICLE SIGNALS .....	129
POWER SUPPLY AND GROUND .....	90	SERVICE .....	130
COMMUNICATION LINE .....	90	Power Supply and Ground Circuit Check for Display Unit .....	131
BOARD COMPUTER .....	90	Power Supply and Ground Circuit Check for Multi- function Switch .....	132
HOW TO CHANGE/RESET INDICATION .....	91	Vehicle Speed Signal Check/LHD Models .....	133
Component Parts and Harness Connector and Har- ness Connector Location .....	92	Vehicle Speed Signal Check/RHD Models .....	134
Wiring Diagram — COMM — .....	93	Illumination Control Signal Check .....	135
Terminals and Reference Value for Display Unit ...	95	Ignition Signal Check .....	135
Terminals and Reference Value for Multifunction Switch .....	96	Audio Circuit Check .....	136
Self-Diagnosis Function .....	97	CD Auto Changer Circuit Check .....	136
DESCRIPTION .....	97	AV Communication Line Check .....	137
Performing Self-Diagnosis Mode .....	97	Self-Diagnosis Does Not Perform .....	138
OPERATION PROCEDURES .....	97	RGB Screen Is Not Shown .....	139
SELF-DIAGNOSIS RESULT ITEM .....	98	Color of RGB Image Is Not Proper .....	140
Power Supply and Ground Circuit Check for Display Unit .....	99	RGB Screen Is Rolling .....	140
Power Supply and Ground Circuit Check for Multi- function Switch .....	100	Air Conditioning Controls (Only) Are Ineffective (Rear Defogger Control Excluded) .....	140
Combination meter Circuit Check/LHD models ...	101	Fuel Information Is Not Displayed/Warning Mes- sage Is Not Displayed/LHD Models .....	141
Combination meter Circuit Check/RHD models ...	101	Fuel Information Is Not Displayed/Warning Mes-	

sage Is Not Displayed/RHD Models .....	143	Symptom Chart .....	168	
Multifunction Switch Does Not Operate .....	144	Power Supply and Ground Circuit Check .....	170	A
Removal and Installation of Multifunction switch ..	144	Lighting Switch Input Signal Check .....	171	
Removal and Installation of Display Unit .....	144	Key Switch Insert Signal Check .....	173	B
<b>WARNING LAMPS .....</b>	<b>145</b>	Front Door Switch (Driver side) Check .....	174	
Schematic .....	145	Seat Belt Buckle Switch Check (Driver side) .....	176	C
Wiring Diagram — WARN —/LHD Models Except		Seat Belt Buckle Switch (Passenger Side) and Seat		
for F9Q Engine .....	146	Pressure Switch Check .....	178	
Wiring Diagram — WARN —/LHD Models For F9Q		<b>CLOCK .....</b>	<b>183</b>	
Engine .....	150	Wiring Diagram — CLOCK — .....	183	D
Wiring Diagram — WARN — /RHD Models .....	155	<b>REAR VIEW MONITOR .....</b>	<b>184</b>	
Electrical Components Inspection .....	159	System Description .....	184	E
OIL PRESSURE SWITCH CHECK .....	159	POWER SUPPLY AND GROUND .....	184	
<b>A/T INDICATOR .....</b>	<b>160</b>	REAR VIEW CAMERA OPERATION .....	184	F
Wiring Diagram — AT/IND — .....	160	Component Location .....	185	
SYMPTOM CHART .....	161	Schematic .....	186	G
<b>WARNING CHIME .....</b>	<b>162</b>	Wiring Diagram — R/VIEW — .....	187	
System Description .....	162	LHD MODELS EXCEPT FOR F9Q ENGINE ...	187	
POWER SUPPLY AND GROUND CIRCUIT ...	162	LHD MODELS FOR F9Q ENGINE .....	191	
IGNITION KEY WARNING CHIME .....	162	RHD MODELS .....	194	
LIGHT WARNING CHIME .....	162	Terminals and Reference Value for Rear View Cam-		
SEAT BELT WARNING CHIME .....	162	era Control Unit .....	198	
Component Parts and Harness Connector Location	163	Power Supply and Ground Circuit Check .....	199	H
Wiring Diagram — CHIME — .....	164	Rear View Is Not Displayed With The Selector Lever		
LHD MODELS .....	164	In R-position .....	200	
RHD MODELS .....	166	The Rear View Image Is Distorted .....	202	
CONSULT-II Inspection Procedure .....	168	Removal and Installation of Rear View Camera ..	204	I
DIAGNOSTIC ITEMS DESCRIPTION .....	168			
CONSULT-II BASIC OPERATION PROCEDURE				J

## PRECAUTIONS

PFP:00011

### Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS009A0

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### Wiring Diagrams and Trouble Diagnosis

EKS009A1

When you read wiring diagrams, refer to the following:

- [GI-14, "How to Read Wiring Diagrams"](#) in GI section
- [PG-3, "POWER SUPPLY ROUTING"](#) for power distribution circuit in PG section

When you perform trouble diagnosis, refer to the following:

- [GI-10, "How to Follow Trouble Diagnoses"](#) in GI section
- [GI-24, "How to Perform Efficient Diagnosis for an Electrical Incident"](#) in GI section

## COMBINATION METERS (LHD MODELS)

### COMBINATION METERS (LHD MODELS)

PFP:24810

#### System Description


EKS009A2

#### UNIFIED CONTROL METER

- Speedometer, odo/trip meter, tachometer, fuel gauge and water temperature gauge are controlled totally by control unit built in combination meter.
- Signal of speedometer, odo/trip meter, tachometer and water temperature gauge are received via CAN communication line.
- Digital meter is adopted for odo/trip meter.\*  
\*The record of the odometer is kept even if the battery cable is disconnected. The record of the trip meter is erased when the battery cable is disconnected.
- Odo/trip meter, A/T indicator and ICC system display segments can be checked in self-diagnosis mode.
- Meter/gauge can be checked in self-diagnosis mode.

#### HOW TO CHANGE THE DISPLAY FOR ODO/TRIP METER

- The CAN communication signals (vehicle speed signal) from ESP/TCS/ABS control unit or ABS actuator and electric unit, and the memory signals from the meter memory circuit are processed by the combination meter, and the mileage is displayed.
- Operating the odometer/trip switch allows switching the mode in the following order.

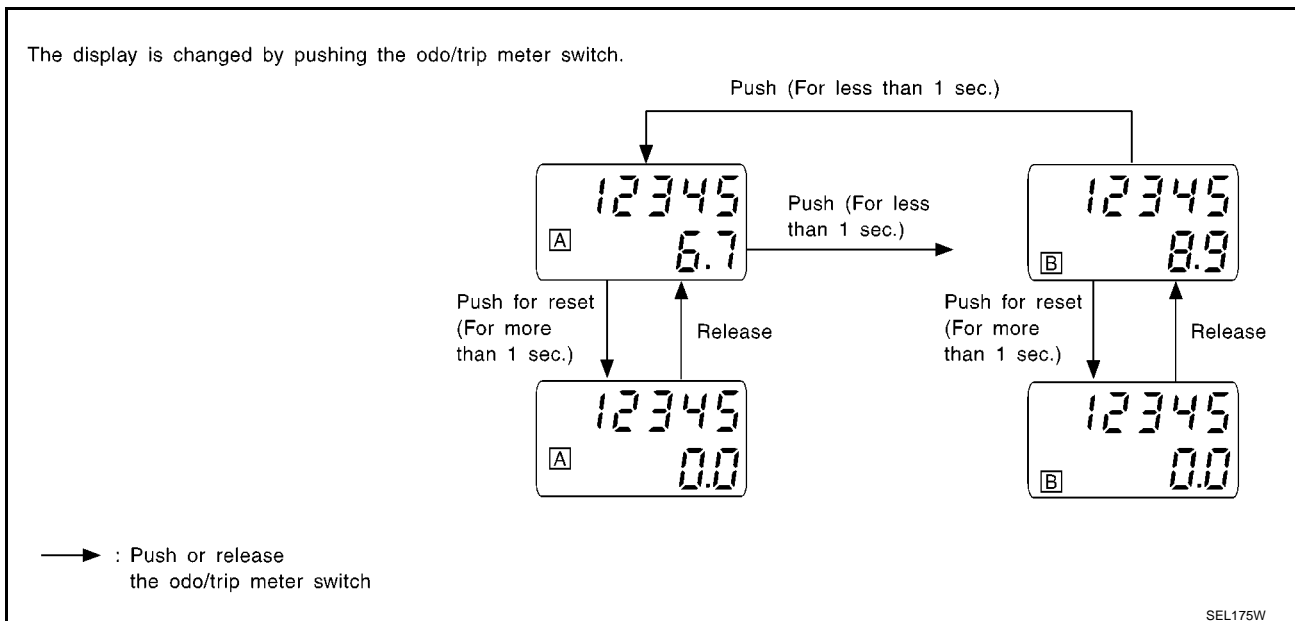

- The odo/trip meter display switching and trip display resetting can be identified by the time from pressing the odo/trip meter switch to releasing it.
- When resetting with trip A displayed, only trip A display is reset (same as trip B).

#### POWER SUPPLY AND GROUND CIRCUIT

Power is supplied at all times

- through 10A fuse [NO. 12, located in the fuse block (J/B)]
- to combination meter terminal 52.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [NO. 30, located in the fuse block (J/B)]
- to combination meter terminal 51.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [NO. 1, located in the fuse block (J/B)]
- to combination meter terminal 50.

Ground is supplied

- to combination meter terminals 24, 25 and 45
- through body grounds M16, M50, M70 and F115 (Gasoline engine models) or

## COMBINATION METERS (LHD MODELS)

---

- through body grounds M16, M50 and M70 (Diesel engine models).

### WATER TEMPERATURE GAUGE

The water temperature gauge indicates the engine coolant temperature.

ECM provides a water temperature signal to combination meter for water temperature gauge with CAN communication line.

### TACHOMETER

The tachometer indicates engine speed in revolution per minutes (rpm). ECM provides an engine speed signal to combination meter for tachometer with CAN communication line.

### FUEL GAUGE

The fuel gauge indicates the approximate fuel level in the fuel tank.

The fuel gauge is regulated by a variable resistor signal supplied

- to combination meter terminal 47 for the fuel level sensor
- from terminal 4 of the fuel level sensor unit
- through terminal 1 of the fuel level sensor unit and
- through combination meter terminal 46

### SPEEDOMETER

ESP/TCS/ABS control unit or ABS actuator and electric unit (control unit) provides a vehicle speed signal to the combination meter for the speedometer with CAN communication line.

### CAN Communication System Description

EKS00175

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

# COMBINATION METERS (LHD MODELS)

## CAN Communication Unit for Gasoline Engine with CVT and A/T Models

EKS00176

Go to CAN system, when selecting your car model from the following table.

Body type	Sedan/Wagon/Hatch back									
Axle	2WD									
Engine	QR20DE					QG18DE				
Transmission	CVT					A/T				
Brake control	ESP				ABS		ESP		ABS	
ICC system	×	×								
Tyre pressure monitoring system	×		×		×		×		×	
CAN communication unit										
ECM	×	×	×	×	×	×	×	×	×	×
TCM	×	×	×	×	×	×	×	×	×	×
ESP/TCS/ABS control unit	×	×	×	×			×	×		
ABS actuator and electric unit (control unit)					×	×			×	×
Data link connector	×	×	×	×	×	×	×	×	×	×
Steering angle sensor	×	×	×	×			×	×		
Smart entrance control unit	×	×	×	×	×	×	×	×	×	×
Tyre pressure monitoring control unit	×		×		×		×		×	
ICC unit	×	×								
ICC sensor	×	×								
Combination meter	×	×	×	×	×	×	×	×	×	×
CAN system type	Type 1	Type 2	Type 3	Type 4	Type 5	Type 6	Type 7	Type 8	Type 9	Type 10
CAN communication type	DI-8		DI-10		DI-12		DI-14		DI-16	


×:Applicable

## COMBINATION METERS (LHD MODELS)


### TYPE 1/TYPE 2

#### System Diagram

- Type 1

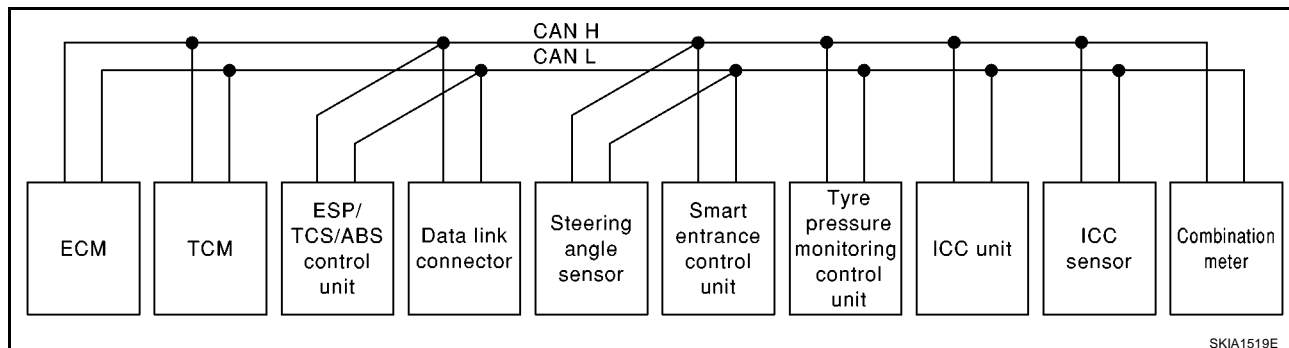

- Type 2

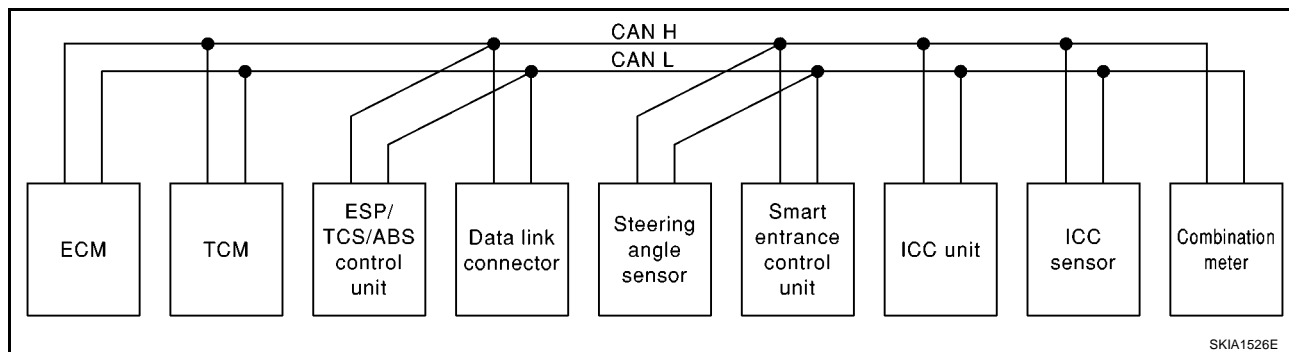



# COMBINATION METERS (LHD MODELS)

## Input/Output Signal Chart

T: Transmit R: Receive


Signals	ECM	TCM	ESP/ TCS / ABS control unit	Steer- ing angle sensor	Smart entranc e con- trol unit	Tyre pres- sure moni- toring control unit	ICC unit	ICC sensor	Combi- nation meter
Engine speed signal	T	R	R				R		R
Accelerator pedal position signal	T	R	R				R		
Closed throttle position signal	T						R		
ICC steering switch signal	T						R		
Shift pattern signal		T					R		
Parking brake switch signal			T				R		
ICC system display signal							T		R
ICC sensor signal							R	T	
ESP operation signal	R		T				R		
TCS operation signal	R		T				R		
ABS operation signal	R	R	T				R		
Stop lamp switch signal		R	T						
Steering wheel angle sensor signal			R	T					
Wheel speed sensor signal			T				R		
Rear window defogger signal	R				T				
Heater fan switch signal	R								T
Air conditioner switch signal	R								T
Primary pulley revolution signal	R	T					R		
Secondary pulley revolution signal	R	T					R		
ICC operation signal	R						T		
Brake switch signal	R						T		
MI signal	T								R
Current gear position signal		T							R
Engine coolant temperature signal	T						R		R
Fuel consumption signal	T								R
Vehicle speed signal			T						R
	R								T
Seat belt reminder signal					R				T
Lighting switch position signal					T				R
Flashing indicator signal					T				R
Engine cooling fan speed signal	T				R				
Child lock indicator signal					T				R
Door switches state signal					T				R
A/C compressor signal	T				R				
Tyre pressure signal						T			R

## COMBINATION METERS (LHD MODELS)


### TYPE 3/TYPE 4

#### System Diagram

- Type 3

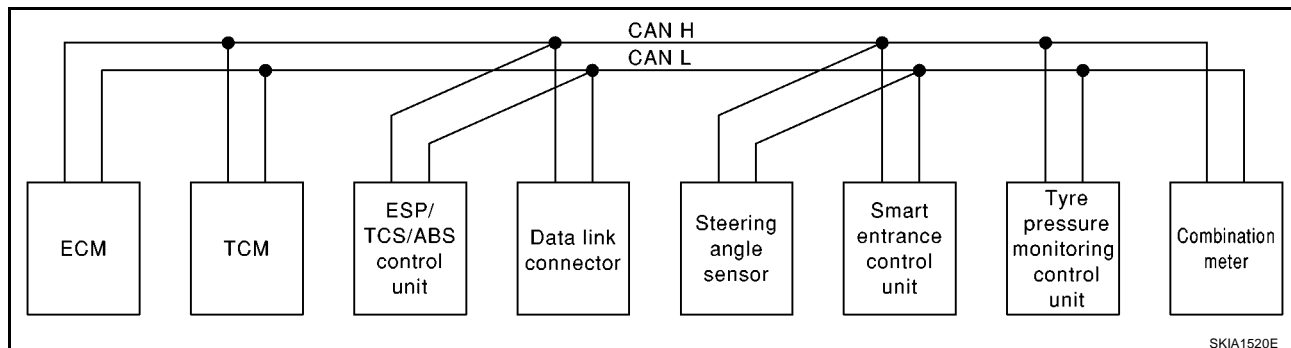

- Type 4

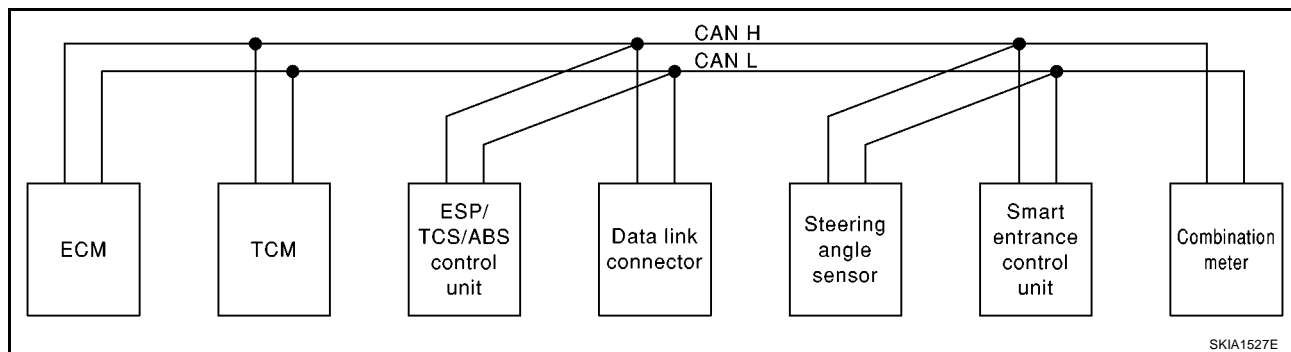

# COMBINATION METERS (LHD MODELS)

## Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	ESP/TCS / ABS control unit	Steering angle sensor	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T	R	R				R
Accelerator pedal position signal	T	R	R				
ESP operation signal	R		T				
TCS operation signal	R		T				
ABS operation signal	R	R	T				
Stop lamp switch signal		R	T				
Steering angle sensor signal			R	T			
Rear window defogger signal	R				T		
Heater fan switch signal	R						T
Air conditioner switch signal	R						T
Primary pulley revolution signal	R	T					
Secondary pulley revolution signal	R	T					
MI signal	T						R
Current gear position signal		T					R
Engine coolant temperature signal	T						R
Fuel consumption signal	T						R
Vehicle speed signal			T				R
	R						T
Seat belt reminder signal					R		T
Lighting switch position signal					T		R
Flashing indicator signal					T		R
Engine cooling fan speed signal	T				R		
Child lock indicator signal					T		R
Door switches state signal					T		R
A/C compressor signal	T				R		
Tyre pressure signal						T	R


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
DI  
L  
M

## COMBINATION METERS (LHD MODELS)


### TYPE 5/TYPE 6

#### System Diagram

- Type 5

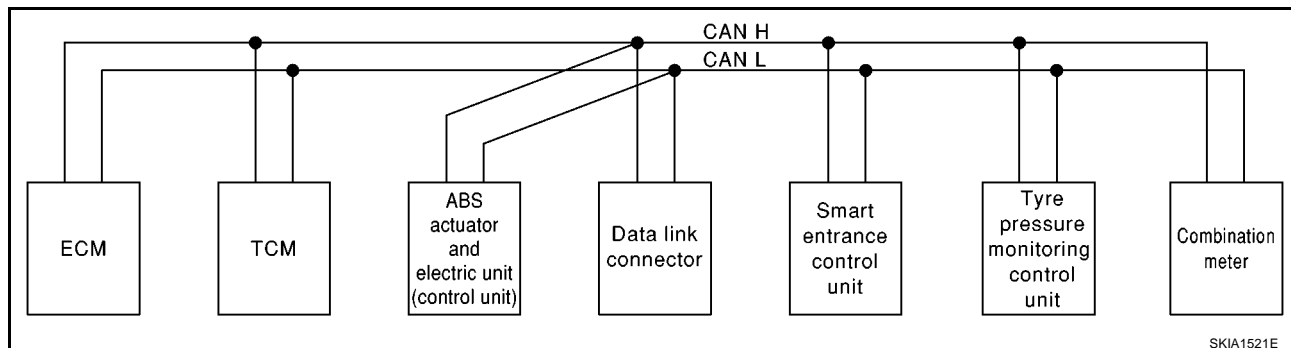

- Type 6

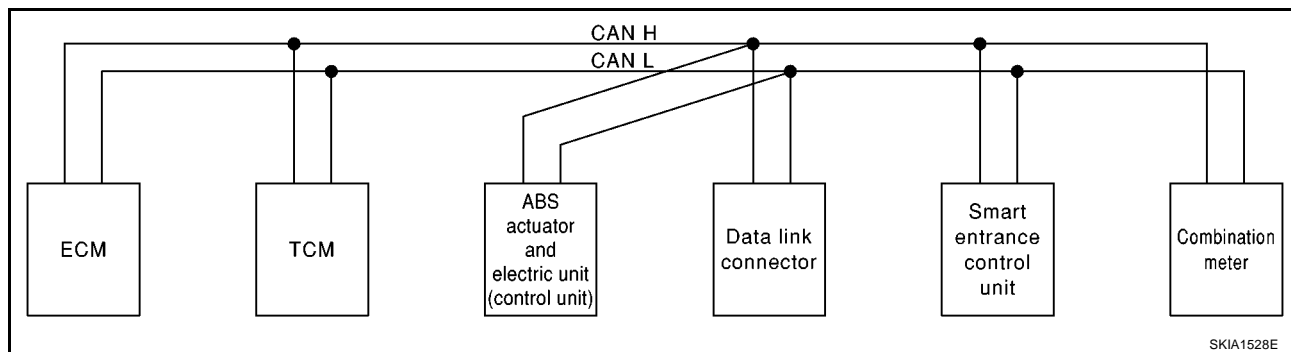

## COMBINATION METERS (LHD MODELS)

### Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	ABS actuator and electric unit (control unit)	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T	R				R
Stop lamp switch signal		R	T			
Rear window defogger signal	R			T		
Heater fan switch signal	R					T
Air conditioner switch signal	R					T
Primary pulley revolution signal	R	T				
Secondary pulley revolution signal	R	T				
MI signal	T					R
Current gear position signal		T				R
Engine coolant temperature signal	T					R
Fuel consumption signal	T					R
Vehicle speed signal			T			R
	R					T
Seat belt reminder signal				R		T
Lighting switch position signal				T		R
Flashing indicator signal				T		R
Engine cooling fan speed signal	T			R		
Child lock indicator signal				T		R
Door switches state signal				T		R
A/C compressor signal	T			R		
Tyre pressure signal					T	R

DI

L


M

## COMBINATION METERS (LHD MODELS)


### TYPE 7/TYPE 8

#### System diagram

- Type 7

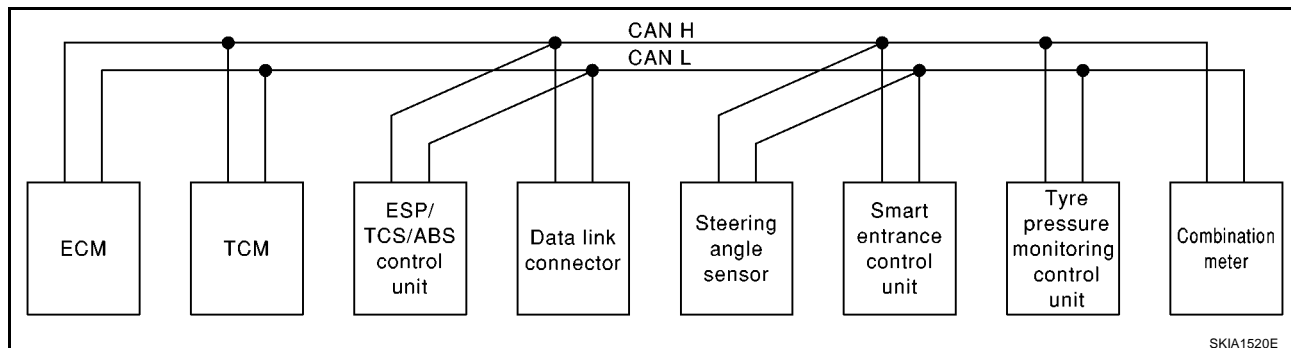

- Type 8

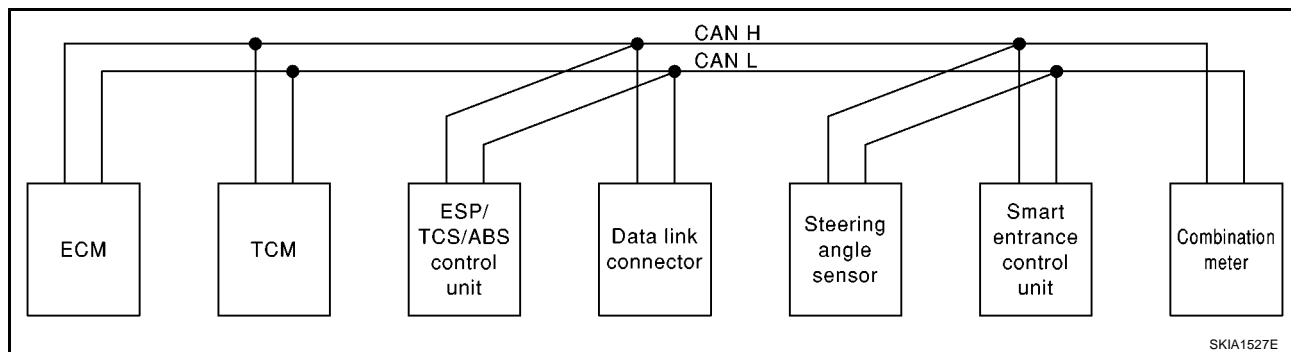

# COMBINATION METERS (LHD MODELS)

## Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	ESP/TCS / ABS control unit	Steering angle sensor	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T		R				R
Accelerator pedal position signal	T	R	R				
ESP operation signal	R		T				
TCS operation signal	R		T				
ABS operation signal	R	R	T				
Stop lamp switch signal		R	T				
Steering wheel angle sensor signal			R	T			
Rear window defogger signal	R				T		
Heater fan switch signal	R						T
Air conditioner switch signal	R						T
MI signal	T						R
Current gear position signal		T					R
Engine coolant temperature signal	T						R
Fuel consumption signal	T						R
Vehicle speed signal			T				R
	R						T
Seat belt reminder signal					R		T
Lighting switch position signal					T		R
Flashing indicator signal					T		R
Engine cooling fan speed signal	T				R		
Child lock indicator signal					T		R
Door switches state signal					T		R
A/C compressor signal	T				R		
ASCD main switch signal	T						R
ASCD cruise signal	T						R
Output shaft revolution signal	R	T					
Tyre pressure signal						T	R


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
DI  
L  
M

## COMBINATION METERS (LHD MODELS)


### TYPE 9/TYPE 10

#### System Diagram

- Type 9

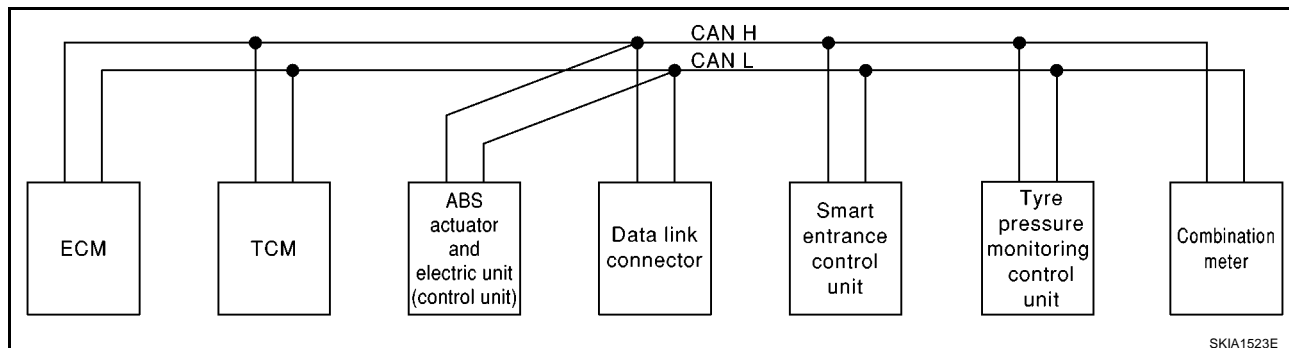

- Type 10

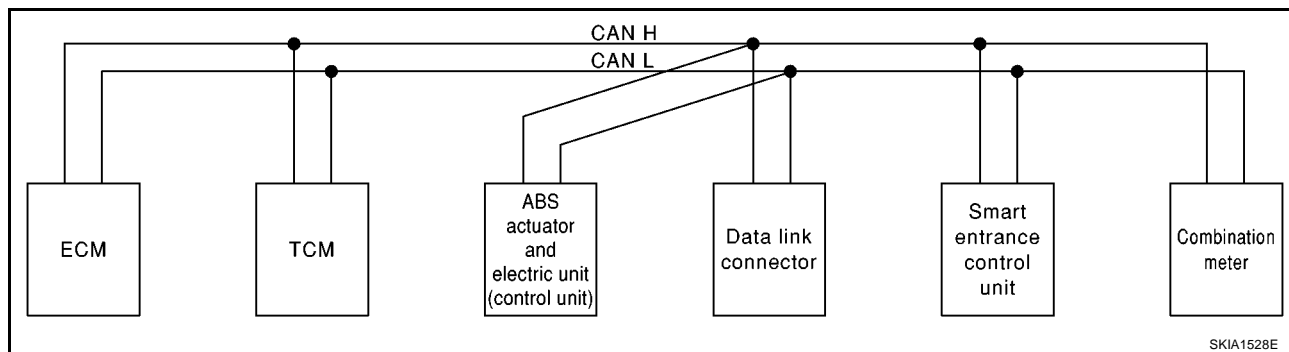



## COMBINATION METERS (LHD MODELS)

### Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	ABS actuator and electric unit (control unit)	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T	R				R
Stop lamp switch signal		R	T			
Rear window defogger signal	R			T		
Heater fan switch signal	R					T
Air conditioner switch signal	R					T
MI signal	T					R
Current gear position signal		T				R
Engine coolant temperature signal	T					R
Fuel consumption signal	T					R
Vehicle speed signal			T			R
	R					T
Seat belt reminder signal				R		T
Lighting switch position signal				T		R
Flashing indicator signal				T		R
Engine cooling fan speed signal	T			R		
Child lock indicator signal				T		R
Door switches state signal				T		R
A/C compressor signal	T			R		
Tyre pressure signal					T	R

A

B

C

D

E

F

G

H

I

J

DI

L

M

## COMBINATION METERS (LHD MODELS)

### CAN Communication Unit for Gasoline Engine with M/T Models

EKS00177


Body type	Sedan/Wagon/Hatch back					
Axle	2WD					
Engine	QR20DE					QG16/QG18
Transmission	6M/T					5M/T
Brake control	ESP				ABS	
ICC system	×	×				
Tyre pressure monitoring system	×		×		×	
CAN communication unit						
ECM	×	×	×	×	×	×
ESP/TCS/ABS control unit	×	×	×	×		
ABS actuator and electric unit (control unit)					×	×
Data link connector	×	×	×	×	×	×
Steering angle sensor	×	×	×	×		
Smart entrance control unit	×	×	×	×	×	×
Tyre pressure monitoring control unit	×		×		×	
ICC unit	×	×				
ICC sensor	×	×				
Combination meter	×	×	×	×	×	×
CAN system type	Type 11	Type 12	Type 13	Type 14	Type 15	Type 16
CAN communication type	<a href="#">DI-19</a>		<a href="#">DI-21</a>		<a href="#">DI-23</a>	

×:Applicable


COMBINATION METERS (LHD MODELS)

TYPE 11/TYPE 12  
System Diagram

- Type 11

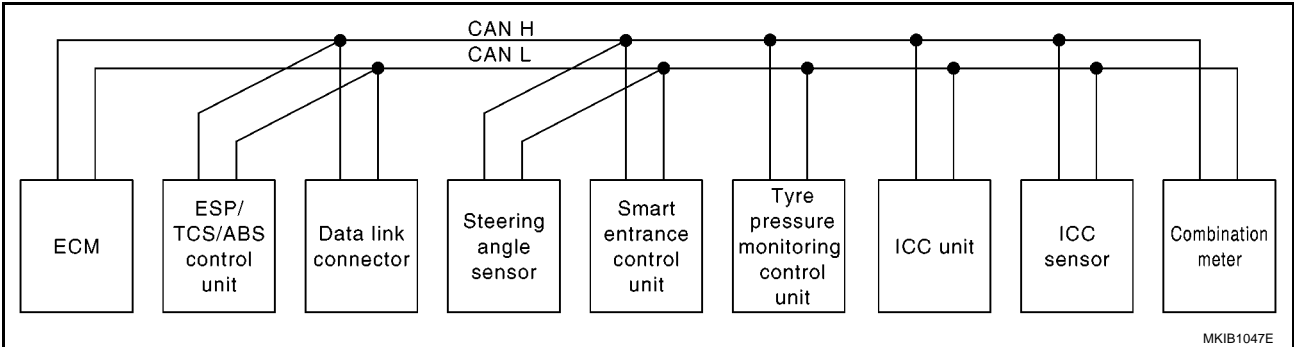

- Type 12

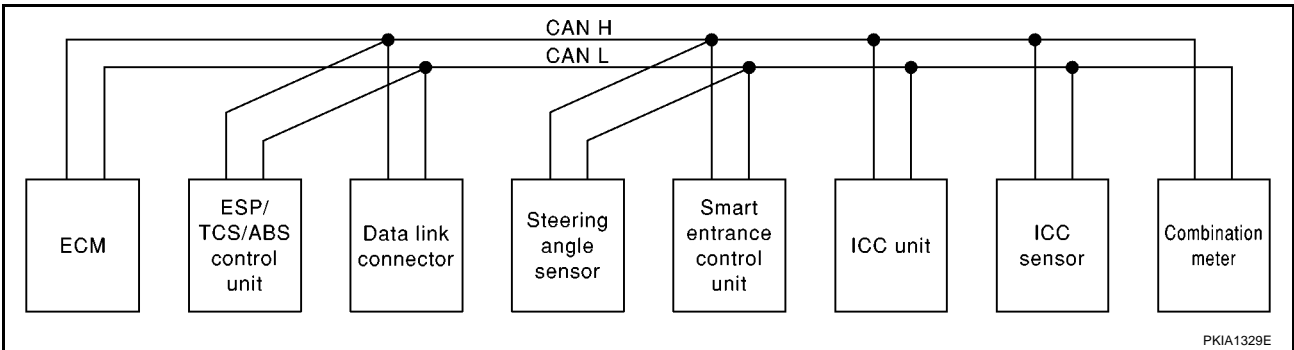

## COMBINATION METERS (LHD MODELS)

### Input/Output Signal Chart


T: Transmit R: Receive

Signals	ECM	ESP/ TCS / ABS con- trol unit	Steering angle sensor	Smart entrance control unit	Tyre pressure monitor- ing con- trol unit	ICC unit	ICC sen- sor	Combi- nation meter
Engine speed signal	T	R				R		R
Accelerator pedal position signal	T	R				R		
Closed throttle position signal	T					R		
ICC steering switch signal	T					R		
Parking brake switch signal		T				R		
ICC system display signal						T		R
ICC sensor signal						R	T	
ESP operation signal	R	T				R		
TCS operation signal	R	T				R		
ABS operation signal	R	T				R		
Stop lamp switch signal		T						
Steering wheel angle sensor signal		R	T					
Wheel speed sensor signal		T				R		
Rear window defogger signal	R			T				
Heater fan switch signal	R							T
Air conditioner switch signal	R							T
ICC operation signal	R					T		
Brake switch signal	R					T		
MI signal	T							R
Engine coolant temperature signal	T					R		R
Fuel consumption signal	T							R
Vehicle speed signal		T						R
	R							T
Seat belt reminder signal				R				T
Lighting switch position signal				T				R
Flashing indicator signal				T				R
Engine cooling fan speed signal	T			R				
Child lock indicator signal				T				R
Door switches state signal				T				R
A/C compressor signal	T			R				
Tyre pressure signal					T			R


COMBINATION METERS (LHD MODELS)

TYPE 13/TYPE 14  
System Diagram

- Type 13

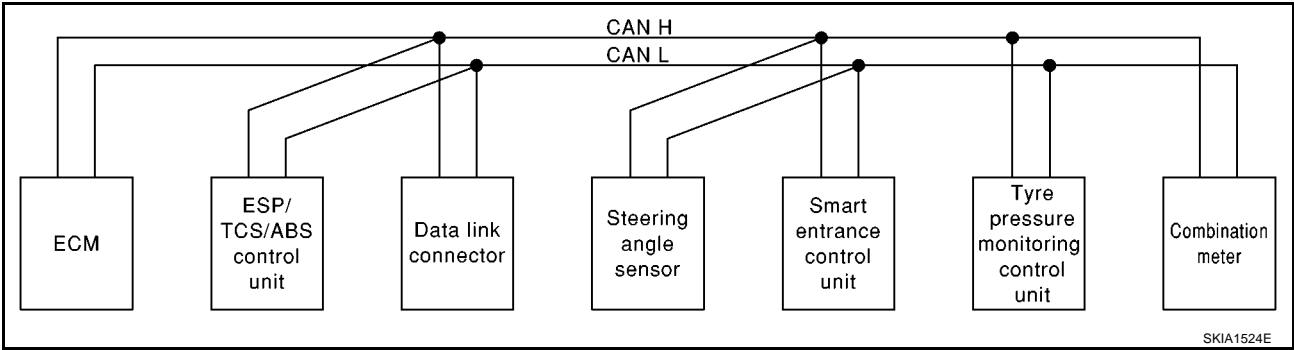

- Type 14

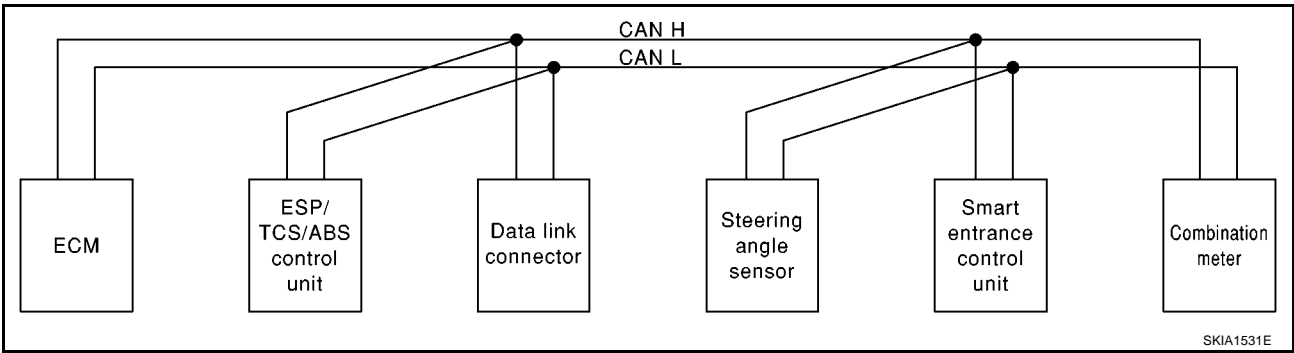

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
DI  
L  
M

## COMBINATION METERS (LHD MODELS)

### Input/Output Signal Chart


T: Transmit R: Receive

Signals	ECM	ESP/ TCS / ABS control unit	Steering angle sen- sor	Smart entrance control unit	Tyre pres- sure moni- toring control unit	Combina- tion meter
Engine speed signal	T	R				R
Accelerator pedal position signal	T	R				
ESP operation signal	R	T				
TCS operation signal	R	T				
ABS operation signal	R	T				
Steering wheel angle sensor signal		R	T			
Rear window defogger signal	R			T		
Heater fan switch signal	R					T
Air conditioner switch signal	R					T
MI signal	T					R
Engine coolant temperature signal	T					R
Fuel consumption signal	T					R
Vehicle speed signal		T				R
	R					T
Seat belt reminder signal				R		T
Lighting switch position signal				T		R
Flashing indicator signal				T		R
Engine cooling fan speed signal	T			R		
Child lock indicator signal				T		R
Door switches state signal				T		R
A/C compressor signal	T			R		
Tyre pressure signal					T	R


# COMBINATION METERS (LHD MODELS)

## TYPE 15/TYPE 16 System Diagram

- Type 15

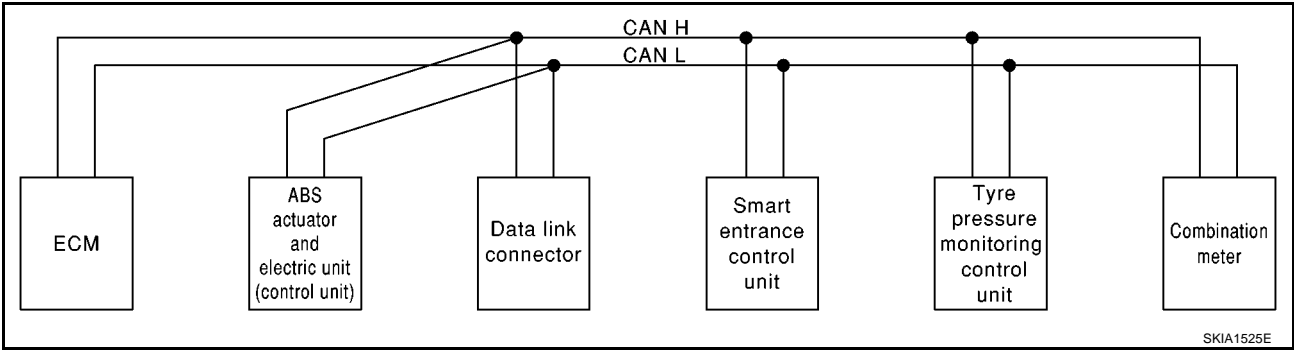

- Type 16

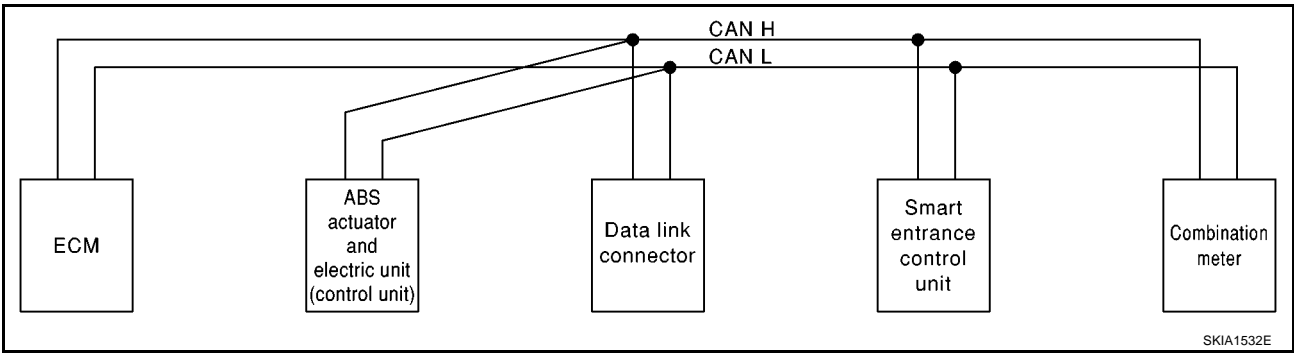

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
DI  
L  
M

## COMBINATION METERS (LHD MODELS)

### Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	ABS actuator and electric unit (control unit)	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T				R
Rear window defogger signal	R		T		
Heater fan switch signal	R				T
Air conditioner switch signal	R				T
MI signal	T				R
Engine coolant temperature signal	T				R
Fuel consumption signal	T				R
Vehicle speed signal		T			R
	R				T
Seat belt reminder signal			R		T
Lighting switch position signal			T		R
Flashing indicator signal			T		R
Engine cooling fan speed signal	T		R		
Child lock indicator signal			T		R
Door switches state signal			T		R
A/C compressor signal	T		R		
Tyre pressure signal				T	R



# COMBINATION METERS (LHD MODELS)

## CAN Communication Unit for Diesel Engine Models

EKS00178

Body type	Sedan/Wagon/Hatch back							
Axle	2WD							
Engine	YD				F9Q			
Transmission	6M/T							
Brake control	ESP		ABS		ESP		ABS	
Tyre pressure monitoring system	×		×		×		×	
CAN communication unit								
ECM	×	×	×	×	×	×	×	×
ESP/TCS/ABS control unit	×	×			×	×		
ABS actuator and electric unit (control unit)			×	×			×	×
Data link connector	×	×	×	×	×	×	×	×
Steering angle sensor	×	×			×	×		
Smart entrance control unit	×	×	×	×	×	×	×	×
Tyre pressure monitoring control unit	×		×		×		×	
Combination meter	×	×	×	×	×	×	×	×
CAN system type	Type 33	Type 34	Type 35	Type 36	Type 37	Type 38	Type 39	Type 40
CAN communication type	DI-26		DI-28		DI-30		DI-31	

×:Applicable

A

B

C

D

E

F

G

H

I

J

DI

L


M

## COMBINATION METERS (LHD MODELS)


### TYPE 33/TYPE 34

#### System Diagram

- Type 33

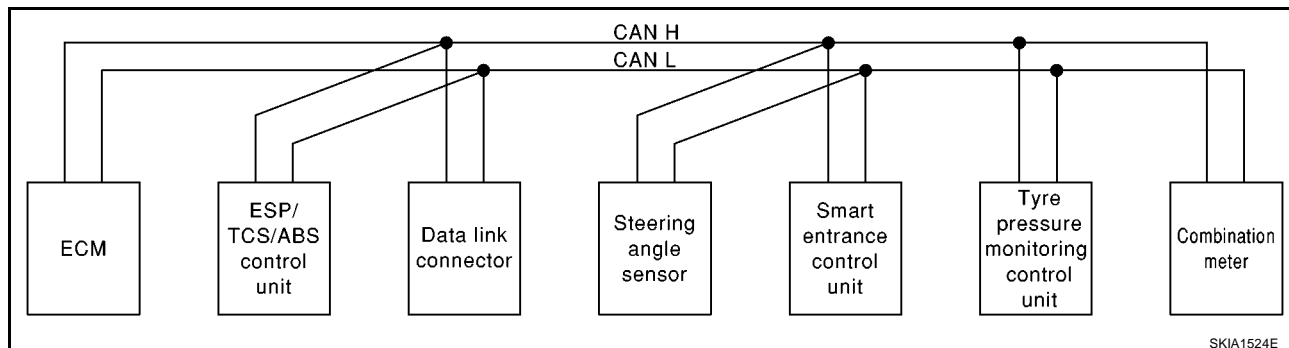

- Type 34

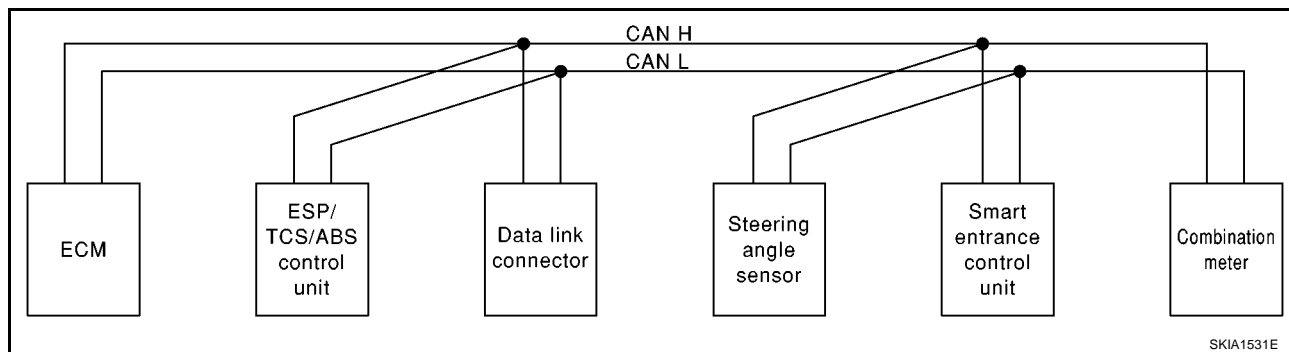

## COMBINATION METERS (LHD MODELS)

### Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	ESP/ TCS / ABS control unit	Steering angle sensor	Smart entrance control unit	Tyre pres- sure monitor- ing control unit	Combination meter
Engine speed signal	T	R				R
Accelerator pedal position signal	T	R				
Steering angle sensor signal		R	T			
Air conditioner switch signal	R					T
MI signal	T					R
Glow indicator lamp signal	T					R
Engine coolant temperature signal	T					R
Fuel consumption signal	T					R
Vehicle speed signal		T				R
	R				R	T
Seat belt reminder signal				R		T
Lighting switch position signal				T		R
Flashing indicator signal				T		R
Engine cooling fan speed signal	T			R		
Child lock indicator signal				T		R
Door switches state signal				T		R
A/C compressor signal	T			R		
Tyre pressure signal					T	R
ASCD SET lamp signal	T					R
ASCD CRUISE lamp signal	T					R

A

B

C

D

E

F

G

H

I

J

DI

L


M

## COMBINATION METERS (LHD MODELS)


### TYPE 35/TYPE 36

#### System Diagram

- Type 35

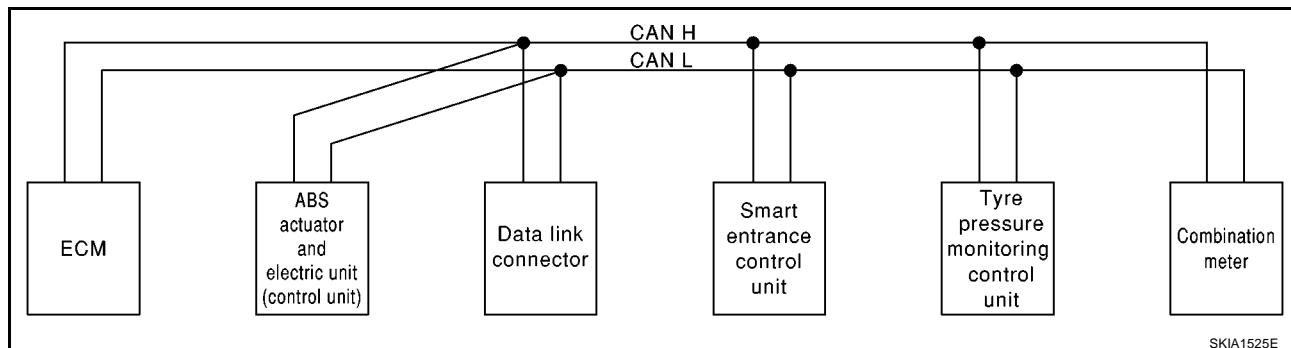

- Type 36

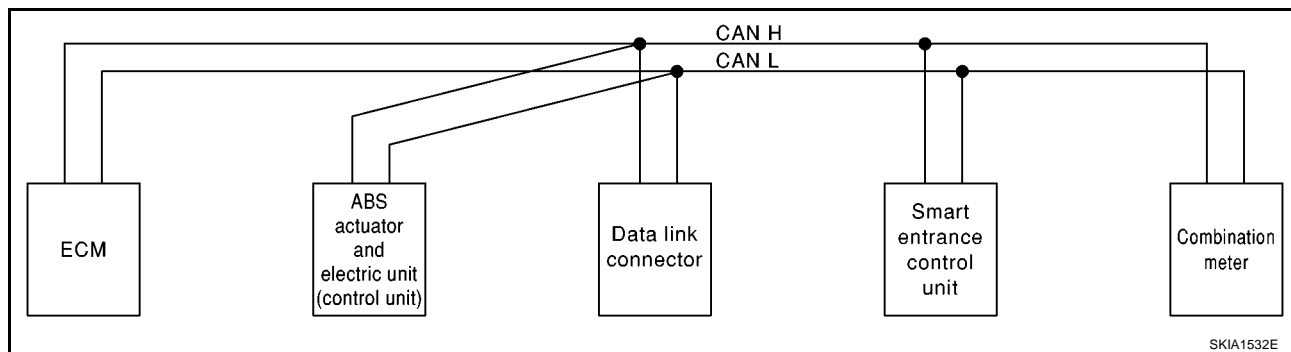

## COMBINATION METERS (LHD MODELS)

### Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	ABS actuator and electric unit (control unit)	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T				R
Air conditioner switch signal	R				T
MI signal	T				R
Glow indicator lamp signal*1	T				R
Engine coolant temperature signal	T				R
Fuel consumption signal	T				R
Vehicle speed signal		T			R
	R			R	T
Seat belt reminder signal			R		T
Lighting switch position signal			T		R
Flashing indicator signal			T		R
Engine cooling fan speed signal	T		R		
Child lock indicator signal			T		R
Door switches state signal			T		R
A/C compressor signal	T		R		
Tyre pressure signal				T	R
ASCD SET lamp signal	T				R
ASCD CRUISE lamp signal	T				R

A

B

C

D

E

F

G

H

I

J

DI

L


M

# COMBINATION METERS (LHD MODELS)


## TYPE 37/TYPE 38

### System Diagram

- Type 37

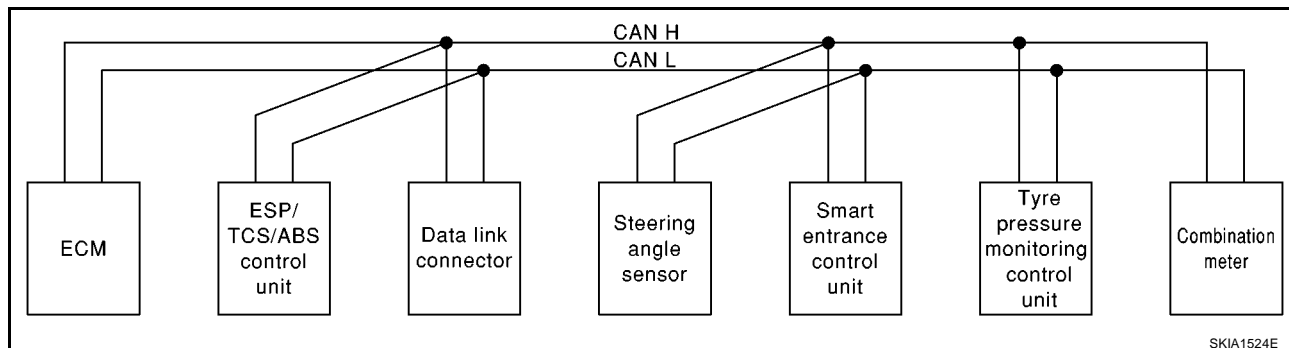

- Type 38

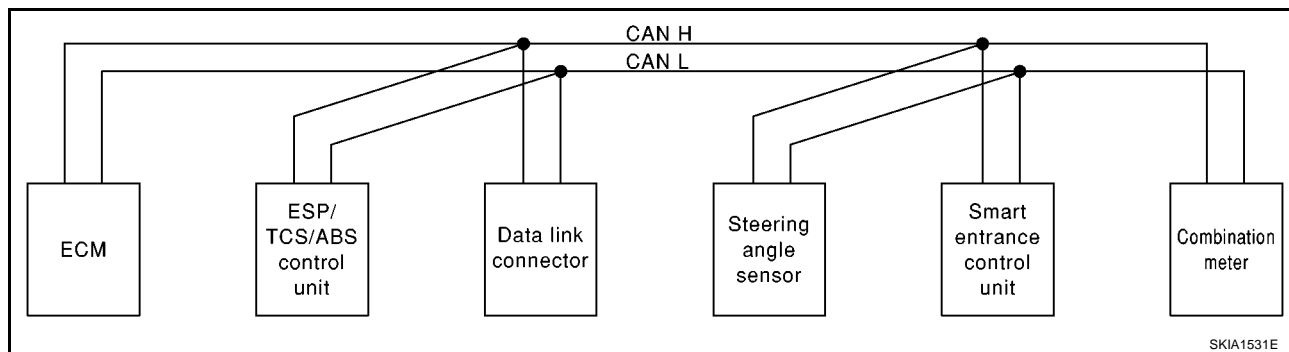

### Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	ESP/ TCS / ABS control unit	Steering angle sensor	Smart entrance control unit	Tyre pres- sure monitor- ing control unit	Combination meter
Engine speed signal	T	R				R
Accelerator pedal position signal	T	R				
ESP operation signal	R	T				
TCS operation signal	R	T				
ABS operation signal	R	T				
Steering angle sensor signal		R	T			
MI signal	T					R
Engine coolant temperature signal	T					R
Fuel consumption signal	T					R
Vehicle speed signal	R	T				R
					R	T
Seat belt reminder signal				R		T
Lighting switch position signal				T		R
Flashing indicator signal				T		R
Engine cooling fan speed signal	T			R		
Child lock indicator signal				T		R
Door switches state signal				T		R
A/C compressor signal	T			R		
Glow indicator lamp signal	T					R
Tyre pressure signal					T	R


## COMBINATION METERS (LHD MODELS)

Signals	ECM	ESP/ TCS / ABS control unit	Steering angle sensor	Smart entrance control unit	Tyre pres- sure monitor- ing control unit	Combination meter
ASCD SET lamp signal	T					R
ASCD CRUISE lamp signal	T					R


### TYPE 39/TYPE 40

#### System Diagram

- Type 39

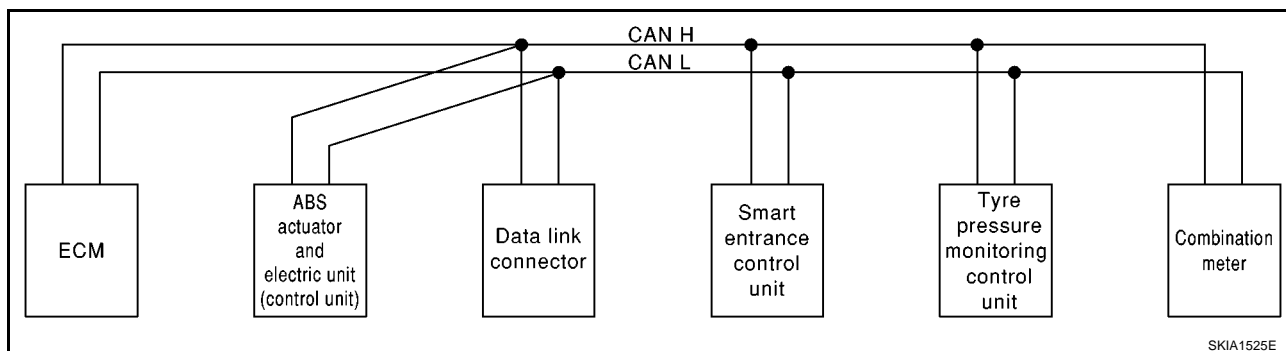

- Type 40

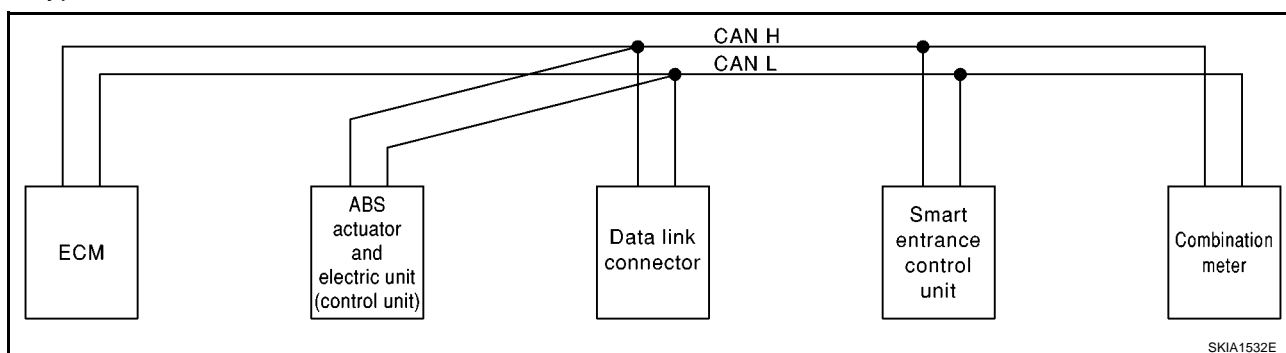

#### Input/Output Signal Chart

T: Transmit R: Receive


Signals	ECM	ABS actuator and electric unit (control unit)	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T				R
ABS operation signal	R	T			
MI signal	T				R
Glow indicator lamp signal	T				R
Engine coolant temperature signal	T				R
Fuel consumption signal	T				R
Vehicle speed signal	R	T			R
				R	T
Seat belt reminder signal			R		T
Lighting switch position signal			T		R
Flashing indicator signal			T		R
Engine cooling fan speed signal	T		R		
Child lock indicator signal			T		R
Door switches state signal			T		R

## COMBINATION METERS (LHD MODELS)

Signals	ECM	ABS actuator and electric unit (control unit)	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
A/C compressor signal	T		R		
Tyre pressure signal				T	R
ASCD SET lamp signal	T				R
ASCD CRUISE lamp signal	T				R

### Component Parts and Harness Connector Location

EKS009A4

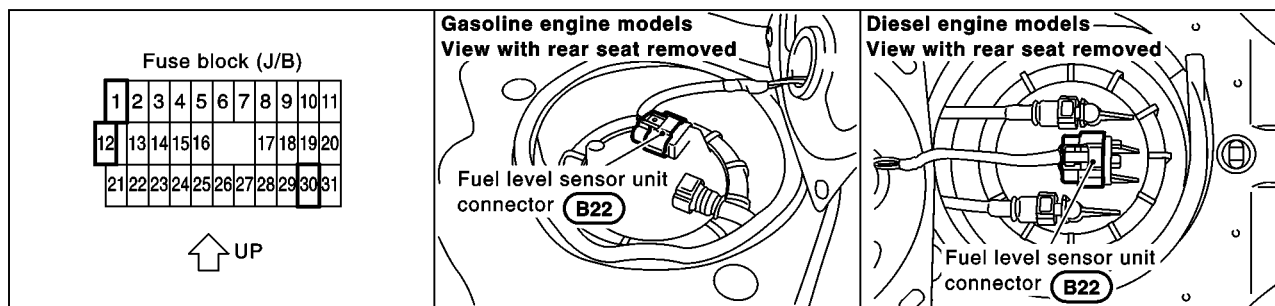


MK1B0048E



COMBINATION METERS (LHD MODELS)

Combination Meter  
CHECK


EKS009A5

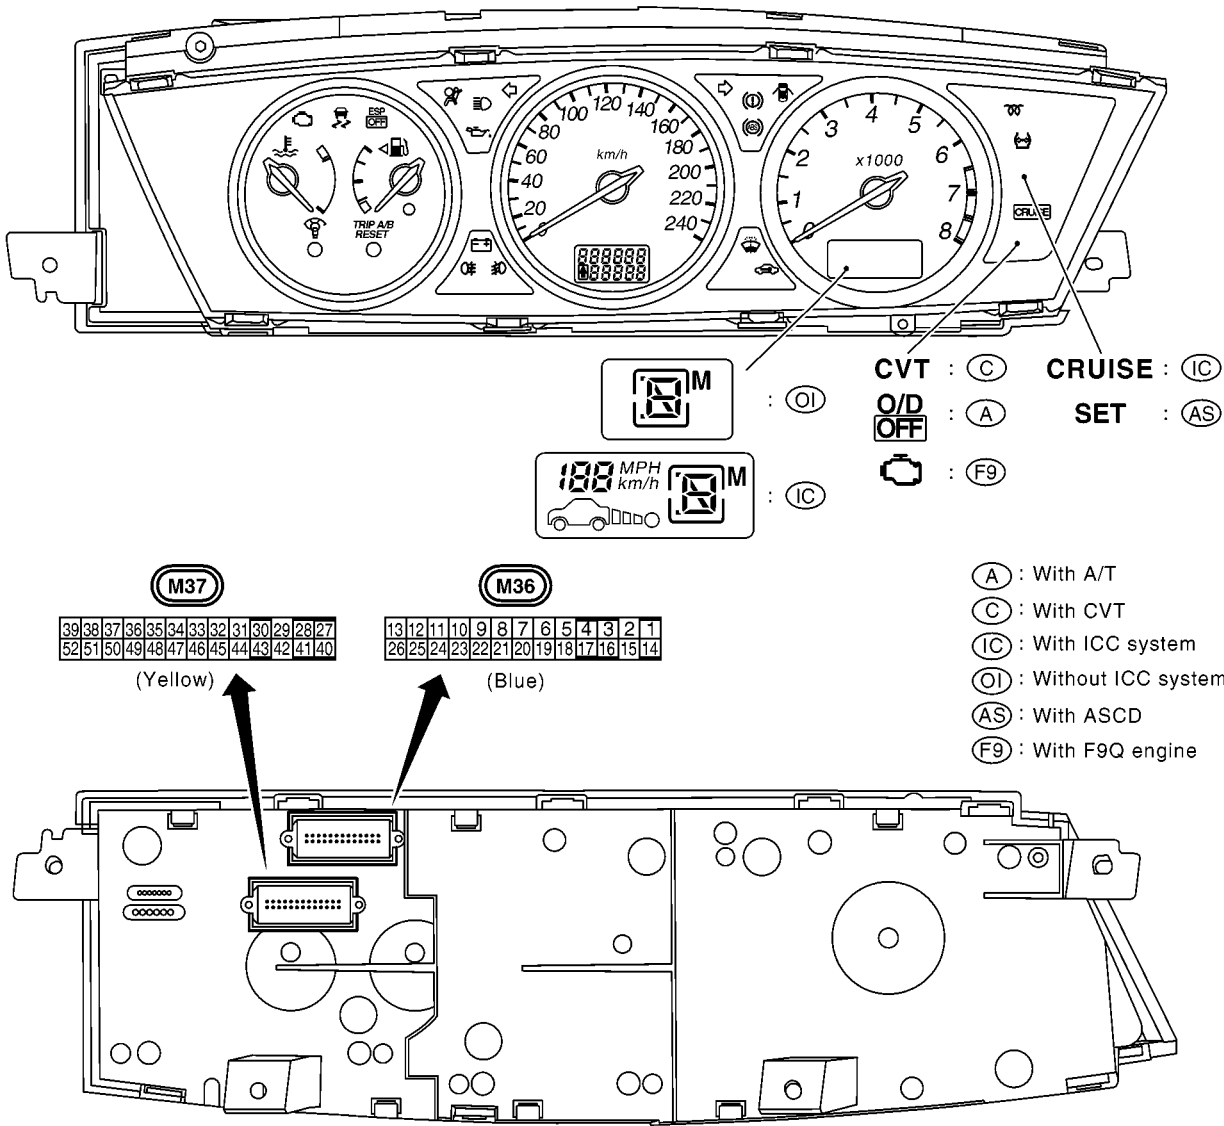

# COMBINATION METERS (LHD MODELS)

## Schematic

EKS009A6

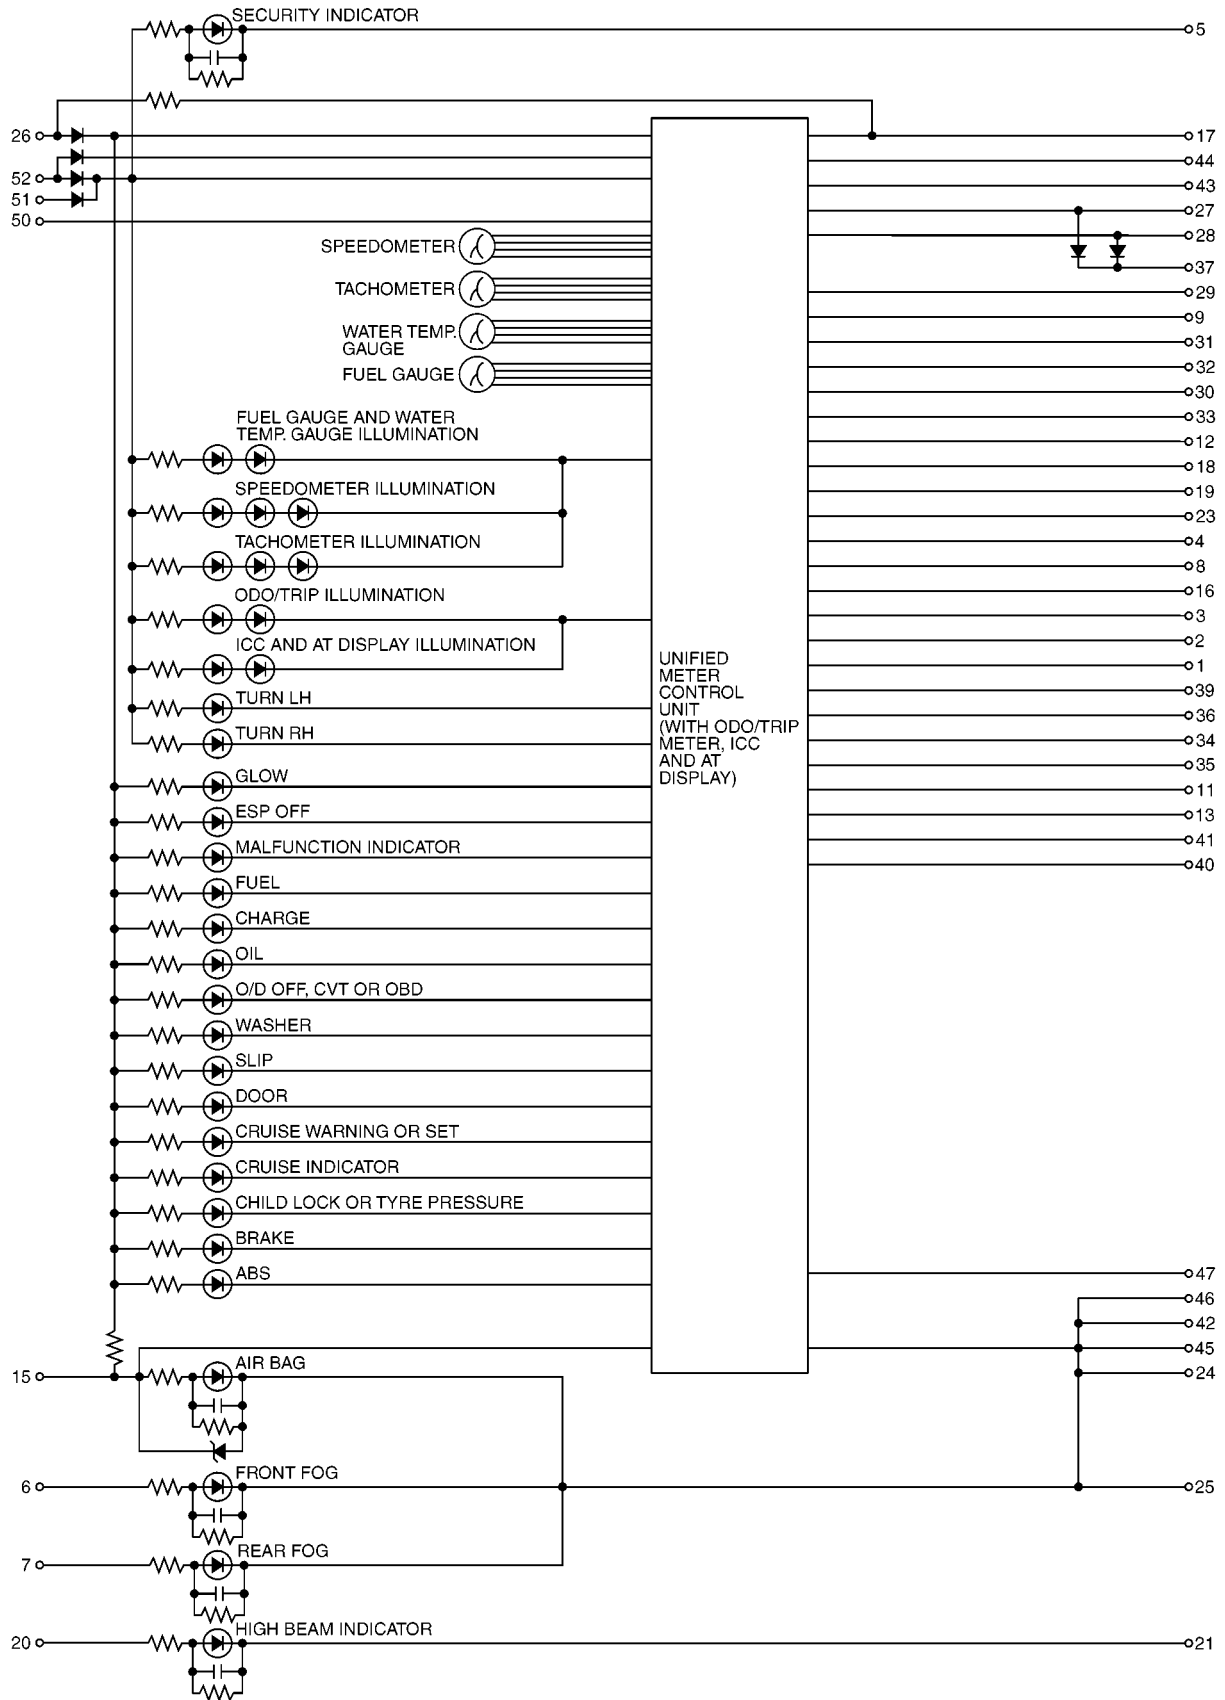

MKWA2477E


COMBINATION METERS (LHD MODELS)

Wiring Diagram — METER —

EKS009A7

DI-METER-01

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
DI  
L  
M

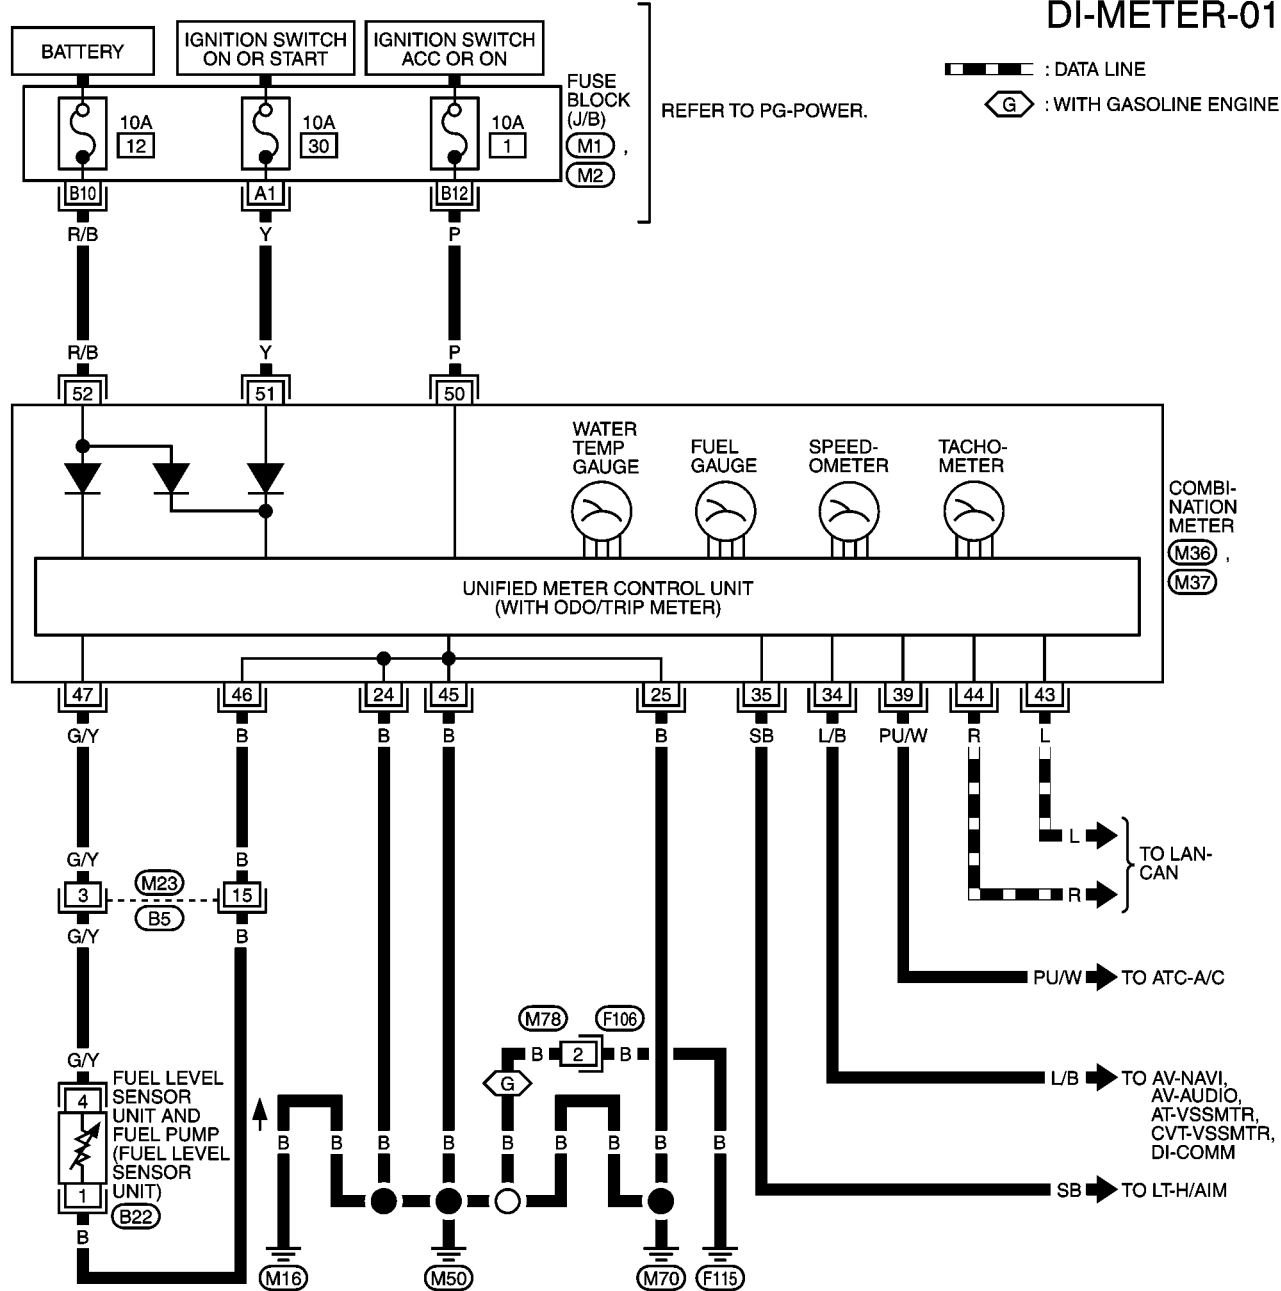

REFER TO THE FOLLOWING.  
(M1), (M2) -FUSE BLOCK-  
JUNCTION BOX (J/B)

MKWA1885E

## COMBINATION METERS (LHD MODELS)


### Combination Meter Self-Diagnosis PERFORMING SELF-DIAGNOSIS MODE

EKS009A8

1. Turn the ignition switch to the "LOCK" position.
2. Press both reset buttons on the combination meter and keep them depressed.
3. Turn the ignition switch to the "ON" position, while keeping the reset buttons pressed.
4. Release both reset buttons then self-diagnosis will start. The sequence (A to L) is activated by press the either reset buttons.


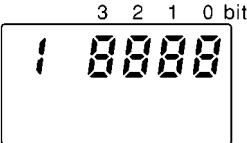
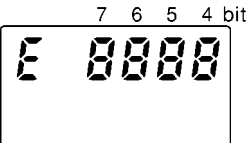



**NOTE:**

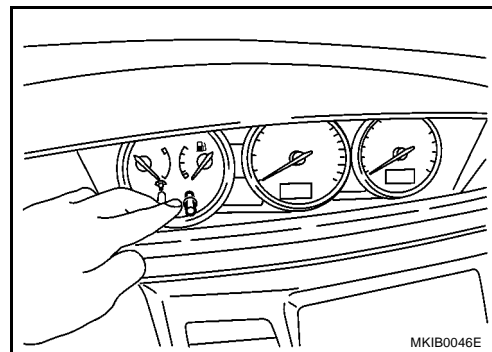If either reset button is not pressed for 20 seconds at each step or if the ignition switch is turned OFF, the self-diagnosis mode is exited.



	Check items	Display	Remarks
A)	Segment test	Refer to <a href="#">DI-38. "Segment Test Display"</a> .	All odometer, A/T indicator and ICC system display segments are ON.
B)	Work instruction code	<p>This code is an example.</p> <p>MKIB0002E</p>	This information is not used for service. Skip this step.
C)	Software code	<p>This code is an example.</p> <p>MKIB0003E</p>	This information is not used for service. Skip this step.
D)	EEPROM code	<p>This code is an example.</p> <p>MKIB0004E</p>	This information is not used for service. Skip this step.
E)	Hardware code	<p>This code is an example.</p> <p>MKIB0005E</p>	This information is not used for service. Skip this step.
F)	PCB code	<p>This code is an example.</p> <p>MKIB0006E</p>	This information is not used for service. Skip this step.

## COMBINATION METERS (LHD MODELS)


	Check items	Display	Remarks	
G)	Meter/gauge test (Sweeping movement)	 Flashing MKIB0007E	Tachometer, speedometer, fuel level gauge and water temperature gauge have sweeping movement test. (The meter/gauges operate MIN. → MAX., MAX. → MIN. for 2 times) The odo/trip meter segment flashes during the sweep movement.	A B C
H)	Error 1 (Bit 0 - Bit 3)	 This value is an example. MKIB0008E	The segment of each bit displays "0", meaning no malfunction. If the bit(s) displays figures other than "0", the item of the bit has malfunctioned. For details, refer to "Malfunction chart for Error 1 and Error E" below.	D E
I)	Error E (Bit 4 - Bit 7)	 This value is an example. MKIB0009E		F G
J)	Fuel warning lamp test	 Flashing MKIB0010E	Fuel warning lamp is on and odo/trip meter segment "FUEL" flashes.	H I J
K)	Fuel gauge calibration (CAL)	 This value is an example. MKIB0011E	This information is not used for service. Skip this step.	DI L
L)	Fuel gauge calibration (OLD)	 This value is an example. MKIB0012E	This information is not used for service. Skip this step.	M

## COMBINATION METERS (LHD MODELS)

**Malfunction Chart for “Error 1” and “Error E”**

Bit	Detectable items	Description of the malfunction	Displayed figure on the bit	
			Malfunction	No malfunction
0	Speedometer input signal	No input signal When no signal is detected for 5 minutes continuously with the ignition ON, it should be judged as signal malfunction. (If input signal is detected later, then the judgement will be canceled immediately.)	1	0
		Unusual input signal When any signal of frequency which would not exist in normal conditions is detected, it should be judged as signal malfunction.	2	
1	Tachometer input signal	No input signal When no signal is detected for 5 minutes continuously with the ignition ON, it should be judged as signal malfunction. (If input signal is detected later, then the judgement will be canceled immediately.)	1	0
		Unusual input signal When any signal of frequency which would not exist in normal conditions is detected, it should be judged as signal malfunction.	2	
2	Fuel level input signal	Short circuit When short circuit of the signal line is detected for 5 seconds or more, it should be judged as short-circuit malfunction.	1	0
		Open circuit When open circuit of the signal line is detected for 5 seconds or more, it should be judged as open-circuit malfunction.	2	
3	Water temperature input signal	Short circuit When short circuit of the signal line is detected for 5 seconds or more, it should be judged as short-circuit malfunction.	1	0
		Open circuit When open circuit of the signal line is detected for 5 seconds or more, it should be judged as open-circuit malfunction.	2	
4	Reset buttons	Short circuit for reset buttons When the short circuit is continuously detected for 5 minutes or more, it should be judged as short-circuit malfunction.	Right side reset button has malfunctioned.	0
			Left side reset button has malfunctioned.	
			Both reset buttons have malfunctioned.	
5	CPU	CPU RAM malfunction	1	0
6	—	—	0	0

### Segment Test Display

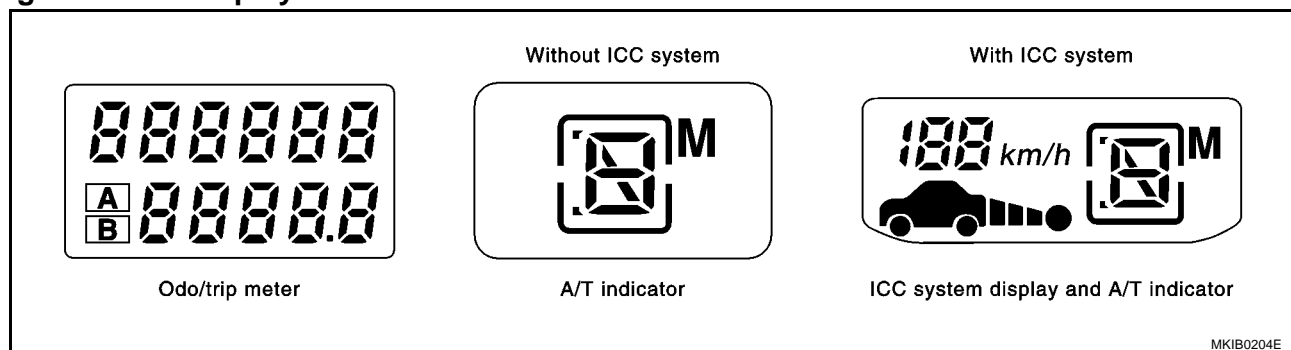

# COMBINATION METERS (LHD MODELS)

## Combination Meter Calibration

After replacing a combination meter, it might be necessary to calibrate the fuel gauge/low fuel warning lamp. In case the fuel warning lamp is flashing after replacing the combination meter perform the following:

1. Press both reset buttons.
2. Turn the ignition ON **and keep the reset buttons depressed for at least 5 seconds.**
3. Release both reset buttons.  
The low fuel warning lamp will stop flashing and the combination meter will shown CALL and possibly CALL FAIL. Showing CALL FAIL does not indicate a concern as this might be related to the current (unexpected) amount of fuel in the tank.

## Trouble Diagnoses PRELIMINARY CHECK

EKS009A9

### 1. CHECK WARNING LAMPS

1. Turn ignition switch ON.
2. Warning lamps should illuminate (seat belt warning or door warning etc.).

Do warning lamps illuminate?

- YES >> GO TO 2.  
NO >> Power supply and ground check. Refer to [DI-42, "Power Supply and Ground Circuit Check"](#).

### 2. CHECK SELF-DIAGNOSIS MODE OPERATION

Perform self-diagnosis mode. Refer to [DI-36, "PERFORMING SELF-DIAGNOSIS MODE"](#).

Can self-diagnosis mode be activated?

- YES >> GO TO 3.  
NO >> Replace unified meter control unit. Refer to [DI-48, "Removal and Installation for Combination Meter"](#).

### 3. CHECK METER/GAUGE OPERATION

Check meter/gauge operation in self-diagnosis mode (Meter/gauge test). Refer to [DI-36, "PERFORMING SELF-DIAGNOSIS MODE"](#).

Is any malfunction indicated in self-diagnosis mode?

- YES >> GO TO "Symptom Chart 1". Refer to [DI-41, "SYMPTOM CHART"](#).  
NO >> GO TO 4.

### 4. CHECK SEGMENTS

Check all odo/trip meter segments in self-diagnosis mode (Odo/trip meter segment test). Refer to [DI-36, "PERFORMING SELF-DIAGNOSIS MODE"](#).

Is any malfunction indicated in self-diagnosis mode?

- YES >> GO TO "Symptom Chart 1". Refer to [DI-41, "SYMPTOM CHART"](#).  
NO >> GO TO 5.

### 5. CHECK FUEL WARNING LAMP

Check fuel warning lamp in self-diagnosis mode (Fuel warning lamp test). Refer to [DI-36, "PERFORMING SELF-DIAGNOSIS MODE"](#).

Does fuel warning lamp illuminate?

- YES >> GO TO "Symptom Chart 1". Refer to [DI-41, "SYMPTOM CHART"](#).  
NO >> GO TO 6.

## COMBINATION METERS (LHD MODELS)

---

### 6. CHECK INPUT SIGNALS

---

Check input signals from each sensors in self-diagnosis mode (Error 1 and Error E). Refer to [DI-36, "PERFORMING SELF-DIAGNOSIS MODE"](#) .

OK or NG

OK >> GO TO 7.

NG >> GO TO "Symptom Chart 2". Refer to [DI-41, "SYMPTOM CHART"](#) .

### 7. CHECK OTHER MALFUNCTION

---

Check each malfunction according to the instruction of the "SYMPTOM CHART 3". Refer to [DI-41, "SYMPTOM CHART"](#) .

OK or NG

OK >> Combination meter is OK.

NG >> Check the case of malfunction.



## COMBINATION METERS (LHD MODELS)

### SYMPTOM CHART

#### Symptom Chart 1

Symptom	Possible causes	Repair order
Odo/trip meter indicates malfunction in Diagnosis mode.	Unified meter control unit	Replace unified meter control unit. Refer to <a href="#">DI-48, "Removal and Installation for Combination Meter"</a> .
Multiple meter/gauge indicate malfunction in Diagnosis mode.		
One of speedometer/tachometer/fuel gauge/water temp. gauge indicates malfunction in Diagnosis mode.		

#### Symptom Chart 2

Symptom	Possible causes	Repair order
Speedometer input signal indicates malfunction in Diagnosis mode.	Speedometer input signal	Check signal for speedometer. Refer to <a href="#">DI-43, "Inspection/Vehicle Speed Signal (With ESP/TCS/ABS Control System)"</a> or <a href="#">DI-43, "Inspection/Vehicle Speed Signal (Without ESP/TCS/ABS Control System)"</a> .
Tachometer input signal indicates malfunction in Diagnosis mode.	Tachometer input signal	Check signal for tachometer. Refer to <a href="#">DI-43, "Inspection/Engine Speed Signal"</a> .
Fuel level input signal indicates malfunction in Diagnosis mode.	Fuel level input signal	Check signal for tachometer. Refer to <a href="#">DI-44, "Inspection/Fuel Level Sensor Unit"</a> .
Water temperature input signal Indicates malfunction in Diagnosis mode.	Water temp. gauge input signal	Check signal for water temp. gauge. Refer to <a href="#">DI-46, "Inspection/Water Temperature Gauge"</a> .
Reset buttons indicates malfunction in Diagnosis mode.	Unified meter control unit	Replace unified meter control unit assembly. Refer to <a href="#">DI-48, "Removal and Installation for Combination Meter"</a> .
CPU indicates malfunction in Diagnosis mode.	Unified meter control unit	Replace unified meter control unit assembly. Refer to <a href="#">DI-48, "Removal and Installation for Combination Meter"</a> .

#### Symptom Chart 3

Symptom	Possible causes	Repair order
Fuel gauge pointer fluctuates, Indicator wrong value or varies.	-	Check the case of malfunction. Refer to <a href="#">DI-46, "The Fuel Gauge Pointer Fluctuates Indicator Wrong Value or Varies"</a> .
Fuel gauge does not move to "F" position.	-	Check the case of malfunction. Refer to <a href="#">DI-46, "The Fuel Gauge Does Not Move to F-position"</a> .
Fuel gauge does not work.	-	Check the case of malfunction. Refer to <a href="#">DI-47, "The Fuel Gauge Does Not Work"</a> .

# COMBINATION METERS (LHD MODELS)


## Power Supply and Ground Circuit Check

EKS009AA

### 1. POWER SUPPLY CIRCUIT CHECK

1. Disconnect combination meter connector.
2. Check voltage between combination meter harness connector and ground in the following conditions.

Terminals		Ignition switch position			
(+) (–)		OFF	ACC	ON	
Connector	Terminal (wire color)				
M37	50 (P)	Ground	0V	Battery voltage	Battery voltage
M37	51 (Y)	Ground	0V	0V	Battery voltage
M37	52 (R/B)	Ground	Battery voltage	Battery voltage	Battery voltage

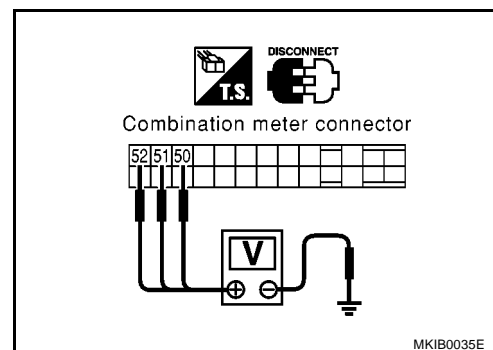

OK or NG

OK >> GO TO 2.


NG >> Check the following.

- 10A fuse [No. 1, located in fuse block (J/B)].
- 10A fuse [No. 30, located in fuse block (J/B)].
- 10A fuse [No. 12, located in fuse block (J/B)].
- Harness for open or short between fuse and combination meter.

### 2. GROUND CIRCUIT CHECK

Check continuity between combination meter and ground in the following conditions.

Terminals			Continuity
(+)		(-)	
Connector	Terminal		
M36	25	Ground	Yes
M37	45	Ground	Yes
M36	24	Ground	Yes

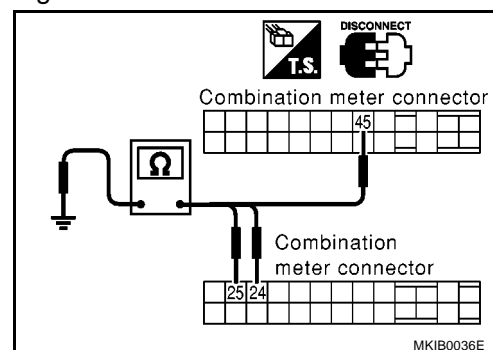

OK or NG

OK >> INSPECTION END.

NG >> Harness for open ground circuit.

## COMBINATION METERS (LHD MODELS)

### Inspection/Vehicle Speed Signal (With ESP/TCS/ABS Control System)

EKS009AB

#### 1. ESP/TCS/ABS CONTROL UNIT SYSTEM INSPECTION

Perform ESP/TCS/ABS control unit self-diagnosis. Refer to [BRC-81, "Functions of CONSULT-II"](#).

OK or NG

OK >> Recheck "PRELIMINARY CHECK".

NG >> Check ESP/TCS/ABS control system. Refer to [BRC-65, "TROUBLE DIAGNOSIS"](#).

### Inspection/Vehicle Speed Signal (Without ESP/TCS/ABS Control System)

EKS009AC

#### 1. ABS ACTUATOR AND ELECTRIC UNIT SYSTEM INSPECTION

Perform ABS actuator and electric unit self-diagnosis. Refer to [BRC-24, "CONSULT-II Functions"](#).

OK or NG

OK >> Recheck "PRELIMINARY CHECK".

NG >> Check ABS control system. Refer to [BRC-15, "TROUBLE DIAGNOSIS"](#).

### Inspection/Engine Speed Signal

EKS009AD

#### 1. ECM SYSTEM INSPECTION

Perform ECM self-diagnosis. Refer to [EC-120, "CONSULT-II Function"](#) (QG engine with EURO-OBD), [EC-677, "CONSULT-II Function"](#) (QG engine without EURO-OBD), [EC-1082, "CONSULT-II Function"](#) (QR engine with EURO-OBD), [EC-1542, "CONSULT-II Function"](#) (QR engine without EURO-OBD), [EC-1849, "CONSULT-II Function"](#) (YD 93kW engine), [EC-2055, "CONSULT-II Function"](#) (YD 100kW engine with EURO-OBD), [EC-2386, "CONSULT-II Function"](#) (YD 100kW engine without EURO-OBD).

OK or NG

OK >> Recheck "PRELIMINARY CHECK".

NG >> Perform "Diagnostic Procedure" for displayed DTC.

A

B

C

D

E

F

G

H

I

J

DI

L

M

# COMBINATION METERS (LHD MODELS)

## Inspection/Fuel Level Sensor Unit

EKS009AE

### FUEL LEVEL SENSOR UNIT

The following symptoms do not indicate a malfunction.

- Depending on vehicle posture or driving circumstance, the fuel level in the tank varies, and the pointer may fluctuate.
- If the vehicle is fueled with the ignition switch ON, the pointer will move slowly.

### LOW-FUEL WARNING LAMP

Depending on vehicle posture or driving circumstance, the fuel level in the tank varies, and the warning lamp ON timing may be changed.

## 1. HARNESS CONNECTOR INSPECTION

- Turn the ignition switch OFF.
- Check combination meter, fuel level sensor unit and terminals (meter-side, module-side, and harness-side) for poor connection and bend.


OK or NG

OK >> GO TO 2.

NG >> Repair or replace terminals or connectors.

## 2. CHECK FUEL LEVEL SENSOR INPUT SIGNAL CIRCUIT

- Turn ignition switch "OFF".
- Disconnect fuel level sensor unit connector and combination meter connector.
- Check the following.
  - Harness continuity between fuel level sensor unit pump harness connector B22 terminal 4 (G/Y) and combination meter harness connector M37 terminal 47 (G/Y).
  - Harness continuity between combination meter harness connector M37 terminal 47 (G/Y) and ground.

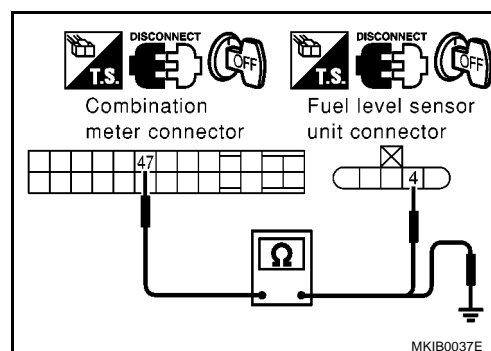

Terminals				Continuity
(+) (+)		(-) (-)		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M37	47 (G/Y)	B22	4 (G/Y)	Yes
M37	47 (G/Y)	Ground		No

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

## 3. CHECK FUEL LEVEL SENSOR GROUND CIRCUIT

Check continuity between fuel level sensor unit harness connector B22 terminal 1 (B) and combination meter harness connector M37 terminal 46 (B).


1 - 46 : Continuity should exist.

1 - Ground : Continuity should not exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

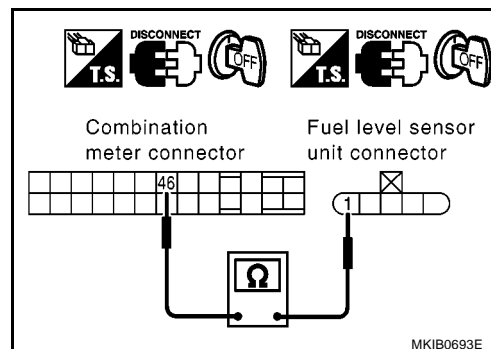

## COMBINATION METERS (LHD MODELS)

---

### 4. FUEL LEVEL SENSOR UNIT INSPECTION

---

Refer to [DI-48, "FUEL LEVEL SENSOR UNIT CHECK"](#) .

OK or NG

OK >> GO TO 5.

NG >> Replace fuel level sensor unit.

### 5. CHECK INSTALLATION CONDITION

---

Check fuel level sensor unit installation, and check whether the float arm interferes or binds with any components inside the arm.

OK or NG

OK >> Replace combination meter.

NG >> Install fuel level sensor unit properly.

A

B

C

D

E

F

G

H

I

J

DI

L

M

# COMBINATION METERS (LHD MODELS)

## Inspection/Water Temperature Gauge

EKS009AF

### 1. ECM SYSTEM INSPECTION

Perform ECM self-diagnosis. Refer to [EC-120, "CONSULT-II Function"](#) (QG engine with EURO-OBD), [EC-677, "CONSULT-II Function"](#) (QG engine without EURO-OBD), [EC-1082, "CONSULT-II Function"](#) (QR engine with EURO-OBD), [EC-1542, "CONSULT-II Function"](#) (QR engine without EURO-OBD), [EC-1849, "CONSULT-II Function"](#) (YD 93kW engine), [EC-2055, "CONSULT-II Function"](#) (YD 100kW engine with EURO-OBD), [EC-2386, "CONSULT-II Function"](#) (YD 100kW engine without EURO-OBD).

OK or NG

- OK >> Recheck "PRELIMINARY CHECK".
- NG >> Perform "Diagnostic Procedure" for displayed DTC.

## The Fuel Gauge Pointer Fluctuates Indicator Wrong Value or Varies

EKS009AG

### 1. CHECK THE FUEL GAUGE POINTER FOR FLUCTUATION

Does the indication value fluctuate during driving or before/after stop?

OK or NG

- OK >> The pointer fluctuation may be caused by fuel level change in the fuel tank.
- NG >> Ask the customer about the situation when the symptom occurs in detail, and Perform the trouble diagnosis.

## The Fuel Gauge Does Not Move to F-position

EKS009AH

### 1. QUESTION 1

Does it take a long time for the pointer to move to F-position?

YES or NO?

- YES >> GO TO 2.
- NO >> GO TO 3.

### 2. QUESTION 2

Was the vehicle fueled with the ignition switch ON?

YES or NO?

- YES >> Be sure to fuel the vehicle with the ignition switch OFF. Otherwise it will take a long time to move to F-position because of the characteristic of the fuel gauge.
- NO >> GO TO 3.

### 3. QUESTION 3

Is the floor or the vehicle inclined?

YES or NO?

- YES >> It may not be filled fully.
- NO >> GO TO 4.

### 4. QUESTION 4

During driving, does the fuel gauge pointer move gradually toward E-position?

YES or NO?

- YES >> Check the components. Refer to [DI-48, "Electrical Components Inspection"](#).
- NO >> The float arm may interfere or bind with any of the components in the fuel tank.

## COMBINATION METERS (LHD MODELS)

### The Fuel Gauge Does Not Work

EKS009AI

#### 1. HARNESS CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Check combination meter, fuel level sensor unit and terminals (meter side, and harness side) for poor connection and bend.

##### OK or NG

- OK >> GO TO 2.  
NG >> Repair connector.

#### 2. CHECK INSTALLATION CONDITION

Check fuel level sensor unit installation (refer to [FL-4, "FUEL LEVEL SENSOR UNIT, FUEL FILTER AND FUEL PUMP ASSEMBLY \(QG AND QR\)"](#) or [FL-11, "FUEL LEVEL SENSOR UNIT"](#) (YD and F9Q)), and check whether the float arm interferes or binds with any components inside the arm.

##### OK or NG

- OK >> Recheck "PRELIMINARY CHECK".  
NG >> Check fuel level sensor unit. Refer to [DI-48, "Electrical Components Inspection"](#) .

A

B

C

D

E

F

G

H

I

J

DI

L

M

## COMBINATION METERS (LHD MODELS)

### Electrical Components Inspection

EKS009AJ


#### FUEL LEVEL SENSOR UNIT CHECK

For removal, refer to [FL-4, "FUEL LEVEL SENSOR UNIT, FUEL FILTER AND FUEL PUMP ASSEMBLY \(QG AND QR\)"](#) or [FL-11, "FUEL LEVEL SENSOR UNIT"](#) (YD and F9Q) for Gasoline engine models.

Check the resistance between terminals 1 and 4.

Ohmmeter		Float position		mm (in)	Resistance value (Ω)
(+)	(-)				
4	1	*1	Full	35 (1.38)	Approx. 4.5 - 5.5
		*2	Empty	179 (7.05)	Approx. 80 - 83


\*1 and \*2: When float rod is in contact with stopper.

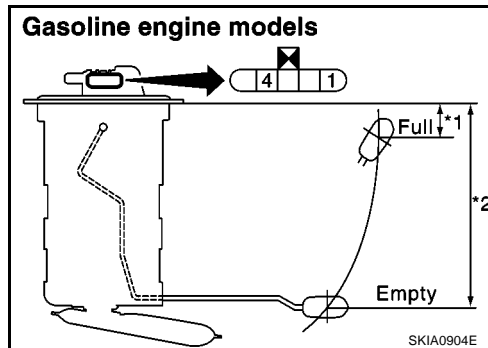

### Removal and Installation for Combination Meter

EKS009AK


1. Remove the cluster lid A. Refer to [IP-5, "CLUSTER LID A"](#).
2. Remove the screws (4), and pull out combination meter.
3. Disconnect connectors and remove combination meter.

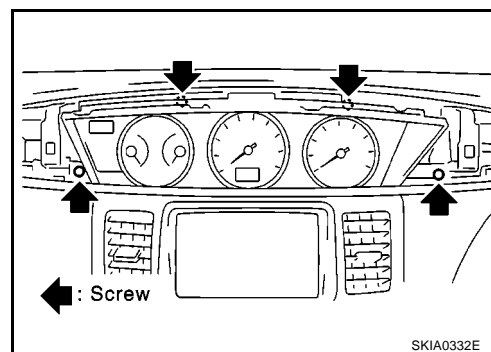

### Disassembly and Assembly for Combination Meter

EKS009AL

1. Disengage the tabs (8) to separate front cover.
2. Remove upper housing.

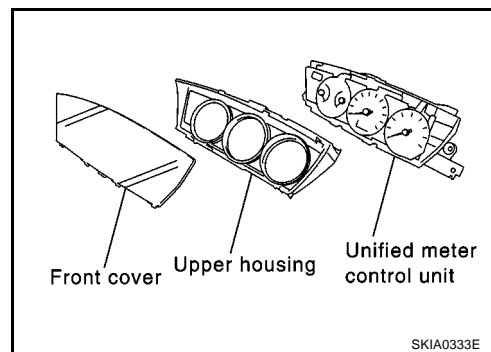



## COMBINATION METERS (RHD MODELS)

### COMBINATION METERS (RHD MODELS)

PFP:24810

#### System Description


EKS009AM

#### UNIFIED CONTROL METER

- Speedometer, odo/trip meter, tachometer, fuel gauge and water temperature gauge are controlled totally by control unit built in combination meter.
- Signal of speedometer, odo/trip meter, tachometer and water temperature gauge are received via CAN communication line.
- Digital meter is adopted for odo/trip meter.\*  
\*The record of the odometer is kept even if the battery cable is disconnected. The record of the trip meter is erased when the battery cable is disconnected.
- Odo/trip meter, A/T indicator and ICC system display segments can be checked in self-diagnosis mode.
- Meter/gauge can be checked in self-diagnosis mode.

#### HOW TO CHANGE THE DISPLAY FOR ODO/TRIP METER

- The CAN communication signals (vehicle speed signal) from ESP/TCS/ABS control unit or ABS actuation and electric unit, and the memory signals from the meter memory circuit are processed by the combination meter, and the mileage is displayed.
- Operating the odometer/trip switch allows switching the mode in the following order.

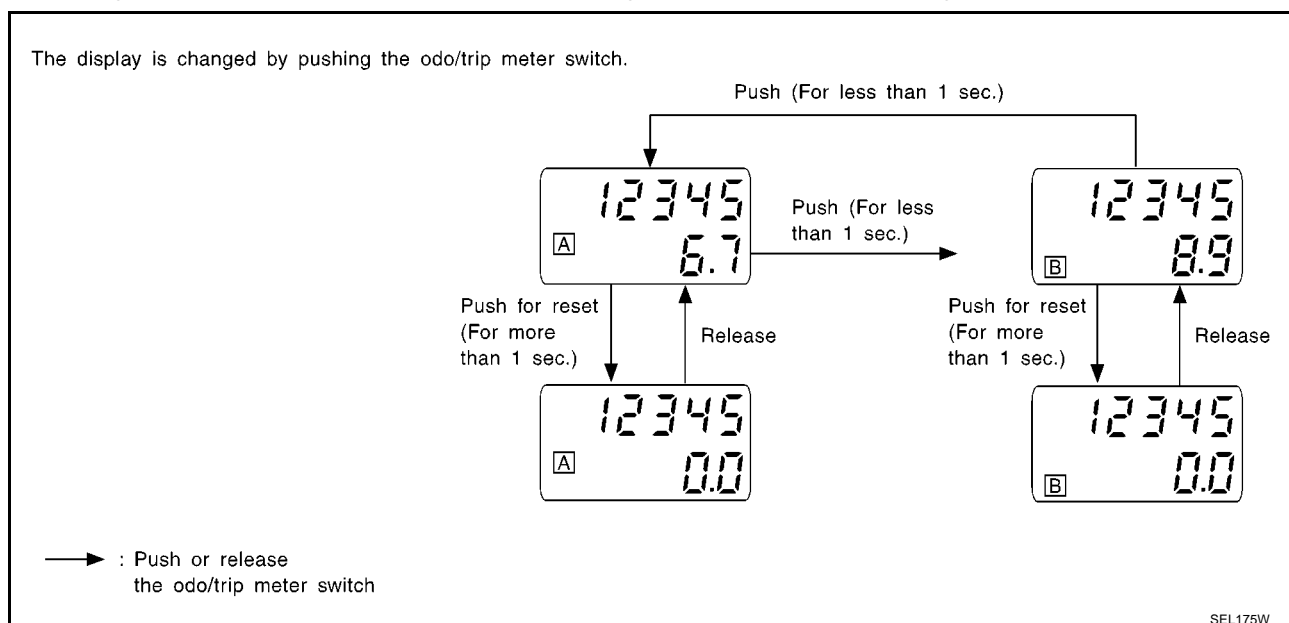

- The odo/trip meter display switching and trip display resetting can be identified by the time from pressing the odo/trip meter switch to releasing it.
- When resetting with trip A displayed, only trip A display is reset (same as trip B).

#### POWER SUPPLY AND GROUND CIRCUIT

Power is supplied at all times

- through 10A fuse [NO. 12, located in the fuse block (J/B)]
- to combination meter terminal 39.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [NO. 30, located in the fuse block (J/B)]
- to combination meter terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [NO. 1, located in the fuse block (J/B)]
- to combination meter terminal 37.

Ground is supplied

- to combination meter terminals 11, 12 and 32
- through body grounds M16, M50, M70 and F115 (Gasoline engine models) or

## COMBINATION METERS (RHD MODELS)

---

- through body grounds M16, M50 and M70 (Diesel engine models).

### WATER TEMPERATURE GAUGE

The water temperature gauge indicates the engine coolant temperature.

ECM provides a water temperature signal to combination meter for water temperature gauge with CAN communication line.

### TACHOMETER

The tachometer indicates engine speed in revolution per minutes (rpm). ECM provides an engine speed signal to combination meter for tachometer with CAN communication line.

### FUEL GAUGE

The fuel gauge indicates the approximate fuel level in the fuel tank.

The fuel gauge is regulated by a variable resistor signal supplied

- to combination meter terminal 34 for the fuel level sensor
- from terminal 4 of the fuel level sensor unit
- through terminal 1 of the fuel level sensor unit and
- through combination meter terminal 33

### SPEEDOMETER

ESP/TCS/ABS control unit or ABS actuator and electric unit provides a vehicle speed signal to the combination meter for the speedometer with CAN communication line.

### CAN Communication System Description

EKS0017B

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

# COMBINATION METERS (RHD MODELS)

## CAN Communication Unit for Gasoline Engine with CVT and A/T Models

EKS0017C

Go to CAN system, when selecting your car model from the following table.

Body type	Sedan/Wagon/Hatch back									
Axle	2WD									
Engine	QR20DE					QG18DE				
Transmission	CVT					A/T				
Brake control	ESP				ABS		ESP		ABS	
ICC system	×	×								
Tyre pressure monitoring system	×		×		×		×		×	
CAN communication unit										
ECM	×	×	×	×	×	×	×	×	×	×
TCM	×	×	×	×	×	×	×	×	×	×
ESP/TCS/ABS control unit	×	×	×	×			×	×		
ABS actuator and electric unit (control unit)					×	×			×	×
Data link connector	×	×	×	×	×	×	×	×	×	×
Steering angle sensor	×	×	×	×			×	×		
Smart entrance control unit	×	×	×	×	×	×	×	×	×	×
Tyre pressure monitoring control unit	×		×		×		×		×	
ICC unit	×	×								
ICC sensor	×	×								
Combination meter	×	×	×	×	×	×	×	×	×	×
CAN system type	Type 17	Type 18	Type 19	Type 20	Type 21	Type 22	Type 23	Type 24	Type 25	Type 26
CAN communication type	<a href="#">DI-52</a>		<a href="#">DI-54</a>		<a href="#">DI-56</a>		<a href="#">DI-58</a>		<a href="#">DI-60</a>	


×:Applicable

## COMBINATION METERS (RHD MODELS)


### TYPE 17/TYPE18

#### System Diagram

- Type 17

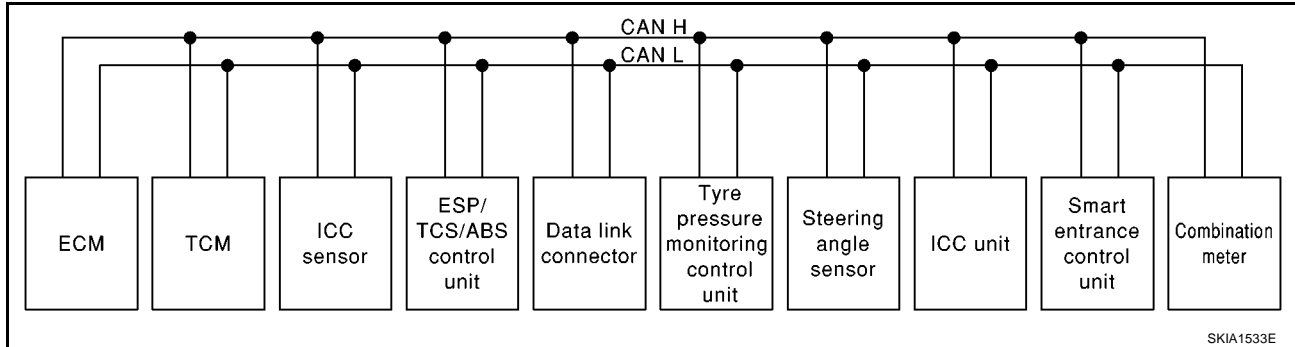

- Type 18

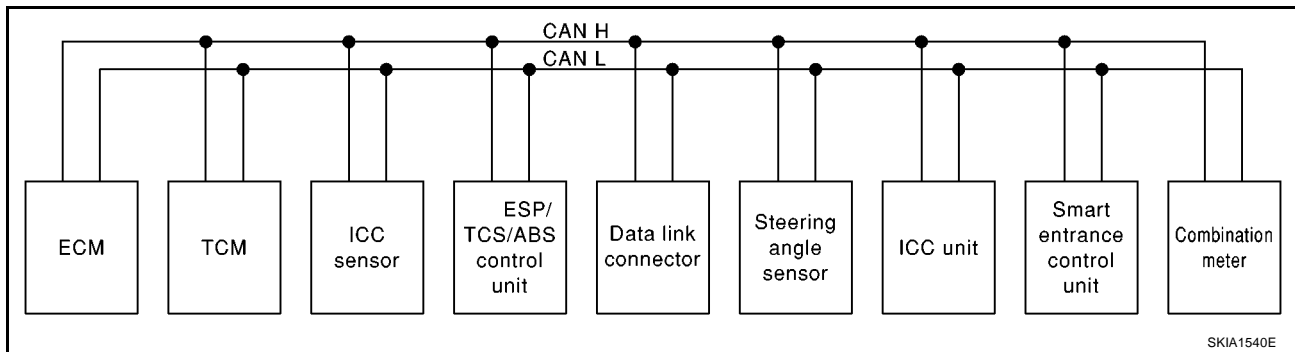

# COMBINATION METERS (RHD MODELS)

## Input/Output Signal Chart

T: Transmit R: Receive


Signals	ECM	TCM	ESP/ TCS / ABS control unit	Steer- ing angle sensor	Smart entranc e con- trol unit	Tyre pres- sure moni- toring control unit	ICC unit	ICC sensor	Combi- nation meter
Engine speed signal	T	R	R				R		R
Accelerator pedal position signal	T	R	R				R		
Closed throttle position signal	T						R		
ICC steering switch signal	T						R		
Shift pattern signal		T					R		
Parking brake switch signal			T				R		
ICC system display signal							T		R
ICC sensor signal							R	T	
ESP operation signal	R		T				R		
TCS operation signal	R		T				R		
ABS operation signal	R	R	T				R		
Stop lamp switch signal		R	T						
Steering wheel angle sensor signal			R	T					
Wheel speed sensor signal			T				R		
Rear window defogger signal	R				T				
Heater fan switch signal	R								T
Air conditioner switch signal	R								T
Primary pulley revolution signal	R	T					R		
Secondary pulley revolution signal	R	T					R		
ICC operation signal	R						T		
Brake switch signal	R						T		
MI signal	T								R
Current gear position signal		T							R
Engine coolant temperature signal	T						R		R
Fuel consumption signal	T								R
Vehicle speed signal			T						R
	R								T
Seat belt reminder signal					R				T
Lighting switch position signal					T				R
Flashing indicator signal					T				R
Engine cooling fan speed signal	T				R				
Child lock indicator signal					T				R
Door switches state signal					T				R
A/C compressor signal	T				R				
Tyre pressure signal						T			R

# COMBINATION METERS (RHD MODELS)


## TYPE 19/TYPE 20

### System Diagram

- Type 19

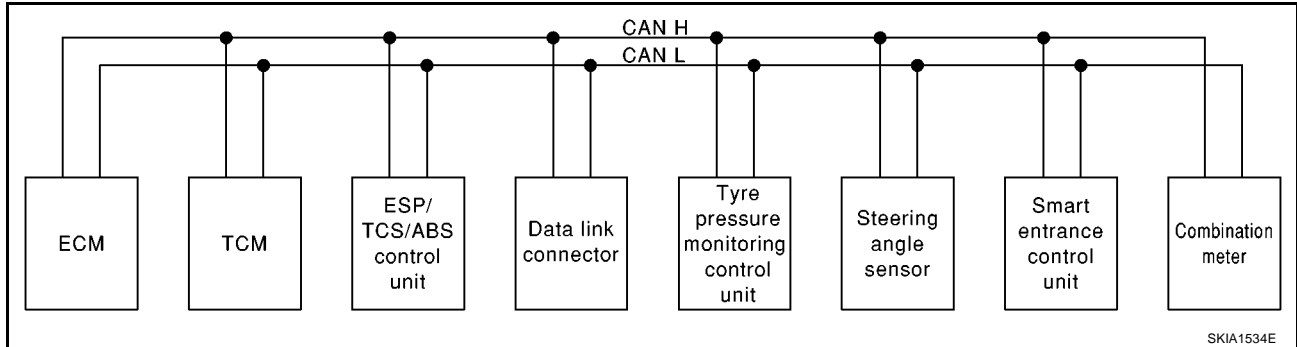

- Type 20

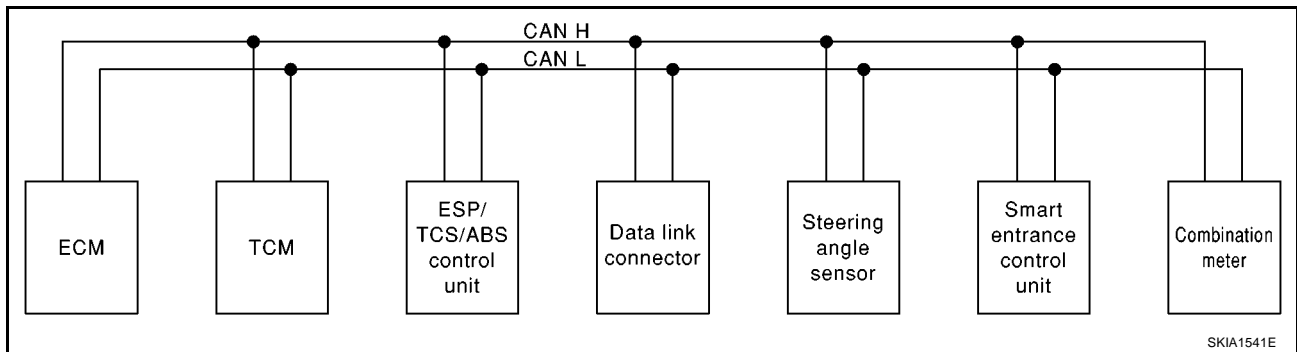

# COMBINATION METERS (RHD MODELS)

## Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	ESP/TCS / ABS control unit	Steering angle sensor	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T	R	R				R
Accelerator pedal position signal	T	R	R				
ESP operation signal	R		T				
TCS operation signal	R		T				
ABS operation signal	R	R	T				
Stop lamp switch signal		R	T				
Steering angle sensor signal			R	T			
Rear window defogger signal	R				T		
Heater fan switch signal	R						T
Air conditioner switch signal	R						T
Primary pulley revolution signal	R	T					
Secondary pulley revolution signal	R	T					
MI signal	T						R
Current gear position signal		T					R
Engine coolant temperature signal	T						R
Fuel consumption signal	T						R
Vehicle speed signal			T				R
	R						T
Seat belt reminder signal					R		T
Lighting switch position signal					T		R
Flashing indicator signal					T		R
Engine cooling fan speed signal	T				R		
Child lock indicator signal					T		R
Door switches state signal					T		R
A/C compressor signal	T				R		
Tyre pressure signal						T	R


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
DI  
L  
M

## COMBINATION METERS (RHD MODELS)


### TYPE 21/TYPE 22

#### System Diagram

- Type 21

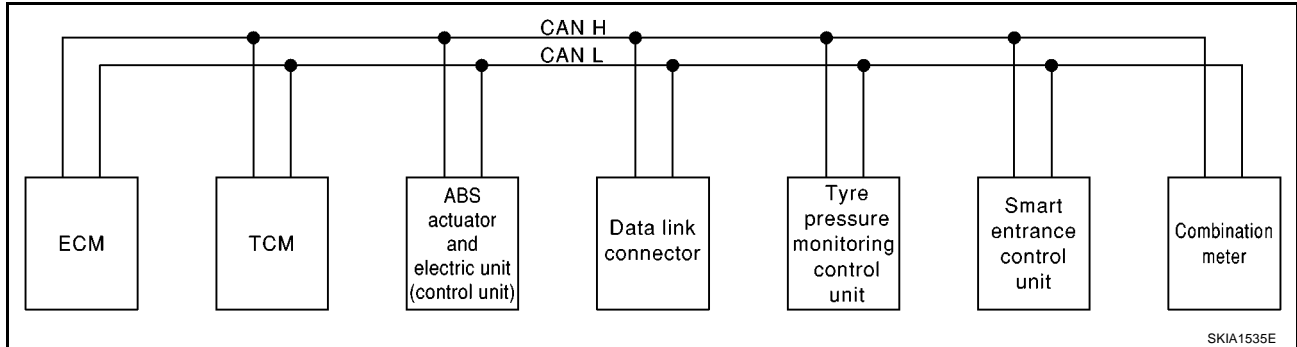

- Type 22

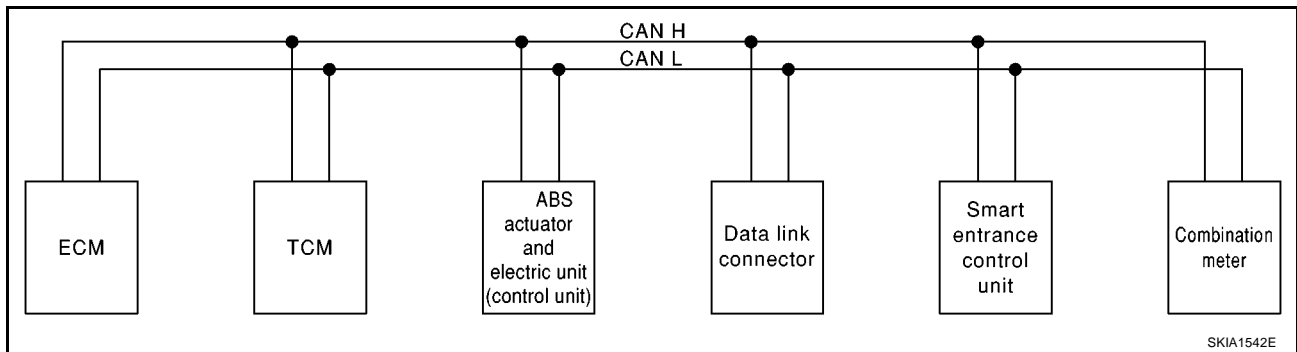



# COMBINATION METERS (RHD MODELS)

## Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	ABS actuator and electric unit (control unit)	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T	R				R
Stop lamp switch signal		R	T			
Rear window defogger signal	R			T		
Heater fan switch signal	R					T
Air conditioner switch signal	R					T
Primary pulley revolution signal	R	T				
Secondary pulley revolution signal	R	T				
MI signal	T					R
Current gear position signal		T				R
Engine coolant temperature signal	T					R
Fuel consumption signal	T					R
Vehicle speed signal			T			R
	R					T
Seat belt reminder signal				R		T
Lighting switch position signal				T		R
Flashing indicator signal				T		R
Engine cooling fan speed signal	T			R		
Child lock indicator signal				T		R
Door switches state signal				T		R
A/C compressor signal	T			R		
Tyre pressure signal					T	R

A

B

C

D

E

F

G

H

I

J

DI

L


M

# COMBINATION METERS (RHD MODELS)


## TYPE 23/TYPE 24

### System diagram

- Type 23

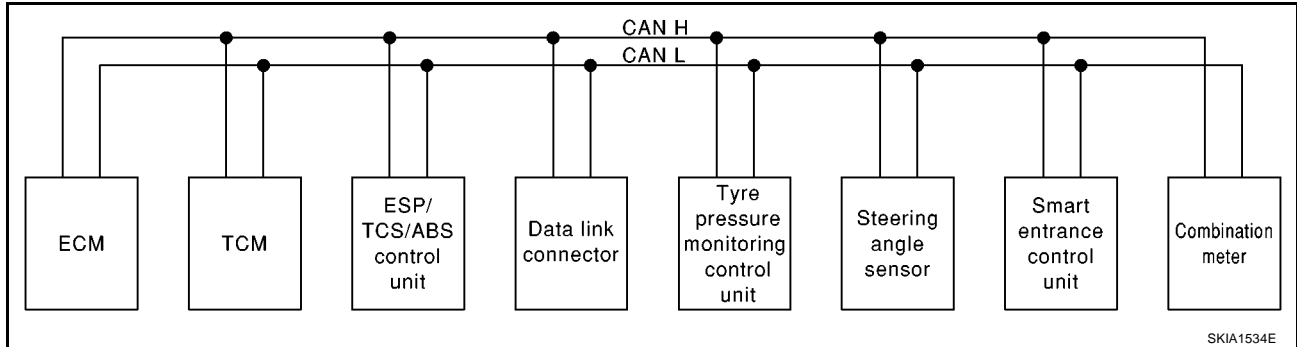

- Type 24

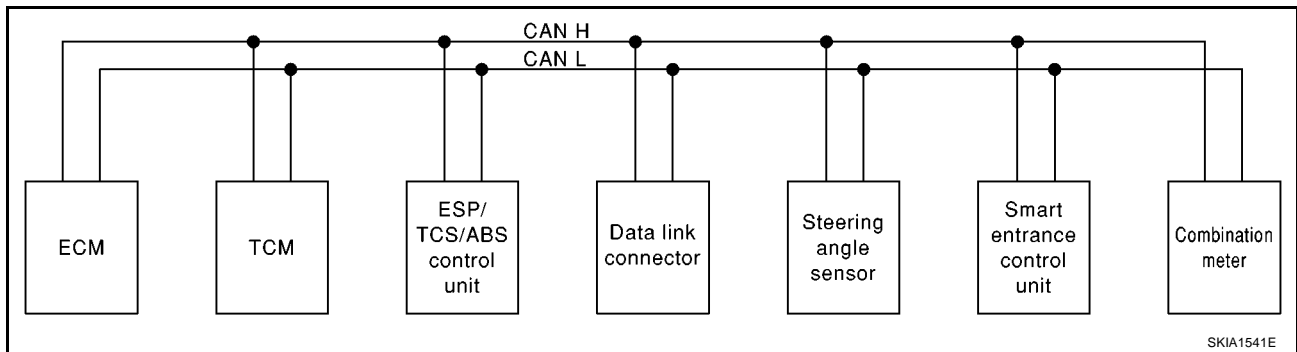

# COMBINATION METERS (RHD MODELS)

## Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	ESP/TCS / ABS control unit	Steering angle sensor	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T		R				R
Accelerator pedal position signal	T	R	R				
ESP operation signal	R		T				
TCS operation signal	R		T				
ABS operation signal	R	R	T				
Stop lamp switch signal		R	T				
Steering wheel angle sensor signal			R	T			
Rear window defogger signal	R				T		
Heater fan switch signal	R						T
Air conditioner switch signal	R						T
MI signal	T						R
Current gear position signal		T					R
Engine coolant temperature signal	T						R
Fuel consumption signal	T						R
Vehicle speed signal			T				R
	R						T
Seat belt reminder signal					R		T
Lighting switch position signal					T		R
Flashing indicator signal					T		R
Engine cooling fan speed signal	T				R		
Child lock indicator signal					T		R
Door switches state signal					T		R
A/C compressor signal	T				R		
ASCD main switch signal	T						R
ASCD cruise signal	T						R
Output shaft revolution signal	R	T					
Tyre pressure signal						T	R

A

B

C

D

E

F

G

H

I

J

DI

L


M

## COMBINATION METERS (RHD MODELS)


### TYPE 25/TYPE 26

#### System Diagram

- Type 25

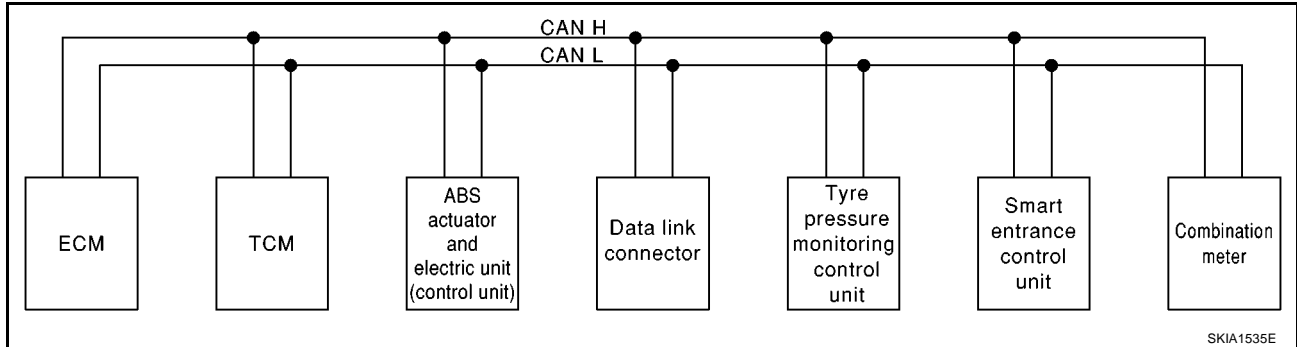

- Type 26

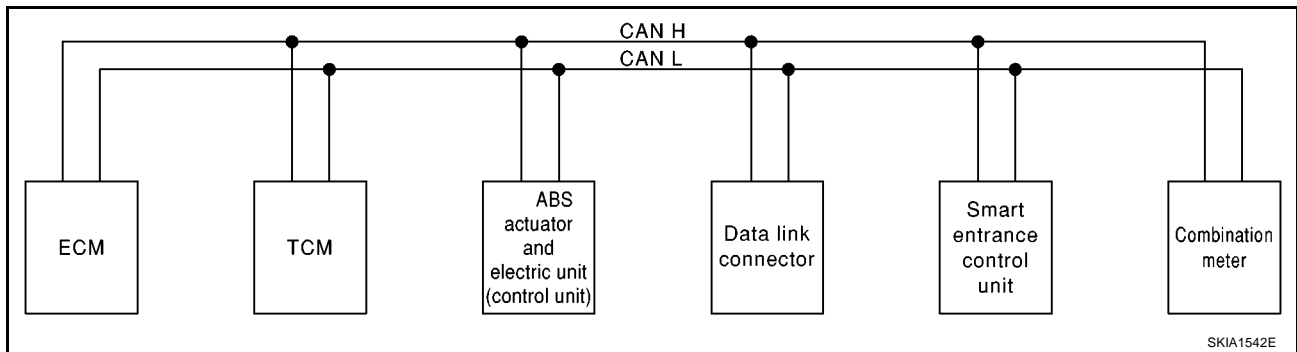

# COMBINATION METERS (RHD MODELS)

## Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	ABS actuator and electric unit (control unit)	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T	R				R
Stop lamp switch signal		R	T			
Rear window defogger signal	R			T		
Heater fan switch signal	R					T
Air conditioner switch signal	R					T
MI signal	T					R
Current gear position signal		T				R
Engine coolant temperature signal	T					R
Fuel consumption signal	T					R
Vehicle speed signal			T			R
	R					T
Seat belt reminder signal				R		T
Lighting switch position signal				T		R
Flashing indicator signal				T		R
Engine cooling fan speed signal	T			R		
Child lock indicator signal				T		R
Door switches state signal				T		R
A/C compressor signal	T			R		
Tyre pressure signal					T	R

A

B

C

D

E

F

G

H

I

J

DI

L

M

# COMBINATION METERS (RHD MODELS)

## CAN Communication Unit for Gasoline Engine with M/T Models

EKS0017D

Body type	Sedan/Wagon/Hatch back					
Axle	2WD					
Engine	QR20DE					QG16/QG18
Transmission	6M/T					5M/T
Brake control	ESP				ABS	
ICC system	×	×				
Tyre pressure monitoring system	×		×		×	
CAN communication unit						
ECM	×	×	×	×	×	×
ESP/TCS/ABS control unit	×	×	×	×		
ABS actuator and electric unit (control unit)					×	×
Data link connector	×	×	×	×	×	×
Steering angle sensor	×	×	×	×		
Smart entrance control unit	×	×	×	×	×	×
Tyre pressure monitoring control unit	×		×		×	
ICC unit	×	×				
ICC sensor	×	×				
Combination meter	×	×	×	×	×	×
CAN system type	Type 27	Type 28	Type 29	Type 30	Type 31	Type 32
CAN communication type	DI-63		DI-65		DI-67	


×:Applicable

COMBINATION METERS (RHD MODELS)


TYPE 27/TYPE 28

System Diagram

- Type 27

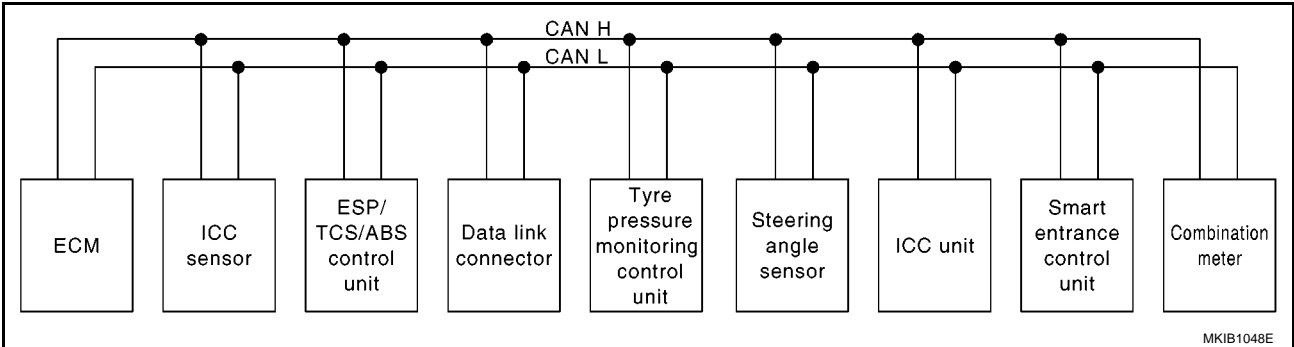

- Type 28

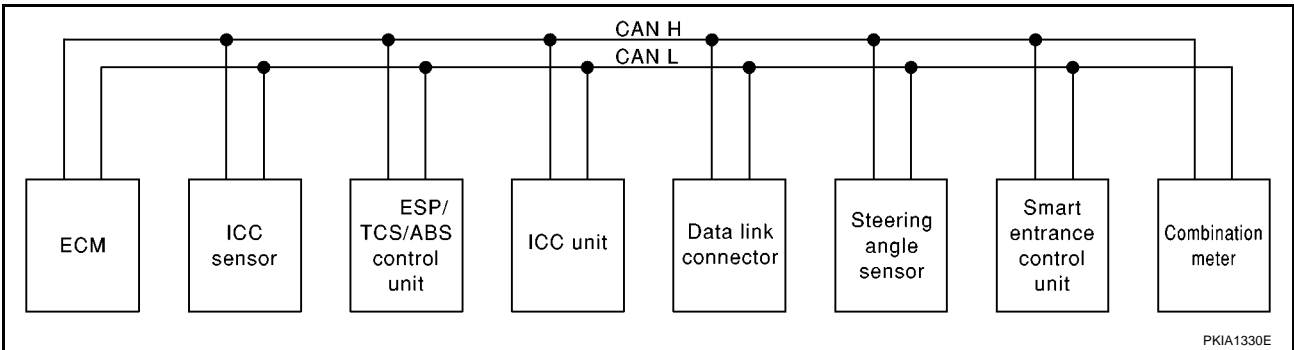

## COMBINATION METERS (RHD MODELS)

### Input/Output Signal Chart

T: Transmit R: Receive


Signals	ECM	ESP/ TCS / ABS con- trol unit	Steering angle sensor	Smart entrance control unit	Tyre pressure monitor- ing con- trol unit	ICC unit	ICC sen- sor	Combi- nation meter
Engine speed signal	T	R				R		R
Accelerator pedal position signal	T	R				R		
Closed throttle position signal	T					R		
ICC steering switch signal	T					R		
Parking brake switch signal		T				R		
ICC system display signal						T		R
ICC sensor signal						R	T	
ESP operation signal	R	T				R		
TCS operation signal	R	T				R		
ABS operation signal	R	T				R		
Stop lamp switch signal		T						
Steering wheel angle sensor signal		R	T					
Wheel speed sensor signal		T				R		
Rear window defogger signal	R			T				
Heater fan switch signal	R							T
Air conditioner switch signal	R							T
ICC operation signal	R					T		
Brake switch signal	R					T		
MI signal	T							R
Engine coolant temperature signal	T					R		R
Fuel consumption signal	T							R
Vehicle speed signal		T						R
	R							T
Seat belt reminder signal				R				T
Lighting switch position signal				T				R
Flashing indicator signal				T				R
Engine cooling fan speed signal	T			R				
Child lock indicator signal				T				R
Door switches state signal				T				R
A/C compressor signal	T			R				
Tyre pressure signal					T			R




COMBINATION METERS (RHD MODELS)

TYPE 29/TYPE 30  
System Diagram

- Type 29

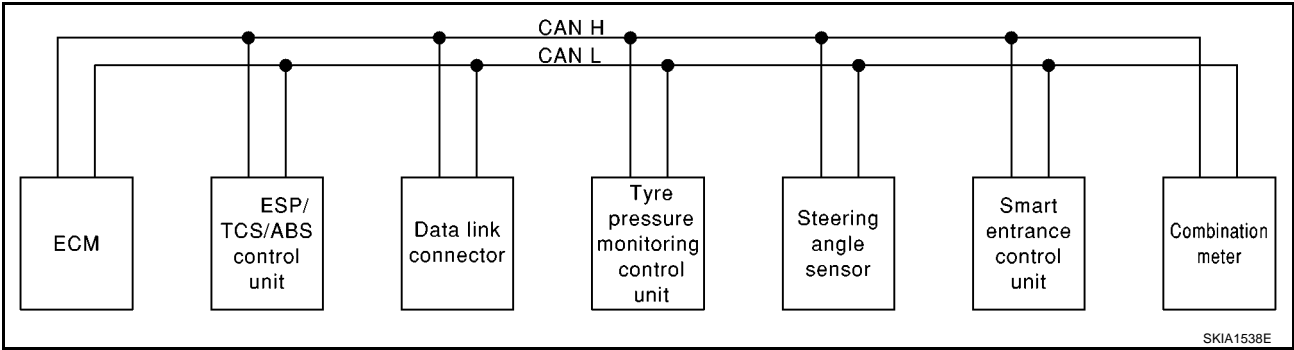

- Type 30

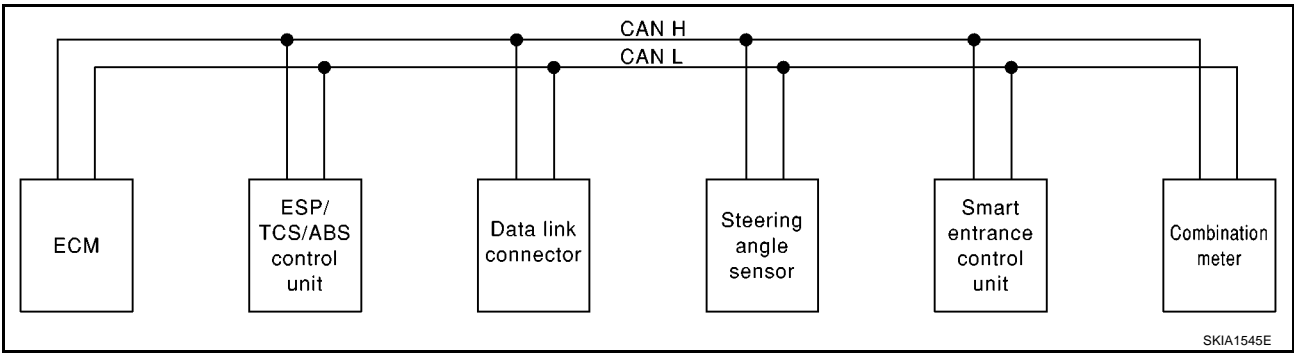

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
DI  
L  
M

## COMBINATION METERS (RHD MODELS)

### Input/Output Signal Chart


T: Transmit R: Receive

Signals	ECM	ESP/ TCS / ABS control unit	Steering angle sen- sor	Smart entrance control unit	Tyre pres- sure moni- toring control unit	Combina- tion meter
Engine speed signal	T	R				R
Accelerator pedal position signal	T	R				
ESP operation signal	R	T				
TCS operation signal	R	T				
ABS operation signal	R	T				
Steering wheel angle sensor signal		R	T			
Rear window defogger signal	R			T		
Heater fan switch signal	R					T
Air conditioner switch signal	R					T
MI signal	T					R
Engine coolant temperature signal	T					R
Fuel consumption signal	T					R
Vehicle speed signal		T				R
	R					T
Seat belt reminder signal				R		T
Lighting switch position signal				T		R
Flashing indicator signal				T		R
Engine cooling fan speed signal	T			R		
Child lock indicator signal				T		R
Door switches state signal				T		R
A/C compressor signal	T			R		
Tyre pressure signal					T	R


COMBINATION METERS (RHD MODELS)

TYPE 31/TYPE 32  
System Diagram

- Type 31

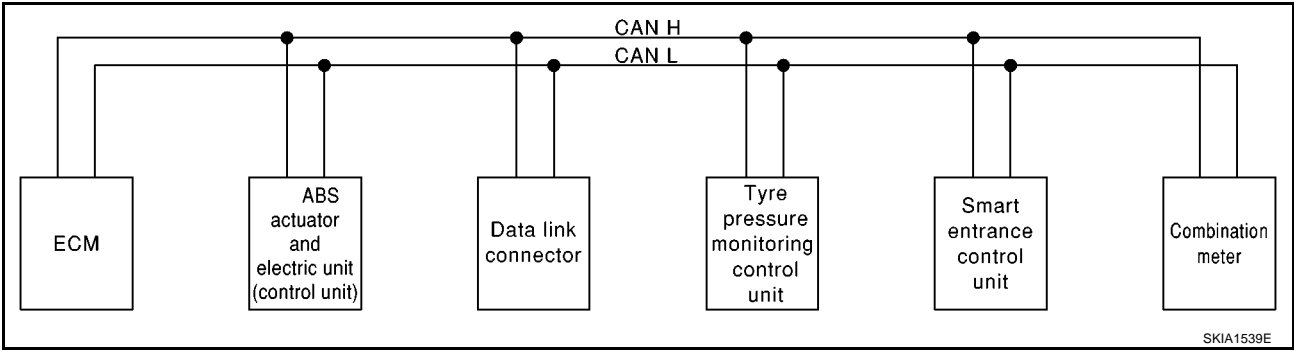

- Type 32

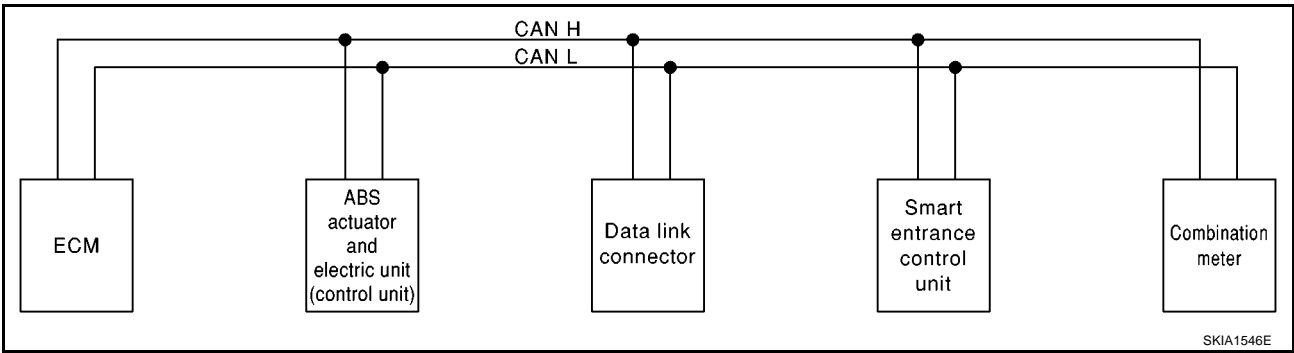

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
DI  
L  
M

## COMBINATION METERS (RHD MODELS)

### Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	ABS actuator and electric unit (control unit)	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T				R
Rear window defogger signal	R		T		
Heater fan switch signal	R				T
Air conditioner switch signal	R				T
MI signal	T				R
Engine coolant temperature signal	T				R
Fuel consumption signal	T				R
Vehicle speed signal		T			R
	R				T
Seat belt reminder signal			R		T
Lighting switch position signal			T		R
Flashing indicator signal			T		R
Engine cooling fan speed signal	T		R		
Child lock indicator signal			T		R
Door switches state signal			T		R
A/C compressor signal	T		R		
Tyre pressure signal				T	R

# COMBINATION METERS (RHD MODELS)

## CAN Communication Unit for Diesel Engine Models

EKS0017E

Body type	Sedan/Wagon/Hatch back			
Axle	2WD			
Engine	YD			
Transmission	6M/T			
Brake control	ESP		ABS	
Tyre pressure monitoring system	×		×	
CAN communication unit				
ECM	×	×	×	×
ESP/TCS/ABS control unit	×	×		
ABS actuator and electric unit (control unit)			×	×
Data link connector	×	×	×	×
Steering angle sensor	×	×		
Smart entrance control unit	×	×	×	×
Tyre pressure monitoring control unit	×		×	
Combination meter	×	×	×	×
CAN system type	Type 41	Type 42	Type 43	Type 44
CAN communication type	DI-70		DI-72	

×:Applicable

A

B

C

D

E

F

G

H

I

J

DI

L


M

## COMBINATION METERS (RHD MODELS)


### TYPE 41/TYPE 42

#### System Diagram

- Type 41

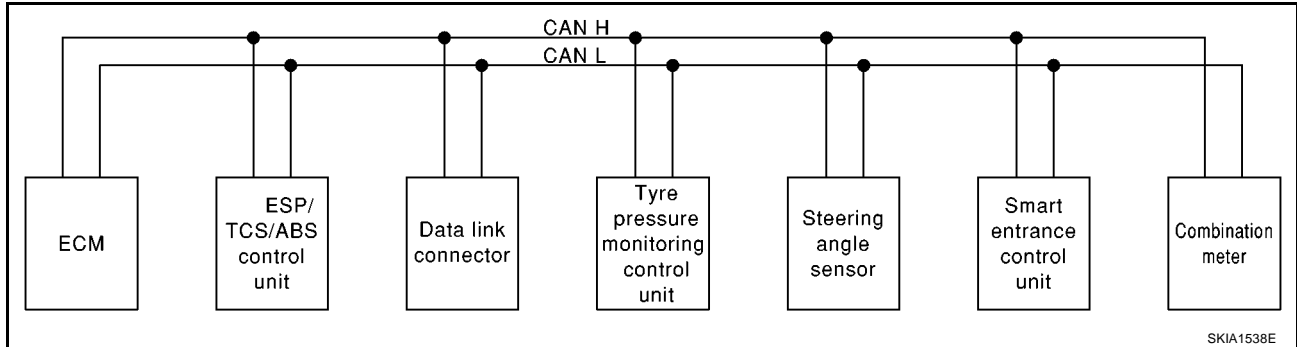

- Type 42

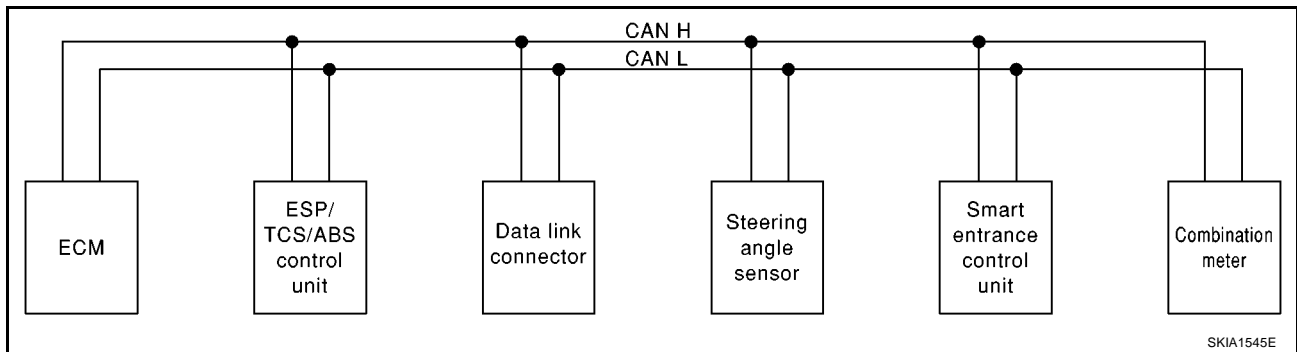

# COMBINATION METERS (RHD MODELS)

## Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	ESP/ TCS / ABS control unit	Steering angle sensor	Smart entrance control unit	Tyre pres- sure monitor- ing control unit	Combination meter
Engine speed signal	T	R				R
Accelerator pedal position signal	T	R				
Steering angle sensor signal		R	T			
Air conditioner switch signal	R					T
MI signal	T					R
Glow indicator lamp signal	T					R
Engine coolant temperature signal	T					R
Fuel consumption signal	T					R
Vehicle speed signal		T				R
	R				R	T
Seat belt reminder signal				R		T
Lighting switch position signal				T		R
Flashing indicator signal				T		R
Engine cooling fan speed signal	T			R		
Child lock indicator signal				T		R
Door switches state signal				T		R
A/C compressor signal	T			R		
Tyre pressure signal					T	R
ASCD SET lamp signal	T					R
ASCD CRUISE lamp signal	T					R

A

B

C

D

E

F

G

H

I

J

DI

L


M

## COMBINATION METERS (RHD MODELS)


### TYPE 43/TYPE 44

#### System Diagram

- Type 43

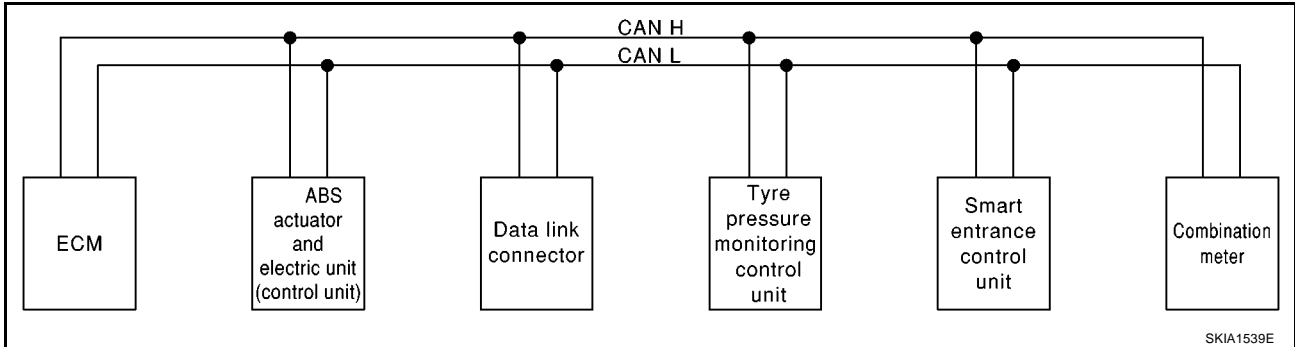

- Type 44

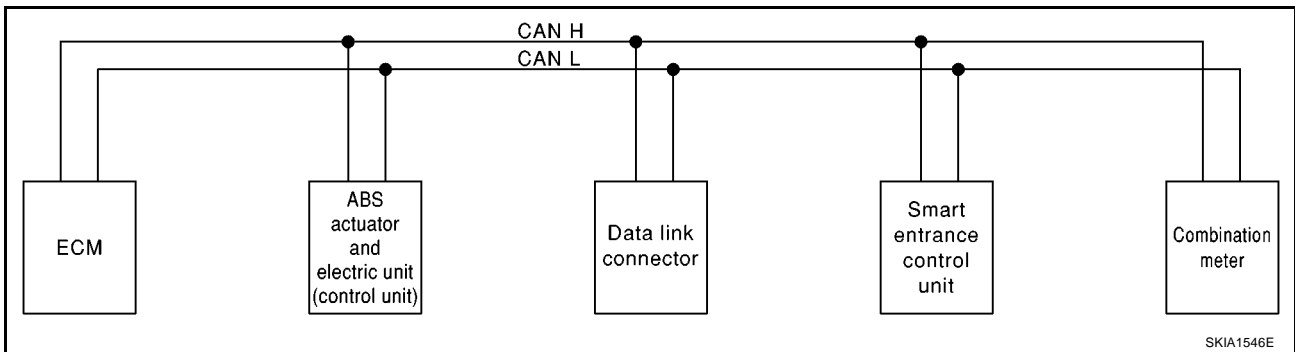



# COMBINATION METERS (RHD MODELS)


## Input/Output Signal Chart

T: Transmit R: Receive

Signals	ECM	ABS actuator and electric unit (control unit)	Smart entrance control unit	Tyre pressure monitoring control unit	Combination meter
Engine speed signal	T				R
Air conditioner switch signal	R				T
MI signal	T				R
Glow indicator lamp signal*1	T				R
Engine coolant temperature signal	T				R
Fuel consumption signal	T				R
Vehicle speed signal		T			R
	R			R	T
Seat belt reminder signal			R		T
Lighting switch position signal			T		R
Flashing indicator signal			T		R
Engine cooling fan speed signal	T		R		
Child lock indicator signal			T		R
Door switches state signal			T		R
A/C compressor signal	T		R		
Tyre pressure signal				T	R
ASCD SET lamp signal	T				R
ASCD CRUISE lamp signal	T				R

## Component Parts and Harness Connector Location

EKS009AO


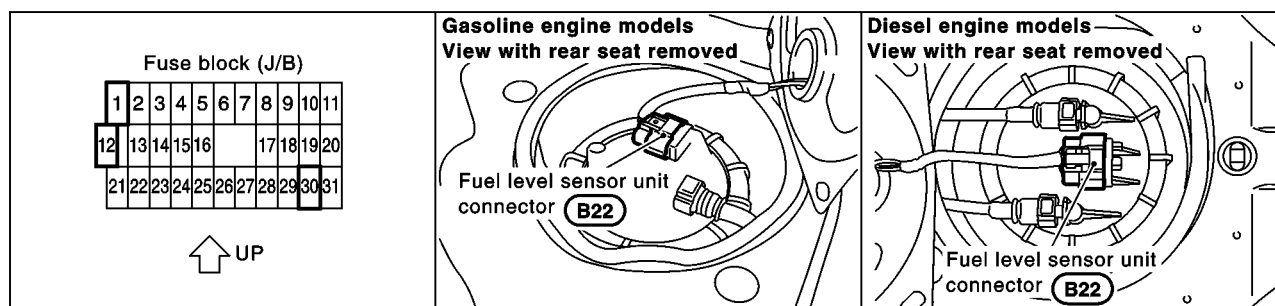


MKIB0048E

# COMBINATION METERS (RHD MODELS)

## Combination Meter CHECK

EKS009AP

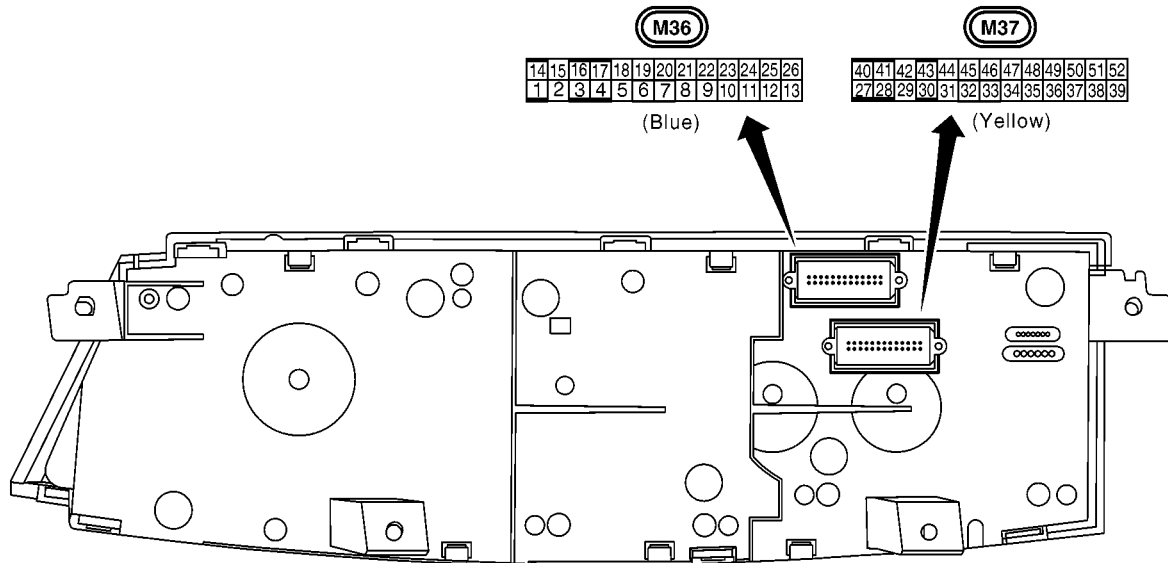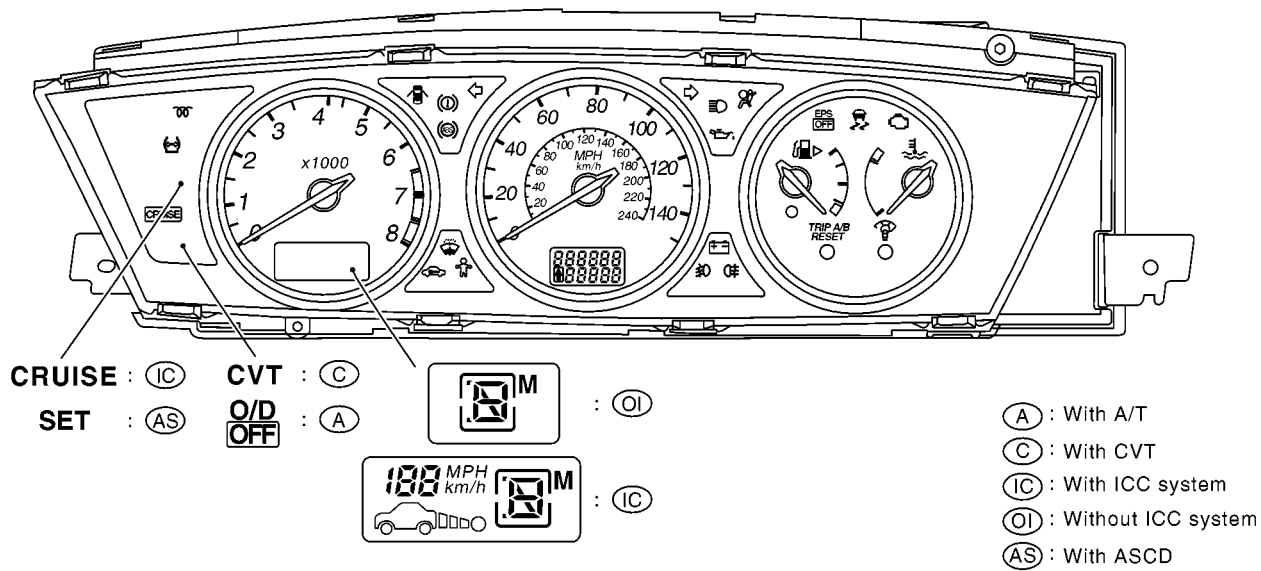


MKWA1886E

# COMBINATION METERS (RHD MODELS)

## Schematic

EKS009AQ

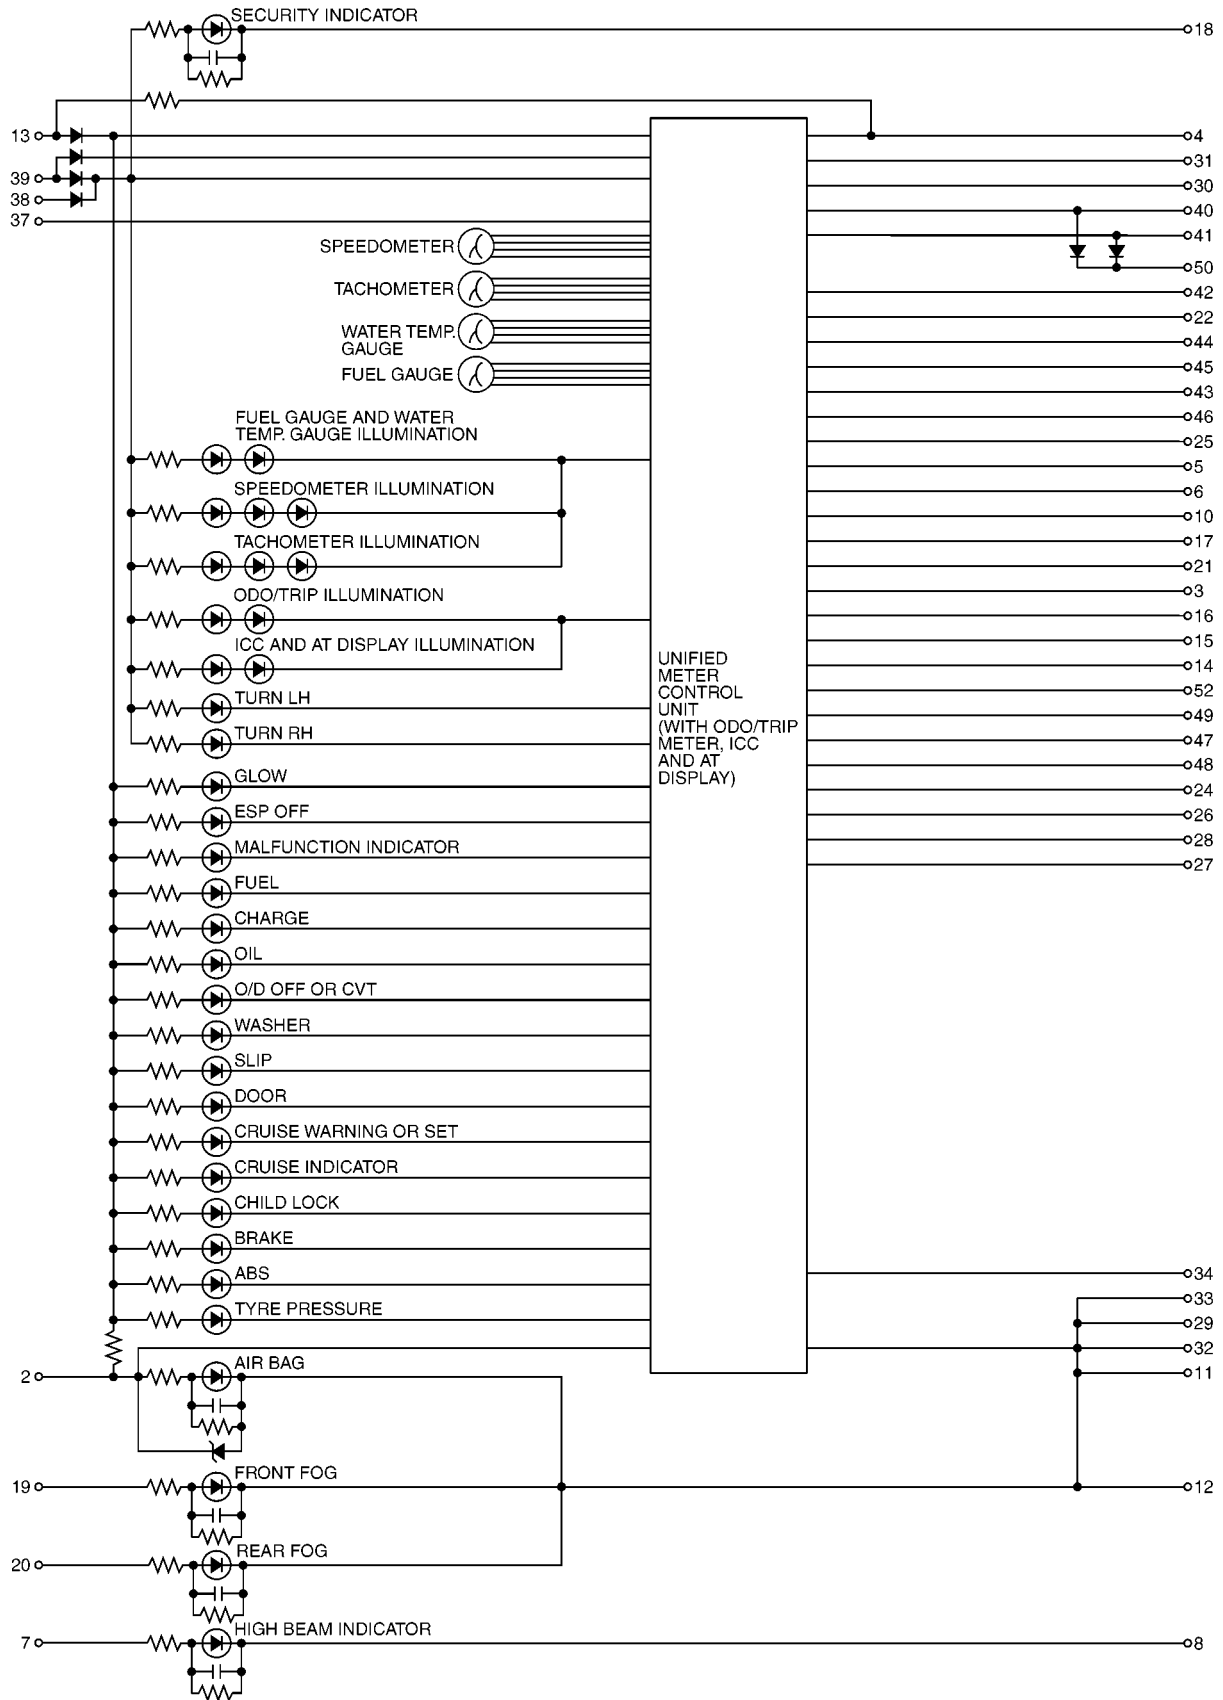



MKWA2478E

# COMBINATION METERS (RHD MODELS)

## Wiring Diagram — METER —

EKS009AR

### DI-METER-02

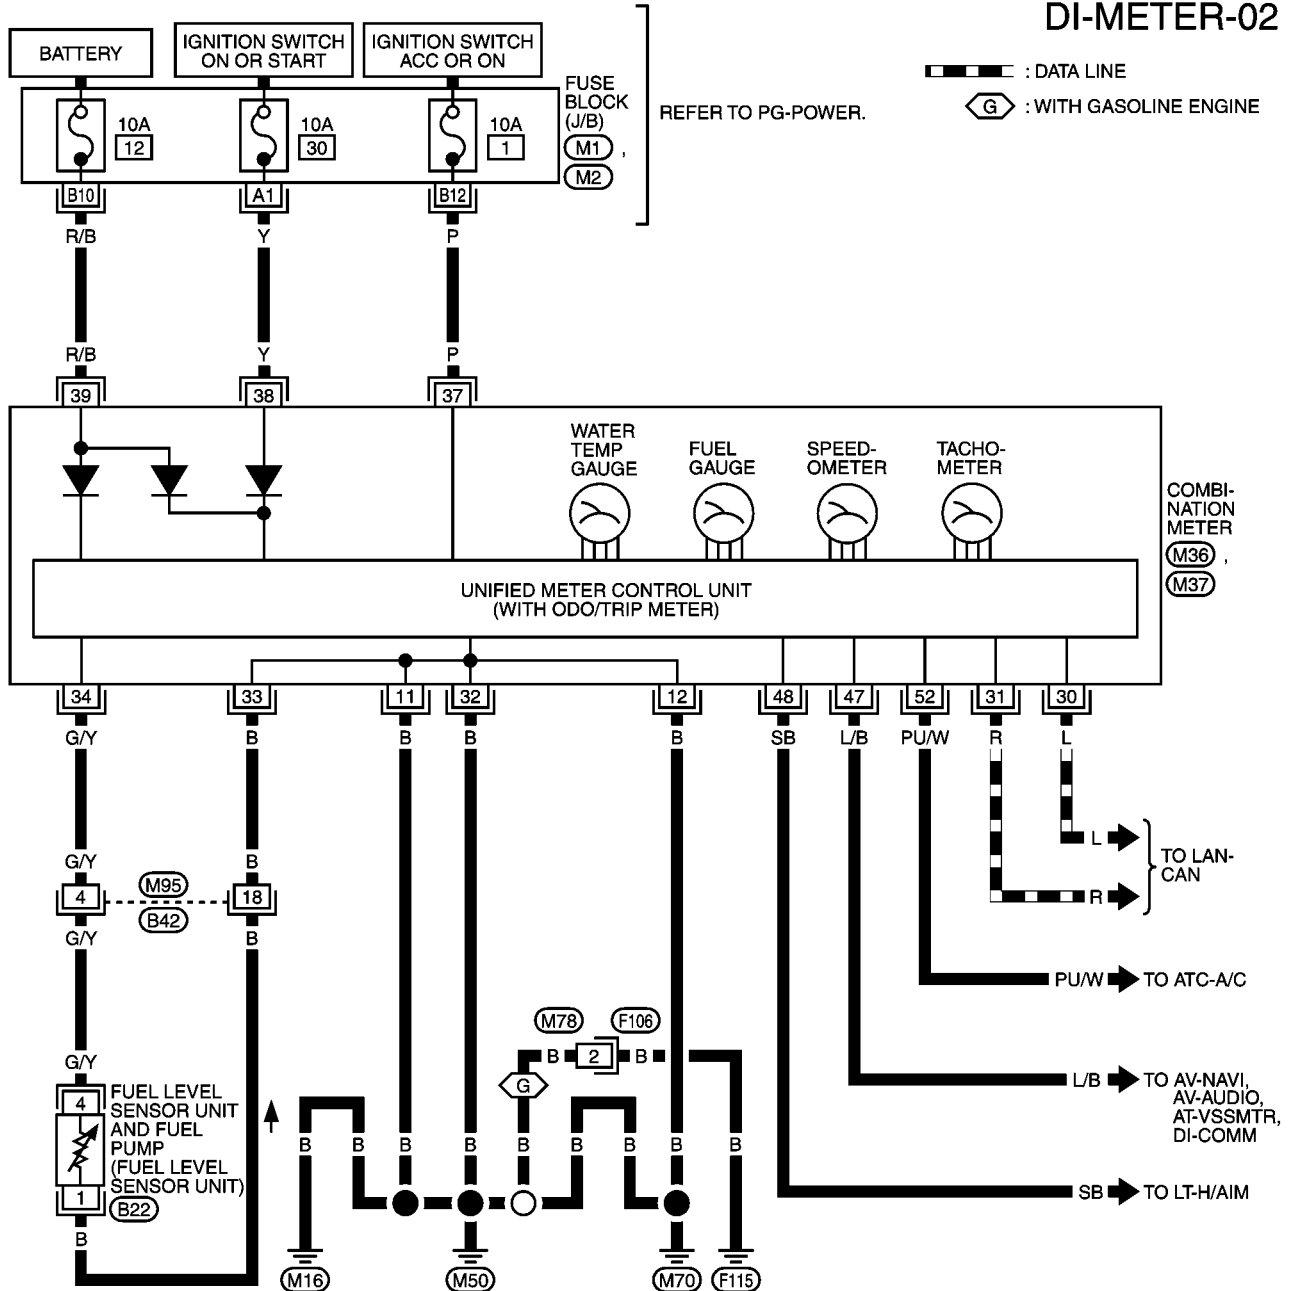

REFER TO THE FOLLOWING.

(M1), (M2) -FUSE BLOCK-JUNCTION BOX (J/B)

MKWA1888E

# COMBINATION METERS (RHD MODELS)


## Combination Meter Self-Diagnosis PERFORMING SELF-DIAGNOSIS MODE

EKS009AS

1. Turn the ignition switch to the "LOCK" position.
2. Press both reset buttons on the combination meter and keep them depressed.
3. Turn the ignition switch to the "ON" position, while keeping the reset buttons pressed.
4. Release both reset buttons then self-diagnosis will start. The sequence (A to L) is activated by press the either reset buttons.



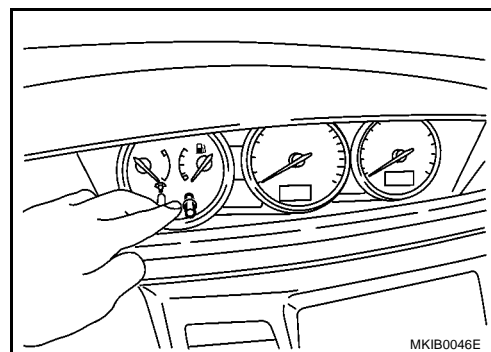



### NOTE:

If either reset button is not pressed for 20 seconds at each step or if the ignition switch is turned OFF, the self-diagnosis mode is exited.



	Check items	Display	Remarks
A)	Odometer segment test	Refer to <a href="#">DI-79. "Segment Test Display"</a> .	All odo/trip meter, A/T indicator and ICC system display segments are ON.
B)	Work instruction code	<p>This code is an example.</p> <p>MKIB0002E</p>	This information is not used for service. Skip this step.
C)	Software code	<p>This code is an example.</p> <p>MKIB0003E</p>	This information is not used for service. Skip this step.
D)	EEPROM code	<p>This code is an example.</p> <p>MKIB0004E</p>	This information is not used for service. Skip this step.
E)	Hardware code	<p>This code is an example.</p> <p>MKIB0005E</p>	This information is not used for service. Skip this step.
F)	PCB code	<p>This code is an example.</p> <p>MKIB0006E</p>	This information is not used for service. Skip this step.

## COMBINATION METERS (RHD MODELS)

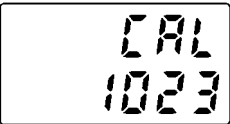
	Check items	Display	Remarks
G)	Meter/gauge test (Sweeping movement)	 <p style="text-align: center;">Flashing</p> <p style="text-align: right; font-size: small;">MKIB0007E</p>	Tachometer, speedometer, fuel level gauge and water temperature gauge have sweeping movement test. (The meter/gauges operate MIN. → MAX., MAX. → MIN. For 2 times) The odo/trip meter segment flashes during the sweep movement.
H)	Error 1 (Bit 0 - Bit 3)	<p style="text-align: center;">3 2 1 0 bit</p>  <p style="text-align: center;">This value is an example.</p> <p style="text-align: right; font-size: small;">MKIB0008E</p>	The segment of each bit displays "0", meaning no malfunction. If the bit(s) displays figures other than "0", the item of the bit has malfunctioned.
I)	Error E (Bit 4 - Bit 7)	<p style="text-align: center;">7 6 5 4 bit</p>  <p style="text-align: center;">This value is an example.</p> <p style="text-align: right; font-size: small;">MKIB0009E</p>	For details, refer to "Malfunction chart for Error 1 and Error E" below.
J)	Fuel warning lamp test	 <p style="text-align: center;">Flashing</p> <p style="text-align: right; font-size: small;">MKIB0010E</p>	Fuel warning lamp is on and odo/trip meter segment "FUEL" flashes.
K)	Fuel gauge calibration (CAL)	 <p style="text-align: center;">This value is an example.</p> <p style="text-align: right; font-size: small;">MKIB0011E</p>	This information is not used for service. Skip this step.
L)	Fuel gauge calibration (OLD)	 <p style="text-align: center;">This value is an example.</p> <p style="text-align: right; font-size: small;">MKIB0012E</p>	This information is not used for service. Skip this step.

# COMBINATION METERS (RHD MODELS)

**Malfunction Chart for “Error 1” and “Error E”**

Bit	Detectable items	Description of the malfunction	Displayed figure on the bit	
			malfunction	No malfunction
0	Speedometer input signal	No input signal When no signal is detected for 5 minutes continuously with the ignition ON, it should be judged as signal malfunction. (If input signal is detected later, then the judgement will be canceled immediately.)	1	0
		Unusual input signal When any signal of frequency which would not exist in normal conditions is detected, it should be judged as signal malfunction.	2	
1	Tachometer input signal	No input signal When no signal is detected for 5 minutes continuously with the ignition ON, it should be judged as signal malfunction. (If input signal is detected later, then the judgement will be canceled immediately.)	1	0
		Unusual input signal When any signal of frequency which would not exist in normal conditions is detected, it should be judged as signal malfunction.	2	
2	Fuel level input signal	Short circuit When short circuit of the signal line is detected for 5 seconds or more, it should be judged as short-circuit malfunction.	1	0
		Open circuit When open circuit of the signal line is detected for 5 seconds or more, it should be judged as open-circuit malfunction.	2	
3	Water temperature input signal	Short circuit When short circuit of the signal line is detected for 5 seconds or more, it should be judged as short-circuit malfunction.	1	0
		Open circuit When open circuit of the signal line is detected for 5 seconds or more, it should be judged as open-circuit malfunction.	2	
4	Reset buttons	Short circuit for reset buttons When the short circuit is continuously detected for 5 minutes or more, it should be judged as short-circuit malfunction.	1 Right side reset button has malfunctioned.	0
			2 Left side reset button has malfunctioned.	
			3 Both reset buttons have malfunctioned.	
5	CPU	CPU RAM malfunction	1	0
6	—	—	0	0

## Segment Test Display

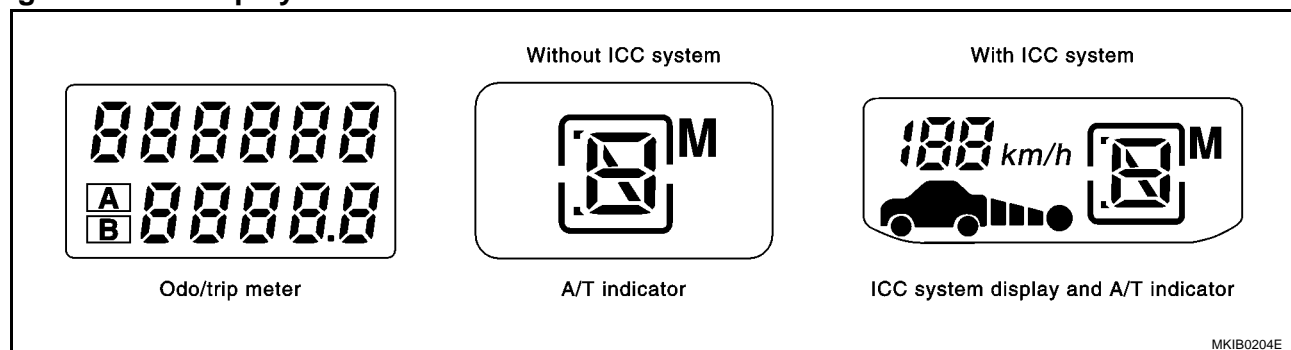

# COMBINATION METERS (RHD MODELS)

## Combination Meter Calibration

After replacing a combination meter, it might be necessary to calibrate the fuel gauge/low fuel warning lamp. In case the fuel warning lamp is flashing after replacing the combination meter perform the following:

1. Press both reset buttons.
2. Turn the ignition ON **and keep the reset buttons depressed for at least 5 seconds.**
3. Release both reset buttons.  
The low fuel warning lamp will stop flashing and the combination meter will shown CALL and possibly CALL FAIL. Showing CALL FAIL does not indicate a concern as this might be related to the current (unexpected) amount of fuel in the tank.

## Trouble Diagnoses PRELIMINARY CHECK

EKS009AT

### 1. CHECK WARNING LAMPS

1. Turn ignition switch ON.
2. Warning lamps should illuminate (seat belt warning or door warning etc.).

Do warning lamps illuminate?

- YES >> GO TO 2.  
NO >> Power supply and ground check. Refer to [DI-83, "Power Supply and Ground Circuit Check"](#) .

### 2. CHECK SELF-DIAGNOSIS MODE OPERATION

Perform self-diagnosis mode. Refer to [DI-77, "Combination Meter Self-Diagnosis"](#) .

Can self-diagnosis mode be activated?

- YES >> GO TO 3.  
NO >> Replace unified meter control unit. Refer to [DI-89, "Removal and Installation for Combination Meter"](#) .

### 3. CHECK METER/GAUGE OPERATION

Check meter/gauge operation in self-diagnosis mode (Meter/gauge test). Refer to [DI-77, "Combination Meter Self-Diagnosis"](#) .

Is any malfunction indicated in self-diagnosis mode?

- YES >> GO TO "Symptom Chart 1". Refer to [DI-77, "Combination Meter Self-Diagnosis"](#) .  
NO >> GO TO 4.

### 4. CHECK SEGMENTS

Check all odo/trip meter segments in self-diagnosis mode (Odo/trip meter segment test). Refer to [DI-77, "Combination Meter Self-Diagnosis"](#) .

Is any malfunction indicated in self-diagnosis mode?

- YES >> GO TO "Symptom Chart 1" [DI-82, "Symptom Chart 1"](#) .  
NO >> GO TO 5.

### 5. CHECK FUEL WARNING LAMP

Check fuel warning lamp in self-diagnosis mode (Fuel warning lamp test). Refer to [DI-77, "Combination Meter Self-Diagnosis"](#) .

Does fuel warning lamp illuminate?

- YES >> GO TO "Symptom Chart 1" [DI-82, "Symptom Chart 1"](#) .  
NO >> GO TO 6.



## COMBINATION METERS (RHD MODELS)

### 6. CHECK INPUT SIGNALS

Check input signals from each sensors in self-diagnosis mode (Error 1 and Error E). Refer to [DI-77, "Combination Meter Self-Diagnosis"](#) .

OK or NG

OK >> GO TO 7.

NG >> GO TO "Symptom Chart 2" [DI-82, "Symptom Chart 2"](#) .

### 7. CHECK OTHER MALFUNCTION

Check each malfunction according to the instruction of the "SYMPTOM CHART 3" [DI-82, "Symptom Chart 3"](#) .

OK >> Combination meter is OK.

NG >> Check the case of malfunction.

A

B

C

D

E

F

G

H

I

J

DI

L

M

## COMBINATION METERS (RHD MODELS)

### SYMPTOM CHART

#### Symptom Chart 1

Symptom	Possible causes	Repair order
Odo/trip meter indicates malfunction in Diagnosis mode.	Unified meter control unit	Replace unified meter control unit. Refer to <a href="#">DI-89, "Removal and Installation for Combination Meter"</a> .
Multiple meter/gauge indicate malfunction in Diagnosis mode.		
One of speedometer/tachometer/fuel gauge/water temp. gauge indicates malfunction in Diagnosis mode.		

#### Symptom Chart 2

Symptom	Possible causes	Repair order
Speedometer input signal indicates malfunction in Diagnosis mode.	Speedometer input signal	Check signal for speedometer. Refer to <a href="#">DI-84, "Inspection/Vehicle Speed Signal (With ESP/TCS/ABS Control System)"</a> or <a href="#">DI-84, "Inspection/Vehicle Speed Signal (Without ESP/TCS/ABS Control System)"</a> .
Tachometer input signal indicates malfunction in Diagnosis mode.	Tachometer input signal	Check signal for tachometer. Refer to <a href="#">DI-84, "Inspection/Engine Speed Signal"</a> .
Fuel level input signal indicates malfunction in Diagnosis mode.	Fuel level input signal	Check signal for tachometer. Refer to <a href="#">DI-85, "Inspection/Fuel Level Sensor Unit"</a> .
Water temperature input signal indicates malfunction in Diagnosis mode.	Water temp. gauge input signal	Check signal for water temp. gauge. Refer to <a href="#">DI-87, "Inspection/Water Temperature Gauge"</a> .
Reset buttons indicate malfunction in Diagnosis mode.	Unified meter control unit	Replace unified meter control unit assembly. Refer to <a href="#">DI-89, "Removal and Installation for Combination Meter"</a> .
CPU indicates malfunction in Diagnosis mode.	Unified meter control unit	Replace unified meter control unit assembly. Refer to <a href="#">DI-89, "Removal and Installation for Combination Meter"</a> .

#### Symptom Chart 3

Symptom	Possible causes	Repair order
Fuel gauge pointer fluctuates, Indicator wrong value or varies.	-	Check the case of malfunction. Refer to <a href="#">DI-87, "The Fuel Gauge Pointer Fluctuates Indicator Wrong Value or Varies"</a> .
Fuel gauge does not move to "F" position.	-	Check the case of malfunction. Refer to <a href="#">DI-87, "The Fuel Gauge Does Not Move to F-position"</a> .
Fuel gauge does not work.	-	Check the case of malfunction. Refer to <a href="#">DI-88, "The Fuel Gauge Does Not Work"</a> .

# COMBINATION METERS (RHD MODELS)


## Power Supply and Ground Circuit Check

EKS009AU

### 1. POWER SUPPLY CIRCUIT CHECK

1. Disconnect combination meter connector.
2. Check voltage between combination meter harness connector and ground in the following conditions.

Terminals		Ignition switch position			
(+) Terminal (wire color)		(-)	OFF	ACC	ON
Connector					
M37	37 (P)	Ground	0V	Battery voltage	Battery voltage
M37	38 (Y)	Ground	0V	0V	Battery voltage
M46	39 (R/B)	Ground	Battery voltage	Battery voltage	Battery voltage

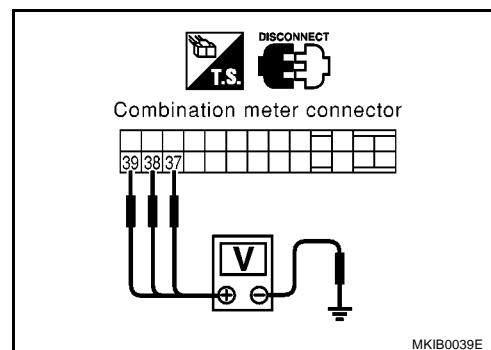

#### OK or NG

OK >> GO TO 2.


NG >> Check the following.

- 10A fuse [No. 1, located in fuse block (J/B)].
- 10A fuse [No. 30, located in fuse block (J/B)].
- 10A fuse [No. 12, located in fuse block (J/B)].
- Harness for open or short between fuse and combination meter.

### 2. GROUND CIRCUIT CHECK

Check continuity between combination meter and ground in the following conditions.

Terminals			Continuity
(+)		(-)	
Connector	Terminal		
M36	12	Ground	Yes
M37	32	Ground	Yes
M36	11	Ground	Yes

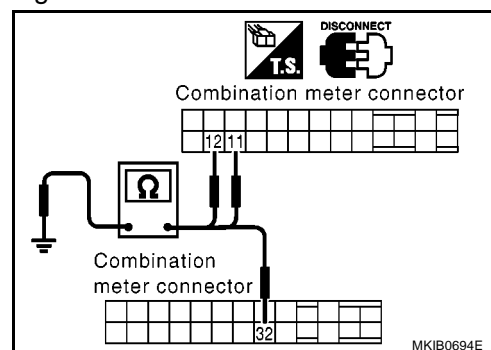

#### OK or NG

OK >> INSPECTION END.

NG >> Harness for open ground circuit.

## COMBINATION METERS (RHD MODELS)

---

### Inspection/Vehicle Speed Signal (With ESP/TCS/ABS Control System)

EKS009AV

#### 1. ESP/TCS/ABS CONTROL UNIT SYSTEM INSPECTION

---

Perform ESP/TCS/ABS control unit self-diagnosis. Refer to [BRC-81, "Functions of CONSULT-II"](#) .

OK or NG

OK >> Recheck "PRELIMINARY CHECK".

NG >> Check ESP/TCS/ABS control system.

### Inspection/Vehicle Speed Signal (Without ESP/TCS/ABS Control System)

EKS009AW

#### 1. ABS ACTUATOR AND ELECTRIC UNIT SYSTEM INSPECTION

---

Perform ABS actuator and electric unit self-diagnosis. Refer to [BRC-24, "CONSULT-II Functions"](#) .

OK or NG

OK >> Recheck "PRELIMINARY CHECK".

NG >> Check ABS control system.

### Inspection/Engine Speed Signal

EKS009AX

#### 1. ECM SYSTEM INSPECTION

---

Perform ECM self-diagnosis. Refer to [EC-120, "CONSULT-II Function"](#) (QG engine with EURO-OBD), [EC-677, "CONSULT-II Function"](#) (QG engine without EURO-OBD), [EC-1082, "CONSULT-II Function"](#) (QR engine with EURO-OBD), [EC-1542, "CONSULT-II Function"](#) (QR engine without EURO-OBD), [EC-1849, "CONSULT-II Function"](#) (YD 93kW engine), [EC-2055, "CONSULT-II Function"](#) (YD 100kW engine with EURO-OBD), [EC-2386, "CONSULT-II Function"](#) (YD 100kW engine without EURO-OBD).

OK or NG

OK >> Recheck "PRELIMINARY CHECK".

NG >> Perform "Diagnostic Procedure" for displayed DTC.

# COMBINATION METERS (RHD MODELS)

## Inspection/Fuel Level Sensor Unit

EKS009AY

### FUEL LEVEL SENSOR UNIT

The following symptoms do not indicate a malfunction.

- Depending on vehicle posture or driving circumstance, the fuel level in the tank varies, and the pointer may fluctuate.
- If the vehicle is fueled with the ignition switch ON, the pointer will move slowly.

### LOW-FUEL WARNING LAMP

Depending on vehicle posture or driving circumstance, the fuel level in the tank varies, and the warning lamp ON timing may be changed.

## 1. HARNESS CONNECTOR INSPECTION

- Turn the ignition switch OFF.
- Check combination meter, fuel level sensor unit and terminals (meter-side, module-side, and harness-side) for poor connection and bend.


OK or NG

OK >> GO TO 2.

NG >> Repair or replace terminals or connectors.

## 2. CHECK FUEL LEVEL SENSOR INPUT SIGNAL CIRCUIT

- Turn ignition switch "OFF".
- Disconnect fuel level sensor unit connector and combination meter connector.
- Check the following.
  - Harness continuity between fuel level sensor unit harness connector B22 terminal 4 (G/Y) and combination meter harness connector M37 terminal 34 (G/Y).
  - Harness continuity between combination meter harness connector M37 terminal 34 (G/Y) and ground.

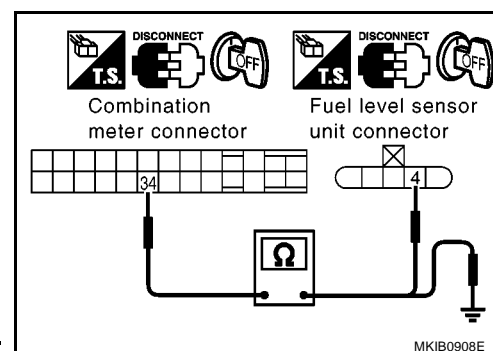

Terminals				Continuity
(+)		(-)		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M37	34 (G/Y)	B22	4 (G/Y)	Yes
M37	34 (G/Y)	Ground		No

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

## 3. CHECK FUEL LEVEL SENSOR GROUND CIRCUIT

Check continuity between fuel level sensor unit harness connector B22 terminal 1 (B) and combination meter harness connector M37 terminal 33 (B).


**1 - 33 : Continuity should exist.**

**1 - Ground : Continuity should not exist.**

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

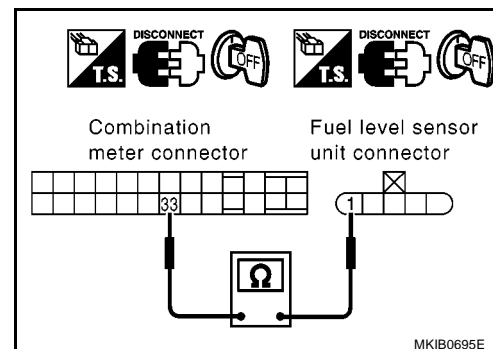

## COMBINATION METERS (RHD MODELS)

---

### 4. FUEL LEVEL SENSOR UNIT INSPECTION

---

Refer to [DI-85, "Inspection/Fuel Level Sensor Unit"](#) .

OK or NG

OK >> GO TO 5.

NG >> Replace fuel level sensor unit.

### 5. CHECK INSTALLATION CONDITION

---

Check fuel level sensor unit installation, and check whether the float arm interferes or binds with any components inside the arm.

OK or NG

OK >> Replace combination meter.

NG >> Install fuel level sensor unit properly.

# COMBINATION METERS (RHD MODELS)

## Inspection/Water Temperature Gauge

EKS009AZ

### 1. ECM SYSTEM INSPECTION

Perform ECM self-diagnosis. Refer to [EC-120, "CONSULT-II Function"](#) (QG engine with EURO-OBD), [EC-677, "CONSULT-II Function"](#) (QG engine without EURO-OBD), [EC-1082, "CONSULT-II Function"](#) (QR engine with EURO-OBD), [EC-1542, "CONSULT-II Function"](#) (QR engine without EURO-OBD), [EC-1849, "CONSULT-II Function"](#) (YD 93kW engine), [EC-2055, "CONSULT-II Function"](#) (YD 100kW engine with EURO-OBD), [EC-2386, "CONSULT-II Function"](#) (YD 100kW engine without EURO-OBD).

OK or NG

- OK >> Recheck "PRELIMINARY CHECK".
- NG >> Perform "Diagnostic Procedure" for displayed DTC.

## The Fuel Gauge Pointer Fluctuates Indicator Wrong Value or Varies

EKS009B0

### 1. CHECK THE FUEL GAUGE POINTER FOR FLUCTUATION

Does the indication value fluctuate during driving or before/after stop?

Does the indication value vary?

- YES >> The pointer fluctuation may be caused by fuel level change in the fuel tank.
- NO >> Ask the customer about the situation when the symptom occurs in detail, and Perform the trouble diagnosis.

## The Fuel Gauge Does Not Move to F-position

EKS009B1

### 1. QUESTION 1

Does it take a long time for the pointer to move to F-position?

YES or NO?

- YES >> GO TO 2.
- NO >> GO TO 3.

### 2. QUESTION 2

Was the vehicle fueled with the ignition switch ON?

YES or NO?

- YES >> Be sure to fuel the vehicle with the ignition switch OFF. Otherwise it will take a long time to move to F-position because of the characteristic of the fuel gauge.
- NO >> GO TO 3.

### 3. QUESTION 3

Is the floor or the vehicle inclined?

YES or NO?

- YES >> It may not be filled fully.
- NO >> GO TO 4.

### 4. QUESTION 4

During driving, does the fuel gauge pointer move gradually toward E-position?

YES or NO?

- YES >> Check the components. Refer to [DI-89, "Electrical Components Inspection"](#).
- NO >> The float arm may interfere or bind with any of the components in the fuel tank.

## COMBINATION METERS (RHD MODELS)

---

### The Fuel Gauge Does Not Work

EKS009B2

#### 1. HARNESS CONNECTOR INSPECTION

---

1. Turn the ignition switch OFF.
2. Check combination meter, fuel level sensor unit and terminals (meter-side, module-side, and harness-side) for poor connection and bend.

##### OK or NG

- OK >> GO TO 2.  
NG >> Repair connector.

#### 2. CHECK INSTALLATION CONDITION

---

Check fuel level sensor unit installation (Refer to [FL-4, "FUEL LEVEL SENSOR UNIT, FUEL FILTER AND FUEL PUMP ASSEMBLY \(QG AND QR\)"](#) or [FL-11, "FUEL LEVEL SENSOR UNIT"](#) (YD and F9Q), check whether the float arm interferes or binds with any components inside the arm.

##### OK or NG

- OK >> Fuel level sensor unit is OK.  
NG >> Check fuel level sensor unit. Refer to [DI-89, "Electrical Components Inspection"](#) .

### Low Fuel Warning Lamp Illuminate or Not Illuminate

EKS009B3

#### 1. DIAGNOSIS MODE INSPECTION

---

Perform combination meter diagnosis mode. Refer to [DI-77, "Combination Meter Self-Diagnosis"](#) .

##### OK or NG

- OK >> Check fuel level sensor unit. Refer to [DI-89, "Electrical Components Inspection"](#) .  
NG >> Replace combination meter.



# COMBINATION METERS (RHD MODELS)

## Electrical Components Inspection


EKS009B4

For electrical components Inspection, refer to [DI-89, "Electrical Components Inspection"](#).

## Removal and Installation for Combination Meter

EKS009B5


1. Remove the cluster lid A. Refer to [IP-5, "CLUSTER LID A"](#).
2. Remove the screws (4), and pull out combination meter.
3. Disconnect connectors and remove combination meter.

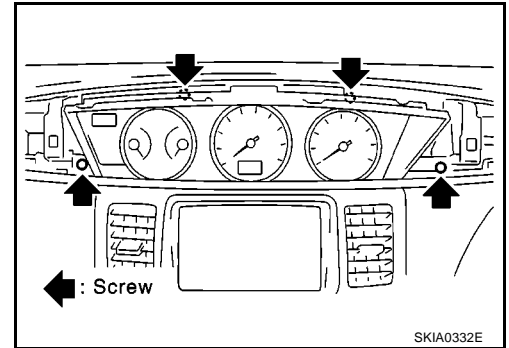

## Disassembly and Assembly for Combination Meter

EKS009B6

1. Disengage the tabs (8) to separate front cover.
2. Remove upper housing.

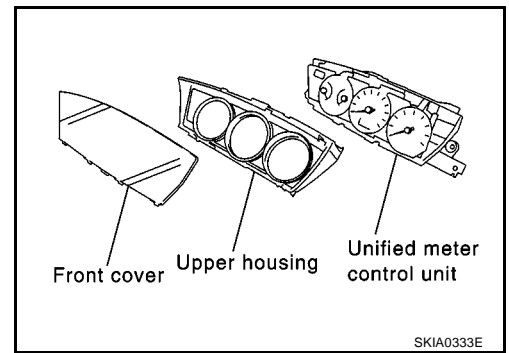

# VFD (VACUUM FLUORESCENT DISPLAY)

## VFD (VACUUM FLUORESCENT DISPLAY)

PFP:28090

### System Description MULTIFUNCTION SWITCH SYSTEM

EKS00HWI

Refer to Owner's Manual for multifunction switch operating instructions.

Using the multifunction switch at the center of the instrument panel, it can be operating the following systems:

- Auto A/C system
- Board computer
- Audio system
- Rear window defogger system

### POWER SUPPLY AND GROUND

#### Power is supplied at all times

- through 15A fuse (No. 33, located in fuse and fusible link box)
- to display unit terminal 23
- to audio unit terminals 3 and 4.

#### When ignition switch is in ACC or ON position, power is supplied

- through 10A fuse [No. 1, located in fuse block (J/B)]
- to display unit terminal 24,
- to multifunction switch terminal 6 and
- to audio unit terminal 2.

#### When ignition switch is in ON or START position, power is supplied

- through 10A fuse [No. 10, located in fuse block (J/B)]
- to display unit terminal 22.

#### Ground is supplied

- to multifunction switch terminal 1 and
- to display unit terminals 1 and 3
- through body grounds M16, M50, M70 and F115 (Gasoline engine models) or
- through body grounds M16, M50 and M70 (Diesel engine models).

### COMMUNICATION LINE

Display unit is communicated by the following unit with communication line.

- Multifunction switch
- Audio unit
- Auto A/C unit
- Combination meter


Display unit received operation signal from multifunction switch, and it send operation signal to audio unit, auto A/C unit or combination meter.

### BOARD COMPUTER

Refer to Owner's Manual for board computer operating instructions.

Board computer is monitoring to the following five type information.

1. Press "INFO" switch to display vehicle information display.
2. Indication can be changed by in the following order by pushing multifunction switch.
  - Range
  - Journey distance
  - Journey time
  - Average fuel economy
  - Average vehicle speed

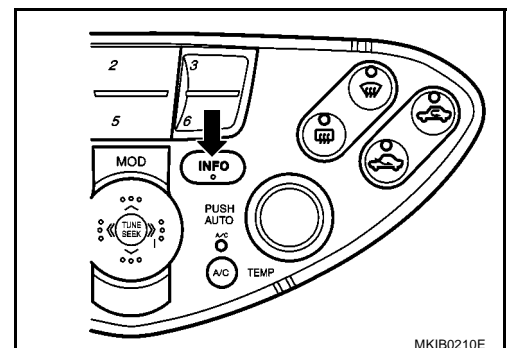

# VFD (VACUUM FLUORESCENT DISPLAY)

Board computer	Display
Range (Km or MILES)	Displays range to empty with a range of 000.0 to 999.9.
Journey distance (Km or MILES)	Displays journey distance with a range of 000.0 to 9999
Journey time	Displays journey time with a range of 0000:00:00 to 9999:59:59.
Average fuel consumption (ℓ/100km or MPG)	Displays fuel consumption with a range of 00.0 to 999.
Average vehicle speed (km/h or MPH)	Displays average vehicle speed with a range of 000 to 999.

## Range

- The elapsed time indication provides driver with an estimation of the distance that can be driven before refuelling. The range is conducted by fuel tank level sensor unit (fuel remaining), ECM pulse signal (fuel consumption) and vehicle speed signal.
- Indication will be renewed every 30 seconds.
- When fuel remaining is less than approx. 7.8 ℓ (6-7/8 Imp qt), indication will blink as a warning. If the fuel remaining less than approx. 6.8 ℓ (6 Imp qt), “-.-” will be indicated. In this case, the mode will change to the RANGE mode automatically even though the display is showing a different item. (See NOTE.)
- The range mode includes a low range warning feature: when the fuel level is low, the range mode is automatically selected and the digits blink in order to draw the driver’s attention. Press the “INFO” switch if you wish to return to the mode that was selected before the warning occurred. The range mark will remain blinking until next refuelling. When the fuel level drops even lower, the range display will change to “-.-”.

## Journey distance

- Journey distance indication is conducted by vehicle speed signal.
- If journey distance is reset, journey time will be reset at the same time.
- When pushing “INFO” switch more than approximately 1 second, driving distance will be reset.

## Journey time

- Journey time indication is conducted by integration of ignition ON time.
- If journey time is reset, journey distance will be reset at the same time.

## Average fuel consumption

- Average fuel consumption indication is conducted by ECM pulse signal and vehicle speed signal after system is reset.
- Indication will be renewed every 30 seconds.
- When pushing “INFO” switch more than approximately 1 second, average fuel economy will be reset.
- If average fuel consumption is reset, average vehicle speed will be reset at the same time.
- After reset operation, the display shows “-.-” until the vehicle is driven 500 m (1,600 ft) or 30 seconds has passed.

## Average vehicle speed

- Average vehicle speed indication is conducted by running distance and running time.
- Indication will be renewed every 30 seconds.
- When pushing “INFO” switch more than approximately 1 second, average speed will be reset.
- If average vehicle speed is reset, average fuel consumption will be reset at the same time.
- After reset operation, the displays shows “-.-” for 30 seconds.

## HOW TO CHANGE/RESET INDICATION

- Indication can be changed by in following order by pushing “INFO” switch less than approximately 1 second.

RANGE → JOURNEY DISTANCE → JOURNEY TIME → AVERAGE FUEL CONSUMPTION → AVERAGE VEHICLE SPEED

- Continuous pushing the “INFO” switch (more than 3 second) can reset the indication of journey distance (trip), journey time (hour meter), average fuel consumption and average vehicle speed.


# VFD (VACUUM FLUORESCENT DISPLAY)

## NOTE:

After the display changes automatically, the indication can be changed to the last mode by pushing the switch. In this case, the cursor will blink as a warning.

## Component Parts and Harness Connector and Harness Connector Location

EKS00HWJ

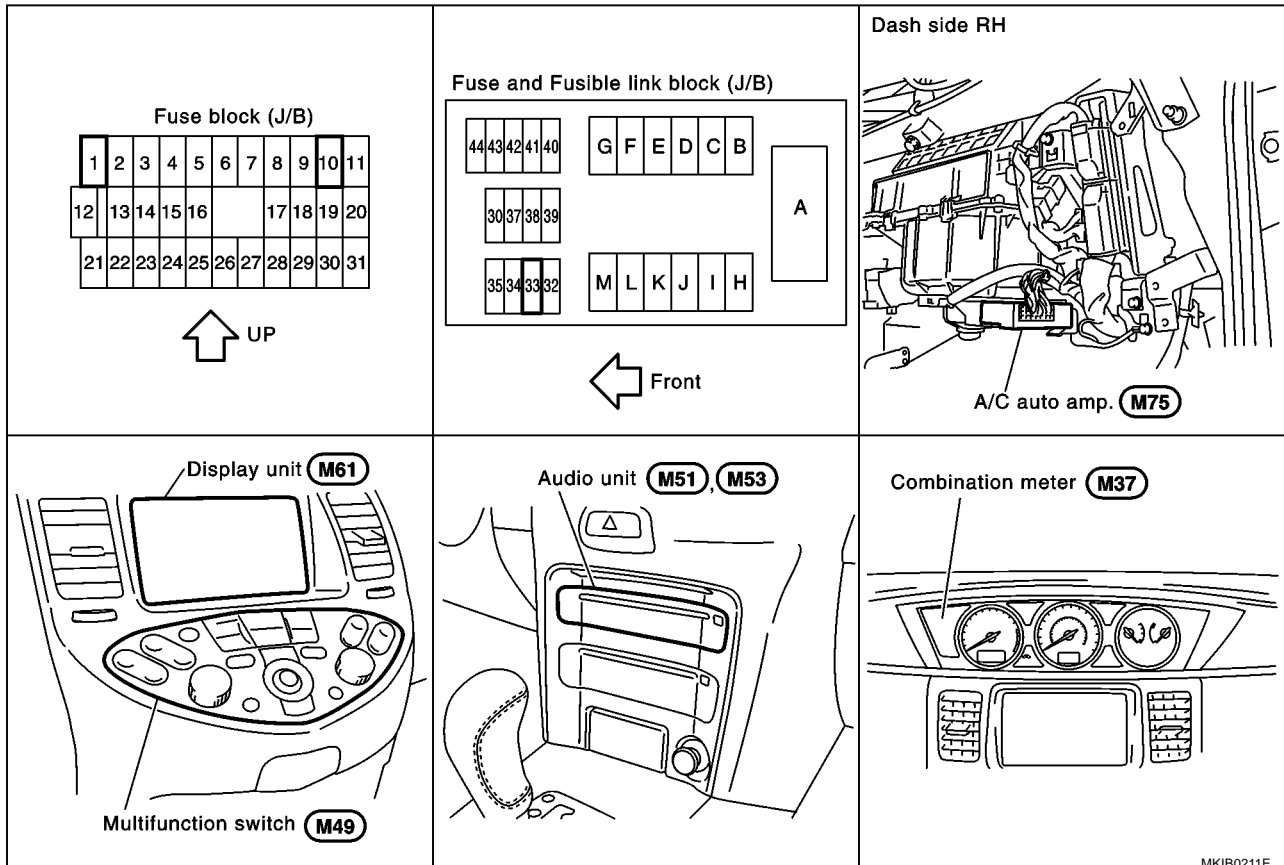



MK1B0211E

# VFD (VACUUM FLUORESCENT DISPLAY)

## Wiring Diagram — COMM —

EKS00HWK

DI-COMM-01

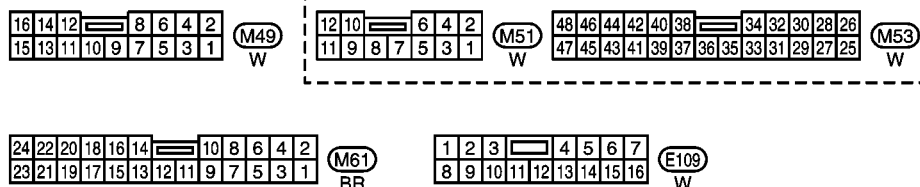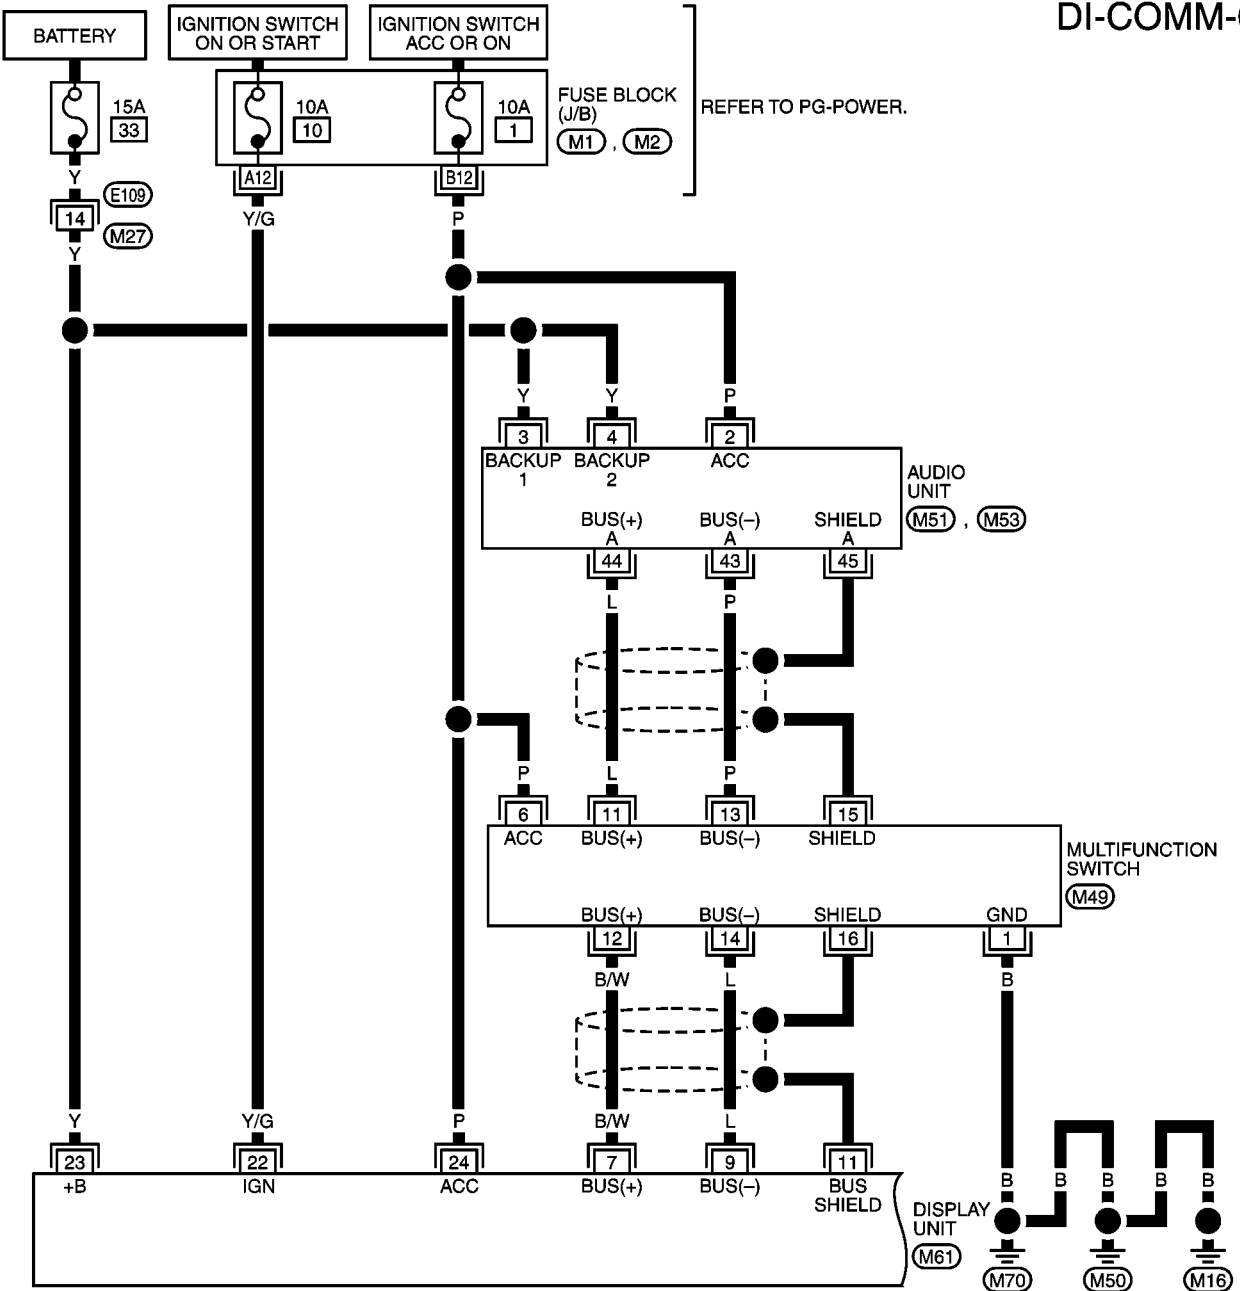

REFER TO THE FOLLOWING.  
 (M1), (M2) - FUSE BLOCK-  
 JUNCTION BOX (J/B)

MKWA2479E

# VFD (VACUUM FLUORESCENT DISPLAY)

## DI-COMM-02

**L** : LHD MODELS

**R** : RHD MODELS

\*1 41 : **L**

28 : **R**

\*2 40 : **L**


27 : **R**

\*3 42 : **L**

29 : **R**

\*4 34 : **L**

47 : **R**

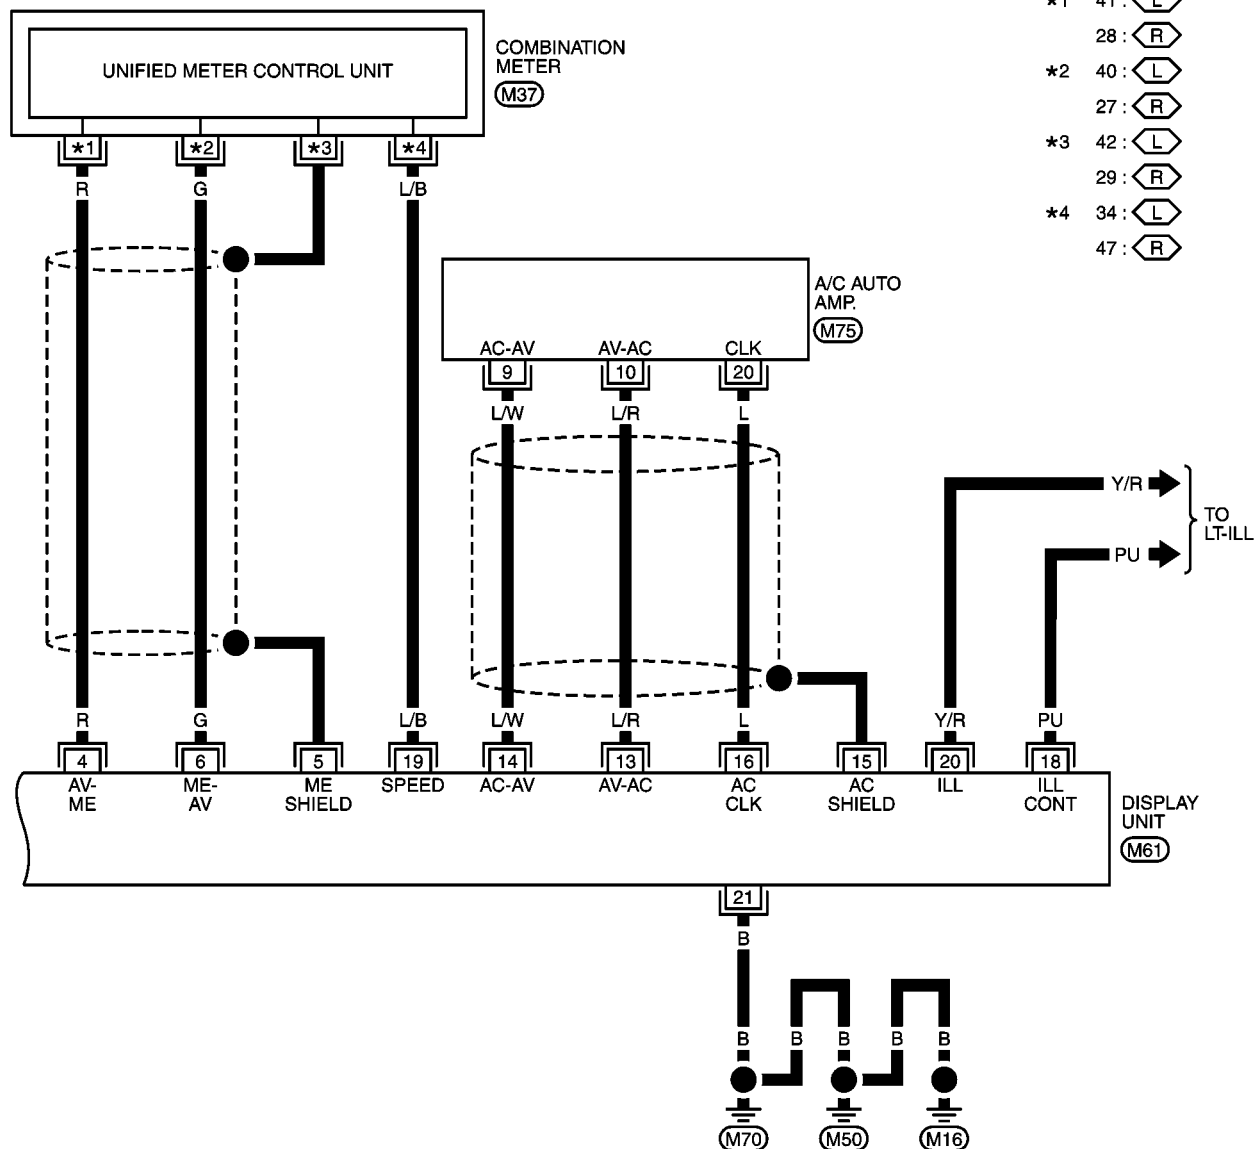

52	51	50	49	48	47	46	45	44	43	42	41	40
39	38	37	36	35	34	33	32	31	30	29	28	27

M37 Y

24	22	20	18	16	14	12	10	8	6	4	2
23	21	19	17	15	13	11	9	7	5	3	1

M61 BR

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

M75 GY







**H.S.**

MKWA2480E



# VFD (VACUUM FLUORESCENT DISPLAY)

## Terminals and Reference Value for Display Unit

EKS00HWL

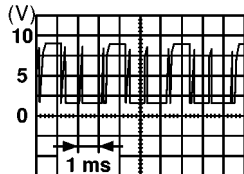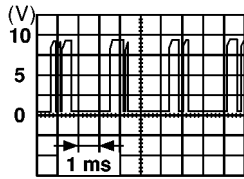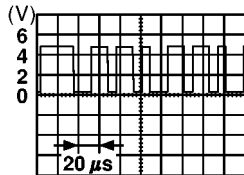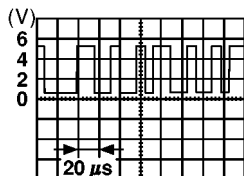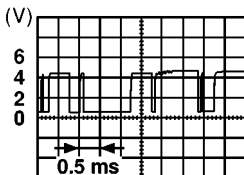
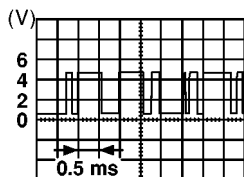
TERMINALS			SIGNAL	CONDITION		VOLTAGE
(+)		(-)		IGNI- TION SWITCH	OPERATION	
TER- MINAL	WIRE COLOR					
4	R	Ground	Communica- tion signal (AV-ME)	ON	Display the vehicle information screen.	 SKIA0169E
5	—	—	Shield ground	—	—	—
6	G	Ground	Communica- tion signal (ME-AV)	ON	Perform various settings on the vehicle information screen.	 SKIA0170E
7	B/W	Ground	Communica- tion signal (+)	ON	—	 SKIA0175E
9	L	Ground	Communica- tion signal (-)	ON	—	 SKIA0176E
11	—	Ground	Shield ground	—	—	—
13	L/R	Ground	A/C commu- nication sig- nal (AV-AC)	ON	—	 SKIA0172E
14	L/W	Ground	A/C commu- nication sig- nal (AC-AV)	ON	—	 SKIA0173E
15	—	—	Shield ground	—	—	—

## VFD (VACUUM FLUORESCENT DISPLAY)

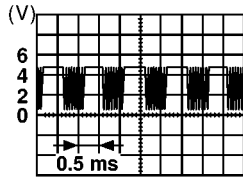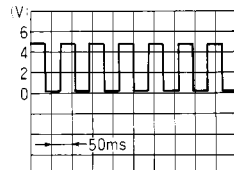TERMINALS			SIGNAL	CONDITION		VOLTAGE
( + )		( - )		IGNI- TION SWITCH	OPERATION	
TER- MINAL	WIRE COLOR					
16	L	Ground	A/C clock signal	ON	—	
19	L/B	Ground	Vehicle speed signal (2-pulse)	ON	When vehicle speed is approx. 20 km/ h (12MPH)	
21	B	Ground	—	—	—	—
22	Y/G	Ground	Ignition sig- nal	ON	—	—
23	Y	Ground	Battery power	OFF	—	Battery voltage
24	P	Ground	ACC signal	ACC	—	—



## Terminals and Reference Value for Multifunction Switch

EKS00HWM

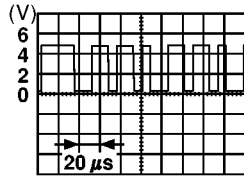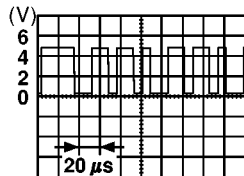TERMINALS			SIGNAL	CONDITION		DATA
( + )		( - )		IGNITION SWITCH	OPERATION	
TERMINAL	WIRE COLOR					
1	B	Ground	Ground	ON	—	Apporox. 0V
6	P	Ground	ACC	ACC	—	Battery voltage
11	L	Ground	Communication signal ( + )	ON	—	
12	B/W	Ground	Communication signal ( + )	ON	—	



# VFD (VACUUM FLUORESCENT DISPLAY)

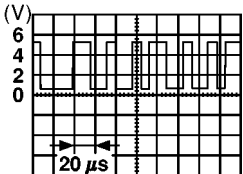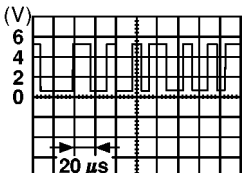TERMINALS			SIGNAL	CONDITION		DATA
(+)		(-)		IGNI- TION SWITCH	OPERATION	
TERMINAL	WIRE COLOR					
13	P	Ground	Communication signal (-)	ON	—	
14	L	Ground	Communication signal (-)	ON	—	
15	—	Ground	Shield ground	ON	—	—
16	—	Ground	Shield ground	ON	—	—

## Self-Diagnosis Function

EKS00HWN

### DESCRIPTION

Self-diagnosis items are as follows.

- Screen of all segments check
- Software version and hardware version of display unit are displayed on the upper zone of the screen. (This information is not used for service. Skip this step.)
- Dimming steps and levels check
- Can be checked communication line between A/C auto amp., audio unit, multifunction switch, combination meter and display unit, and displays the results on the upper zone of the screen.

## Performing Self-Diagnosis Mode

EKS00HWO

### OPERATION PROCEDURES


1. Start the engine.
2. Turn the audio system off.
3. Pressing the “MOD” switch and “CLOCK” switch together for 2 second.
4. When self-diagnosis activated, then all segment will be indicated. For display unit self-diagnosis result items, refer to [DI-98, "SELF-DIAGNOSIS RESULT ITEM"](#) .

#### NOTE:

If any button is not pressed for 20 seconds at each step or if the ignition switch is turned OFF, the self-diagnosis mode is exited.

#### CAUTION:

If self-diagnosis cannot activate, refer to [DI-103, "Self-Diagnosis Does Not Perform"](#) .

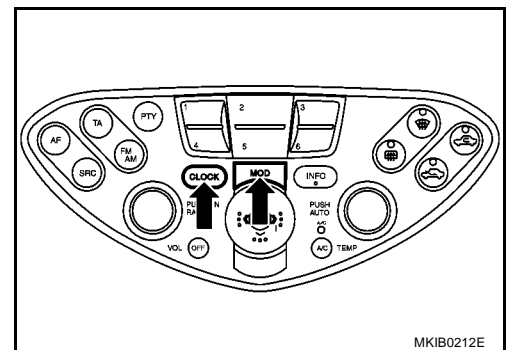


# VFD (VACUUM FLUORESCENT DISPLAY)

## SELF-DIAGNOSIS RESULT ITEM

### Display of all segments indicate

This mode is checking the display of all segments.  
If any of the segment is not displayed, replace the display unit.

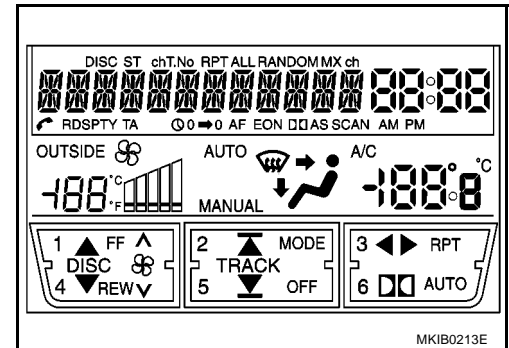

### Backlight dimming check

- When lighting switch is first or second position, display is dimming. This mode is checking the dimmer position.
- The backlight check where there is an automatic change of brightness level (4 steps) every 2 seconds. At the end of the backlight check, it is necessary to press any button to advance to the next check.

### Communication line circuit check

- Displays the self-diagnosis results on the upper zone of the screen. If NG, error code "1" is displayed on upper zone of screen digits 7,8 and 9.
- Display unit can check communication line open circuit between display unit and communication control units.

Screen of upper zone	Possible case	Trouble diagnosis
<p>Error code "1" is displayed on digit 7</p> <p>MKIB0214E</p>	<p>The circuit between display unit and combination meter is open.</p>	<p>Refer to <a href="#">DI-101, "Combination meter Circuit Check/LHD models"</a> or <a href="#">DI-101, "Combination meter Circuit Check/RHD models"</a>.</p>
<p>Error code "1" is displayed on digit 8</p> <p>MKIB0223E</p>	<p>The circuit between display unit, multifunction switch and audio unit is/are open.</p>	<p>Refer to <a href="#">DI-102, "AV Communication Line Check"</a>.</p>
<p>Error code "1" is displayed on digit 9</p> <p>MKIB0224E</p>	<p>The circuit between display unit and A/C auto amp. is open.</p>	<p>Refer to <a href="#">DI-103, "A/C Auto Amp. Circuit Check"</a>.</p>

# VFD (VACUUM FLUORESCENT DISPLAY)

## Power Supply and Ground Circuit Check for Display Unit

EKS00HWP

### 1. CHECK FUSE

- Check that the following fuses in display are blown.

Unit	Power souse	Fuse No.
Display	Battery power	33
	Ignition switch ACC or ON	1

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse. Refer to [PG-3](#).  
"POWER SUPPLY ROUTING".

### 2. POWER SUPPLY CIRCUIT CHECK

- Disconnect display connector.
- Check voltage between display unit connector and ground.

Terminals			Ignition switch position		
(+) Terminal (Wire color)		(-)	OFF	ACC	ON
M61	23 (Y)	Ground	Battery voltage	Battery voltage	Battery voltage
	24 (P)	Ground	0V	Battery voltage	Battery voltage
	22 (Y/G)	Ground	0V	0V	Battery voltage

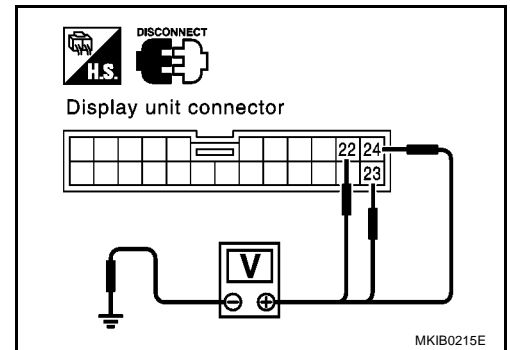

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between display and fuse.

### 3. GROUND CIRCUIT CHECK


Check continuity between display unit harness connector M61 terminal 21(B) and ground.

Continuity should exist.

OK or NG

OK >> Inspection end.

NG >> Check ground harness.

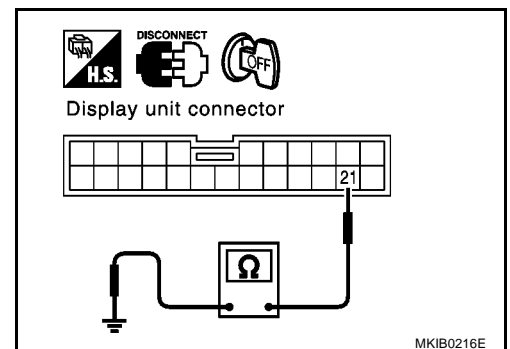

# VFD (VACUUM FLUORESCENT DISPLAY)

## Power Supply and Ground Circuit Check for Multifunction Switch

EKS00HWQ

### 1. CHECK FUSES

- Check the fuse below.

Unit	Power source	Fuse No.
Multifunction switch	Ignition switch ACC or ON	1

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse. Refer to [PG-3](#), "[POWER SUPPLY ROUTING](#)".

### 2. POWER SUPPLY CIRCUIT CHECK

- Disconnect multifunction switch connector.
- Check voltage between multifunction switch and ground.

Terminals		Ignition switch position			
(+) (+)		(-)			
Connector	Terminal (Wire color)		OFF	ACC	ON
M49	6 (P)	Ground	0V	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between multifunction switch and fuse.

### 3. GROUND CIRCUIT CHECK



- Check continuity between multifunction switch harness connector M49 terminal 1 (B) and ground.

**Continuity should exist.**

OK or NG

OK >> Inspection end.

NG >> Check ground harness.

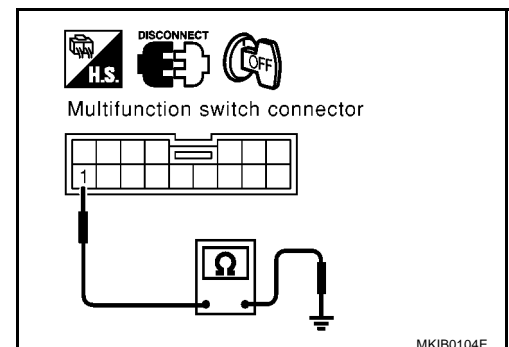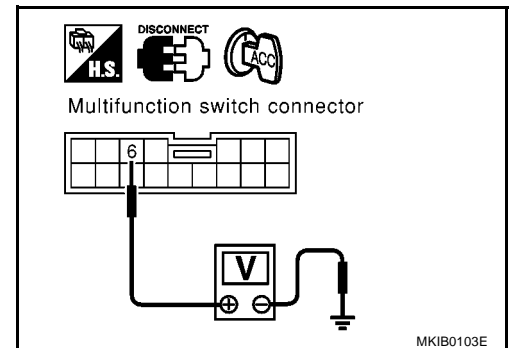

# VFD (VACUUM FLUORESCENT DISPLAY)

## Combination meter Circuit Check/LHD models

EKS00HWR

### 1. COMMUNICATION LINE (MA-AV, AV-ME) CIRCUIT CHECK

1. Disconnect the display unit connector and combination meter connector.
2. Check continuity between display unit and ground.


Terminals			Continuity
Connector	Terminal (wire color)	Terminal	
M61	4 (R)	Ground	No
	6 (G)		

3. Check continuity between display unit and combination meter.

Terminals				Continuity
Display unit		Combination meter		
Connector	Terminal (wire color)	Connector	Terminal (wire color)	
M61	4 (R)	M37	41 (R)	Yes
	6 (G)		40 (G)	

OK or NG

- OK >> Check combination meter.  
 NG >> Replace harness or connector.

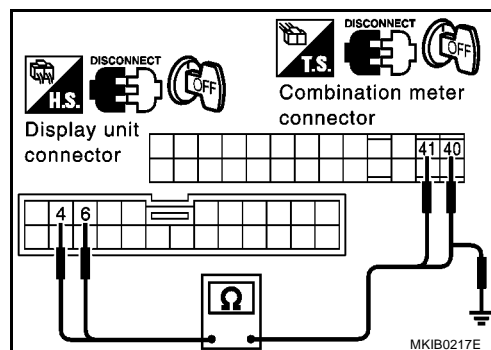

## Combination meter Circuit Check/RHD models

EKS00HWS

### 1. COMMUNICATION LINE (MA-AV, AV-ME) CIRCUIT CHECK

1. Disconnect the display unit connector and combination meter connector.
2. Check continuity between display unit and ground.


Terminals			Continuity
Connector	Terminal (wire color)	Terminal	
M61	4 (R)	Ground	No
	6 (G)		

3. Check continuity between display unit and combination meter.

Terminals				Continuity
Display unit		Combination meter		
Connector	Terminal (wire color)	Connector	Terminal (wire color)	
M61	4 (R)	M37	28 (R)	Yes
	6 (G)		27 (G)	

OK or NG

- OK >> Check combination meter.  
 NG >> Replace harness or connector.

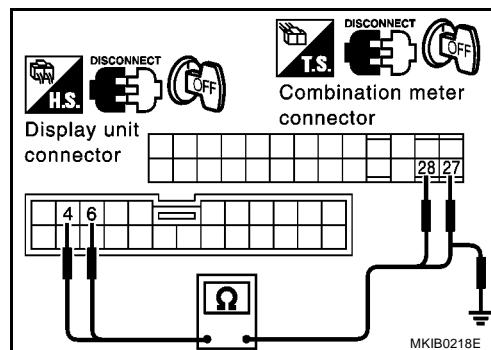

# VFD (VACUUM FLUORESCENT DISPLAY)

EKS00HWT

## AV Communication Line Check

### 1. MULTIFUNCTION SWITCH CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect display unit connector and multifunction switch connector.
3. Check continuity between display unit and multifunction switch.

Terminals				Continuity
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M61	7 (B/W)	M49	12 (B/W)	Yes
	9 (L)		14 (L)	

4. Check continuity between display unit and ground.

Terminals			Continuity
Connector	Terminal (Wire color)	Terminal	
M61	7 (B/W)	Ground	No
	9 (L)		

OK or NG

OK >> GO TO 2.

NG >> Replace harness or connector

### 2. AUDIO UNIT CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect audio unit connector.
3. Check continuity between multifunction switch and audio unit.

Terminals				Continuity
Multifunction switch		Audio unit		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M49	11 (L)	M53	44 (L)	Yes
	13 (P)		43 (P)	



4. Check continuity between multifunction switch and ground.

Terminals			Continuity
Connector	Terminal (Wire color)	Terminal	
M49	11 (L)	Ground	No
	13 (P)		

Question

OK >> GO TO 3.

NG >> Replace harness or connector.

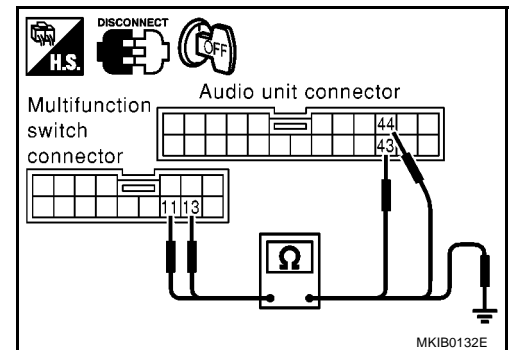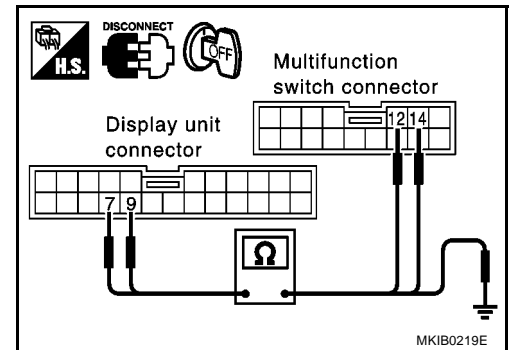

# VFD (VACUUM FLUORESCENT DISPLAY)


EKS00HWU

## A/C Auto Amp. Circuit Check

### 1. A/C AUTO AMP.AND DISPLAY UNIT CIRCUIT CHECK


1. Turn the ignition switch OFF.
2. Disconnect A/C auto amp. connector and display unit connector.
3. Check continuity between display unit and A/C auto amp.

Terminals				Continuity
Display unit (+)		A/C auto amp. (-)		
Connector	Terminal (wire color)	Connector	Terminal (wire color)	
M61	13 (L/R)	M75	10 (L/R)	Yes
	14 (L/W)		9 (L/W)	
	16 (L)		20 (L)	

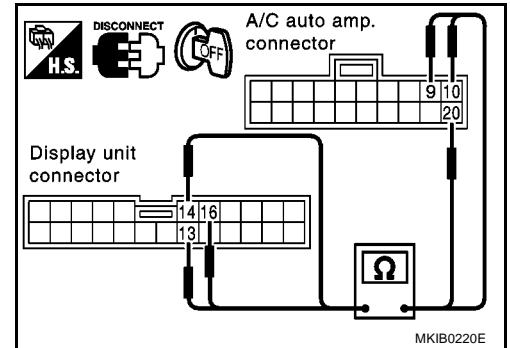

4. Check continuity between display unit and ground.

Terminals			Continuity
Connector	Terminal (wire color)	(-)	
M61	13 (L/R)	Ground	No
	14 (L/W)		
	16 (L)		

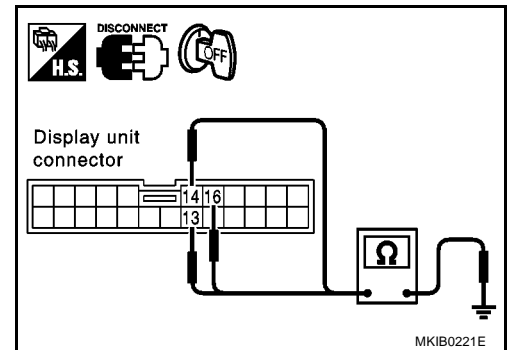

OK or NG

OK >> Check A/C auto amp. Refer to [ATC-36, "TROUBLE DIAGNOSIS"](#).

NG >> Replace harness or connector.

## Self-Diagnosis Does Not Perform

EKS00HWV

### 1. MULTIFUNCTION SWITCH CHECK

Check multifunction switch power and ground circuit. Refer to [DI-100, "Power Supply and Ground Circuit Check for Multifunction Switch"](#).

>> GO TO 2.

### 2. DISPLAY UNIT CHECK

Check display unit power and ground circuit. Refer to [DI-99, "Power Supply and Ground Circuit Check for Display Unit"](#).

>> GO TO 3.

### 3. SELF-DIAGNOSIS CHECK

1. Disconnect audio unit connector M53.
2. Perform self-diagnosis mode. Refer to [DI-97, "Performing Self-Diagnosis Mode"](#).

Does Self-diagnosis activated?

Yes >> GO TO 4.

No >> AV communication line check. Refer to [DI-102, "AV Communication Line Check"](#).

## VFD (VACUUM FLUORESCENT DISPLAY)

### 4. MULTIFUNCTION SWITCH CIRCUIT CHECK

1. Disconnect multifunction switch connector.
2. Check continuity between multifunction switch and audio unit.

Terminals				Continuity
Multifunction switch		Audio unit		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M49	11 (L)	M53	44 (L)	Yes
	13 (P)		43 (P)	

3. Check continuity between multifunction switch and ground.

Terminals			Continuity
Connector	Terminal (Wire color)	Terminal	
M49	11 (L)	Ground	No
	13 (P)		

OK or NG

- OK >> Replace display unit.  
NG >> Replace harness or connector.

**Air Conditioning Controls (Only) Are Ineffective (Rear Defogger Control Excluded).**


EKS00HWW

#### 1. DISPLAY SELF-DIAGNOSIS

1. Perform self-diagnosis display unit. Refer to [DI-97, "Performing Self-Diagnosis Mode"](#).
2. All VFD display segments are ON.

OK or NG

- OK >> GO TO 2.  
NG >> Replace display unit.

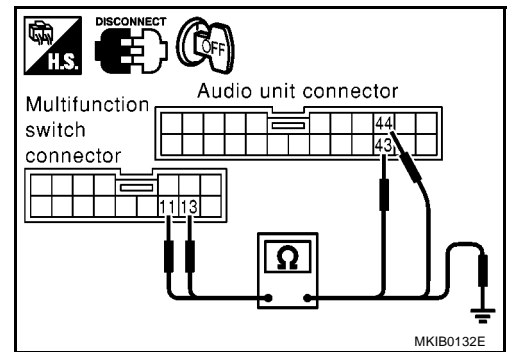




# VFD (VACUUM FLUORESCENT DISPLAY)

## 2. A/C AUTO AMP. AND DISPLAY UNIT CIRCUIT CHECK


1. Turn the ignition switch OFF.
2. Disconnect A/C auto amp. connector and display unit connector.
3. Check continuity between display unit and A/C auto amp.

Terminals				Continuity
Display unit (+)		A/C auto amp. (-)		
Connector	Terminal (wire color)	Connector	Terminal (wire color)	
M61	13 (L/R)	M75	10 (L/R)	Yes
	14 (L/W)		9 (L/W)	
	16 (L)		20 (L)	

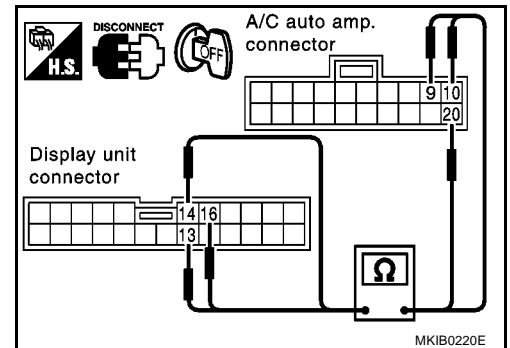

4. Check continuity between display unit and ground.

Terminals			Continuity
Connector	Terminal (wire color)	(-)	
M61	13 (L/R)	Ground	No
	14 (L/W)		
	16 (L)		

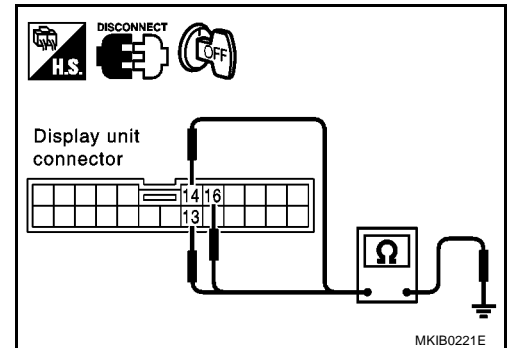

OK or NG


OK >> GO TO 3.

NG >> Replace harness or connector.

## 3. A/C-AV, AV-AC, AC-CLK COMMUNICATION SIGNAL CHECK

1. Connect A/C auto amp. connector.
2. Turn the ignition switch ON.
3. Check voltage between display unit and ground.

Terminals			Voltage [V]
(+) Terminal (wire color)		(-)	
Connector	Terminal (wire color)		
M61	13 (L/R)	Ground	Approx. 3.5 or more
	14 (L/W)		
	16 (L)		

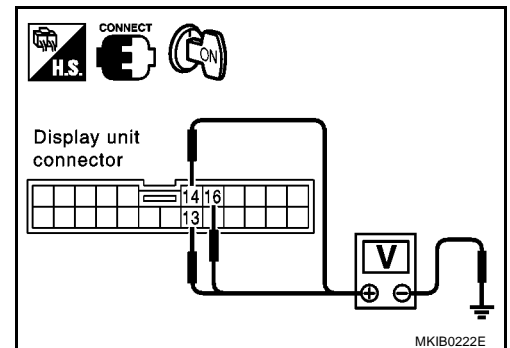

OK or NG

OK >> Replace display unit.

NG >> Replace A/C auto amp.

# VFD (VACUUM FLUORESCENT DISPLAY)

EKS00HWX

## No Average Speed Displayed/LHD Models

### 1. DISPLAY SELF-DIAGNOSIS

1. Perform self-diagnosis display unit. Refer to [DI-97, "Performing Self-Diagnosis Mode"](#).
2. All VFD display segments are ON.

OK or NG

- OK >> GO TO 2.
- NG >> Replace display unit.

### 2. HARNESS CHECK

1. Disconnect display unit connector and combination meter.
  2. Check the following.
- Continuity between display unit connector M61 terminal 19 (L/B) and combination meter connector M37 terminal 34 (L/B).


**Continuity should exist.**

- Continuity between display unit connector M61 terminal 19 (L/B) and ground.

**Continuity should not exist.**

OK or NG

- OK >> GO TO 3.
- NG >> Replace harness or connector.

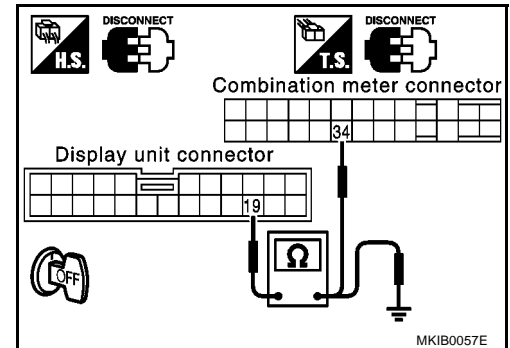

### 3. VEHICLE SPEED SIGNAL CHECK


Connect combination meter connector and display unit connector.

#### With CONSULT-II

1. Lift up drive wheels.
2. Start engine and drive vehicle at more than 20 km/h (12MPH).
3. Check signal between display unit connector M61 terminal 19 (L/B) and ground when rotating wheels with engine at idle. (Use "SIMPLE OSCILLOSCOPE" in "SUB MODE" with CONSULT-II.)



ELF1080D

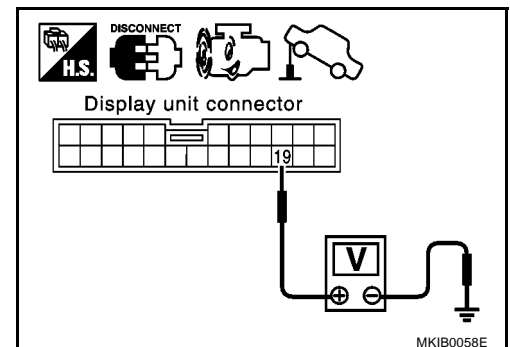


#### Without CONSULT -II

1. Lift up drive wheels.
2. Start engine and drive vehicle at more than 20 km/h (12MPH).
3. Check voltage between display unit connector M61 terminal 19 (L/B) and ground when rotating wheels with engine at idle.

**Voltage: Approximately 0 – 5V**

OK or NG

- OK >> Replace display unit.
- NG >> Check combination meter system. Refer to [DI-36, "Combination Meter Self-Diagnosis"](#).

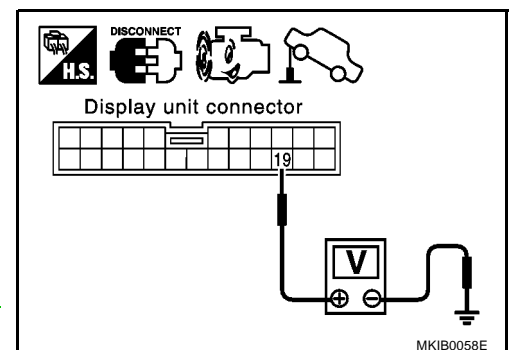

# VFD (VACUUM FLUORESCENT DISPLAY)

EKS00HWY

## No Average Speed is Displayed/RHD Models

### 1. DISPLAY SELF-DIAGNOSIS

1. Perform self-diagnosis display unit. Refer to [DI-97, "Performing Self-Diagnosis Mode"](#).
2. All VFD display segments are ON.

OK or NG

- OK >> GO TO 2.
- NG >> Replace display unit.

### 2. HARNESS CHECK

1. Disconnect display unit connector and combination meter.
2. Check the following.
  - Continuity between display unit connector M61 terminal 19 (L/B) and combination meter connector M37 terminal 47 (L/B)


**Continuity should exist.**

- Continuity between display unit connector M61 terminal 19 (L/B) and ground.

**Continuity should not exist.**

OK or NG

- OK >> GO TO 3.
- NG >> Replace harness or connector.


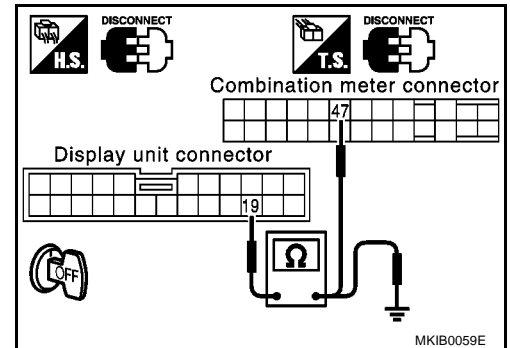


### 3. VEHICLE SPEED SIGNAL CHECK

Connect combination meter connector and display unit connector.

**With CONSULT-II**

1. Lift up drive wheels.
2. Start engine and drive vehicle at more than 20 km/h (12MPH).
3. Check signal between display unit connector M61 terminal 19 (L/B) and ground when rotating wheels with engine at idle. (Use "SIMPLE OSCILLOSCOPE" in "SUB MODE" with CONSULT-II.)

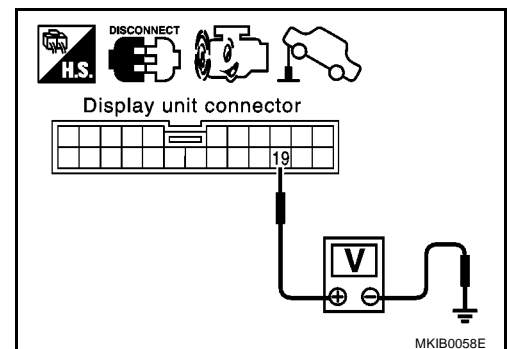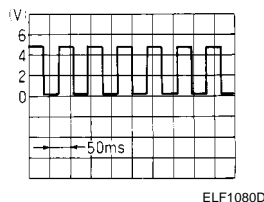


**Without CONSULT -II**

1. Lift up drive wheels.
2. Start engine and drive vehicle at more than 20 km/h (12MPH).
3. Check voltage between display unit connector M61 terminal 19 (L/B) and ground when rotating wheels with engine at idle.

**Voltage: Approximately 0 – 5V**

OK or NG

- OK >> Replace display unit.
- NG >> Check combination meter system. Refer to [DI-77, "Combination Meter Self-Diagnosis"](#).

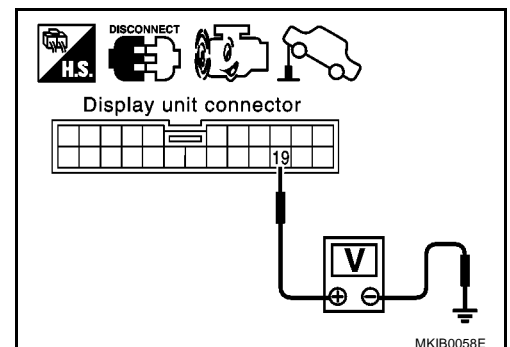

# VFD (VACUUM FLUORESCENT DISPLAY)

EKS00HWZ

## No Fuel Information Is Displayed/LHD Models

### 1. DISPLAY SELF-DIAGNOSIS

1. Perform self-diagnosis display unit. Refer to [DI-97, "Performing Self-Diagnosis Mode"](#).
2. All VFD display segments are ON.

OK or NG

- OK >> GO TO 2.  
NG >> Replace display unit.

### 2. COMMUNICATION LINE (MA-AV, AV-ME) CIRCUIT CHECK

1. Disconnect the display unit connector and combination meter connector.
2. Check continuity between display unit and ground.


Terminals			Continuity
Connector	Terminal (wire color)	Terminal	
M61	4 (R)	Ground	No
	6 (G)		

3. Check continuity between display unit and combination meter.

Terminals				Continuity
Display unit		Combination meter		
Connector	Terminal (wire color)	Connector	Terminal (wire color)	
M61	4 (R)	M37	41 (R)	Yes
	6 (G)		40 (G)	

OK or NG

- OK >> Check combination meter.  
NG >> Replace harness or connector.

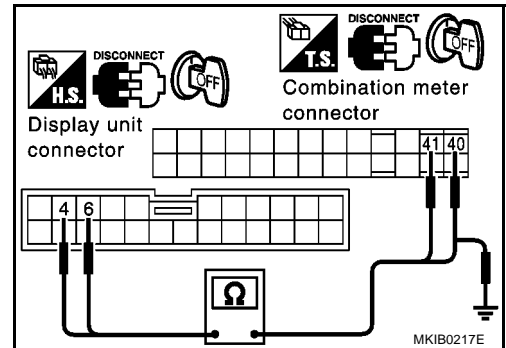

# VFD (VACUUM FLUORESCENT DISPLAY)

## No Fuel Information Is Displayed/RHD Models

EKS00HX0

### 1. DISPLAY SELF-DIAGNOSIS

1. Perform self-diagnosis display unit. Refer to [DI-97, "Performing Self-Diagnosis Mode"](#).
2. All VFD display segments are ON.

OK or NG

- OK >> GO TO 2.  
NG >> Replace display unit.

### 2. COMMUNICATION LINE (MA-AV, AV-ME) CIRCUIT CHECK

1. Disconnect the display unit connector and combination meter connector.
2. Check continuity between display unit and ground.


Terminals			Continuity
Connector	Terminal (wire color)	Terminal	
M61	4 (R)	Ground	No
	6 (G)		

3. Check continuity between display unit and combination meter.

Terminals				Continuity
Display unit		Combination meter		
Connector	Terminal (wire color)	Connector	Terminal (wire color)	
M61	4 (R)	M37	28 (R)	Yes
	6 (G)		27 (G)	

OK or NG

- OK >> Check combination meter.  
NG >> Replace harness or connector.

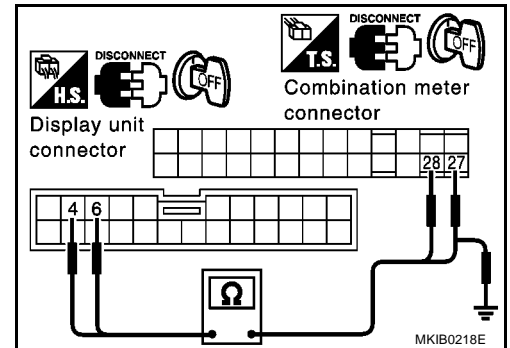

## Multifunction Switch Does Not Operate.

EKS00HX1

### 1. POWER AND GROUND CIRCUIT CHECK

- Check power and ground circuit. Refer to [DI-100, "Power Supply and Ground Circuit Check for Multifunction Switch"](#).

OK or NG


- OK >> Replace multifunction switch.  
NG >> Repair or replace harness.

# VFD (VACUUM FLUORESCENT DISPLAY)

## Removal and Installation of Multifunction switch

EKS00HX2


1. Remove the cluster lid C. Refer to [IP-6, "CLUSTER LID C"](#).
2. Remove the screw (4), and remove the multifunction switch.

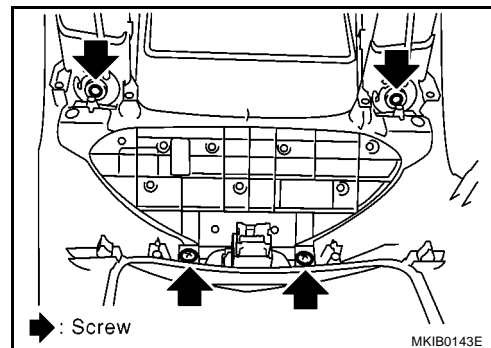

## Removal and Installation of Display Unit

EKS00HX3

1. Remove the cluster lid C. Refer to [IP-6, "CLUSTER LID C"](#).
2. Remove the screws (4), and remove the display unit.

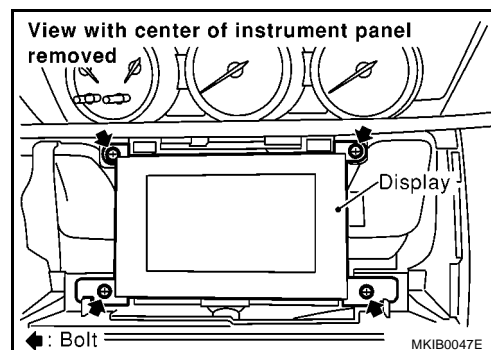

# LCD (LIQUID CRYSTAL DISPLAY)

## LCD (LIQUID CRYSTAL DISPLAY)

PFP:28090

### System Description

EKS009BT

### MULTIFUNCTION SWITCH SYSTEM

Refer to Owner's Manual for multifunction switch operating instructions.

Using the multifunction switch at the center of the instrument panel, the controls of the following systems are centralized:

- Auto A/C system
- Vehicle information system
- Audio system

### PRECAUTION OF LCD MONITOR

- When passenger compartment temperature is low, the LCD monitor sometimes dims because of the brightness of the back light (small fluorescent light) integrated into the LCD monitor decrease. In this case, the refreshing rate of the picture also becomes low because of the low response of the LCD monitor. When passenger compartment becomes warm, however, the LCD recovers the normal display.
- Sometimes, black or bright dots peculiar to LCD monitor can be seen on the display.
- Back light sometimes flickers or darkens according to the total consumption hours and the number of ON and OFF switching. In this case, the back light should be replaced (display unit assembly).

### POWER SUPPLY AND GROUND

#### Power is Supplied at All Times

- through 15A fuse (No. 33, located in fuse and fusible link box)
- to display unit terminals 2 and 4
- to audio unit terminals 3 and 4.

#### When Ignition Switch is in ACC or ON Position, Power is Supplied

- through 10A fuse [No. 1, located in fuse block (J/B)]
- to display unit terminal 6,
- to multifunction switch terminal 6 and
- to audio unit terminal 2.

#### When Ignition Switch is in ON or START Position, Power is Supplied

- through 10A fuse [No. 10, located in fuse block (J/B)]
- to display unit terminal 5.

#### Ground is Supplied

- to multifunction switch terminal 1 and
- to display unit terminals 1 and 3
- through body grounds M16, M50, M70 and F115 (Gasoline engine models) or
- through body grounds M16, M50 and M70 (Diesel engine models).

### AV COMMUNICATION LINE

Display unit is controlled by the following unit with AV communication line.

- Multifunction switch
- Audio unit


### VEHICLE INFORMATION SYSTEM

Refer to Owner's Manual for vehicle information system operating instructions.

Vehicle information system is monitoring to drive information, fuel economy information and maintenance information.

## LCD (LIQUID CRYSTAL DISPLAY)

1. Press "INFO" switch to display vehicle information display.
2. Select "Drive", "Fuel Economy" or "Maintenance".

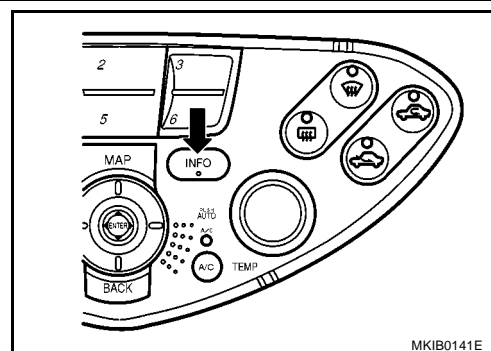


Display items		Display/Setting contents
Drive	Elapsed Time	Displays driving time with a range of 0000:00:00 to 9999:59:59.
	Driving Distance (km)	Displays driving distance with a range of 00000.0 to 99999.9.
	Average speed (km/h)	Displays average speed with a range of 000.0 to 999.9.
Fuel Economy	Average Fuel Economy (l/100km)	Displays fuel economy with ignition switch ON, average fuel economy each 30 minutes.
	Distance to Empty (km)	Displays possible driving distance with remaining fuel.
	Fuel Economy (l/100km)	Displays fuel economy each approx. 100 ms.
	Fuel Economy Record (l/100 km)	Displays Average Fuel Consumption History.
Maintenance (with Maintenance information*)	Engine oil	Maintenance intervals of engine oil and setting of oil change cycle
	Oil Filter	Maintenance intervals of oil filter and setting of filter replacement cycle
	Custom 1	Determines when maintenance intervals are needed.
	Custom 2	Determines when maintenance intervals are needed.

\*: Maintenance information displays the change cycle of engine oil, oil filter, custom 1 and custom 2 on LCD monitor depending on the driving distance specified by a driver or a technician.

## Drive Information

1. Select "Drive".
2. Elapsed time, driving distance and average speed are displayed as drive information. When pushing "ENTER", elapsed time, driving distance and average speed are all reset.

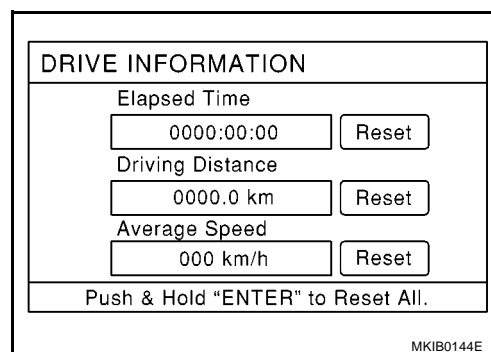





# LCD (LIQUID CRYSTAL DISPLAY)

## Fuel Economy Information

1. Select "Fuel Economy".
2. Average Fuel Economy, Distance to Empty, Fuel Economy are displayed as Fuel Economy information.

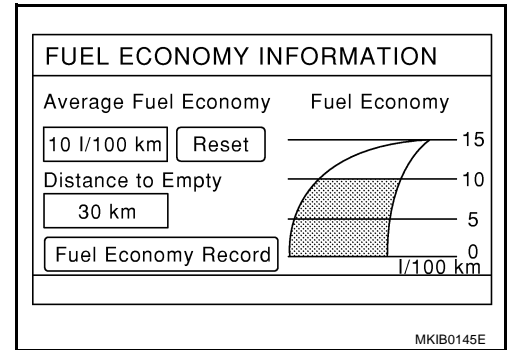


3. Select "Fuel Economy Record". The average fuel consumption history will be displayed in graph along with the average for the previous Reset – to – Reset period.

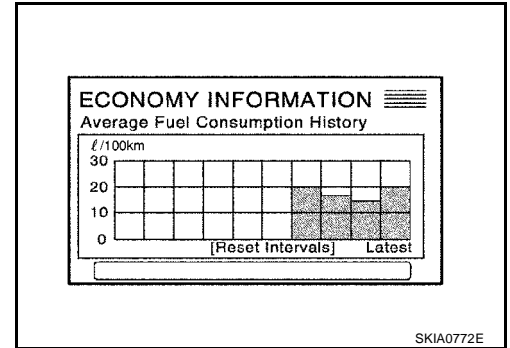

## Maintenance Information

1. Select "Maintenance".
2. Engine Oil, Oil Filter, Custom 1 and Custom 2 are displayed as maintenance information.

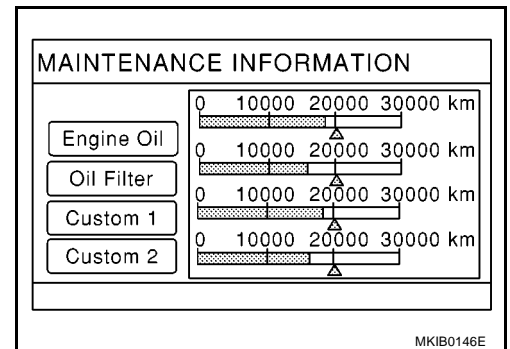

## LCD (LIQUID CRYSTAL DISPLAY)

### WARNING INDICATIONS

When combination meter receives warning signal from some control units or sensors, then combination meter warning lamp is illuminated.

Then combination meter sends warning signal to display unit warning indications on the screen.

Warning indicators	Warning lamps in instrument panel	Warning detection and cancel conditions		Cases of malfunction
ENGINE	ENGINE	Detection condition	Warning lamp ON signal is detected while engine is running.	ECM malfunction
		Cancel condition	Warning lamp OFF signal is detected.	
ENGINE OIL PRESSURE	Engine oil pressure	Detection condition	Warning lamp ON signal is detected for at least approx. 5 seconds while engine is running.	Engine oil pressure decreases.
		Cancel condition	Warning lamp OFF signal is detected.	
AIR BAG	Air bag	Detection condition	Warning lamp ON signal is detected for at least approx. 10 seconds after ignition switch is turned ON.	SRS air bag system malfunction
		Cancel condition	Warning lamp OFF signal is detected.	
LOW BRAKE FLUID	Brake	Detection condition	Warning lamp ON signal (fluid level) is detected.	Low brake fluid level
		Cancel condition	Warning lamp OFF signal is detected.	
OVERHEATING	—	Detection condition	Engine coolant temperature as being approx. 119°C (246°F) min.	Engine cooling system malfunction
		Cancel condition	Engine coolant temperature as being approx. 105°C (221°F) max.	
CHARGE	Charge	Detection condition	Warning lamp ON signal is detected while engine is running. Charging system malfunction	Charging system malfunction
		Cancel condition	Warning lamp OFF signal is detected.	
LOW WASHER FLUID	—	Detection condition	Washer liquid level falls below approx. 0.8 ℓ (1-3/8 Imp pt)	Low washer liquid level
		Cancel condition	Except above condition.	
LOW FUEL	Fuel level	Detection condition	After warning lamp ON signal is detected, vehicle is driven for over specified distance. [Fuel level: Approx. 9.6 ℓ (8-1/2 Imp pt)]	Low fuel level
		Cancel condition	Warning lamp OFF signal is detected.	
PARKING BRAKE	Brake	Detection condition	Parking brake ON signal is detected while vehicle is running [approx. 5 km/h (3 MPH) or faster].	Parking brake remains engaged.
		Cancel condition	Vehicle is stopped, or parking brake OFF signal is detected.	
DOOR OPEN	Door	Detection condition	Vehicle is running [approx. 5 km/h (3 MPH) or faster] and door ajar of any of the doors is detected.	Door is open
		Cancel condition	Vehicle is stopped and all the doors lock.	

## LCD (LIQUID CRYSTAL DISPLAY)

Warning indicators	Warning lamps in instrument panel	Warning detection and cancel conditions		Cases of malfunction
ABS	ABS	Detection condition	Warning lamp ON signal is detected when engine is running.	ABS control system malfunction
		Cancel condition	Warning lamp OFF signal is detected.	
ESP ELECTRONIC CONTROL SYSTEM	ESP	Detection condition	Warning lamp ON signal is detected when engine is running.	ESP system malfunction
		Cancel condition	Warning lamp OFF signal is detected.	
CVT ELECTRONIC CONTROL SYSTEM	CVT	Detection condition	Warning lamp ON signal is detected after ignition switch is turned ON.	TCM system malfunction
		Cancel condition	Warning lamp OFF signal is detected.	
CRUISE CONTROL SYSTEM	CRUISE	Detection condition	Warning lamp ON signal is detected after ignition switch is turned ON.	ICC system malfunction
		Cancel condition	Warning lamp OFF signal is detected.	

### Precautions for Display Unit Replacement


EKS009BU

- Record the following memorized contents before replacing the control unit.
  - <FM-AM>
    - Preset frequency
    - Area for indicating station, selection of overlapped stations
  - <CD>
    - Program status
  - <Sound quality>
    - Volume balance memory set values
    - Equalizer memory set values
  - <Image quality>
    - Brightness of light when ON/OFF
    - Dimming switching
    - Display color switching
- Replace the display unit after disconnecting both battery cables.

# LCD (LIQUID CRYSTAL DISPLAY)

## Component Parts and Harness Connector and Harness Connector Location

EKS009BV

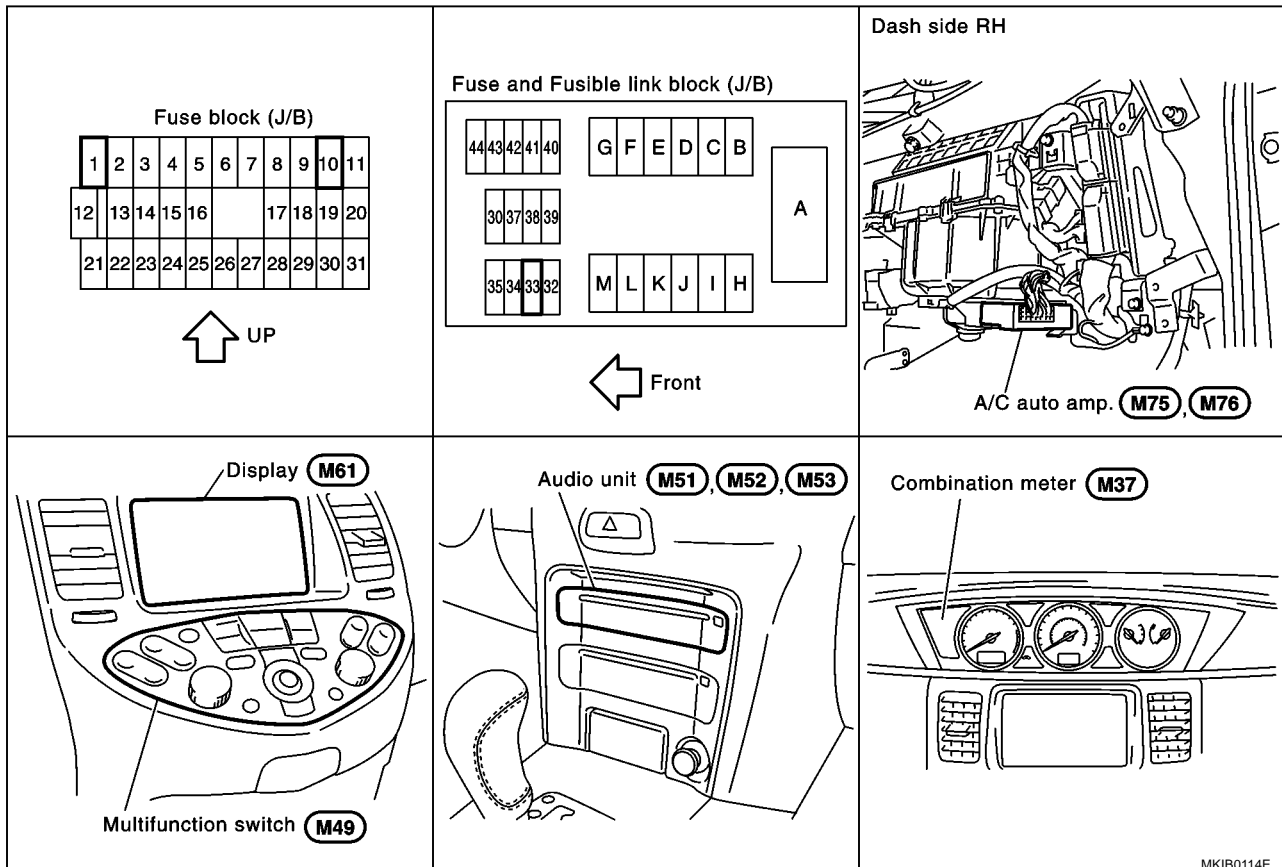


MKIB0114F

# LCD (LIQUID CRYSTAL DISPLAY)

## Schematic

EKS009BW

SMA for models w/o pre-display unit

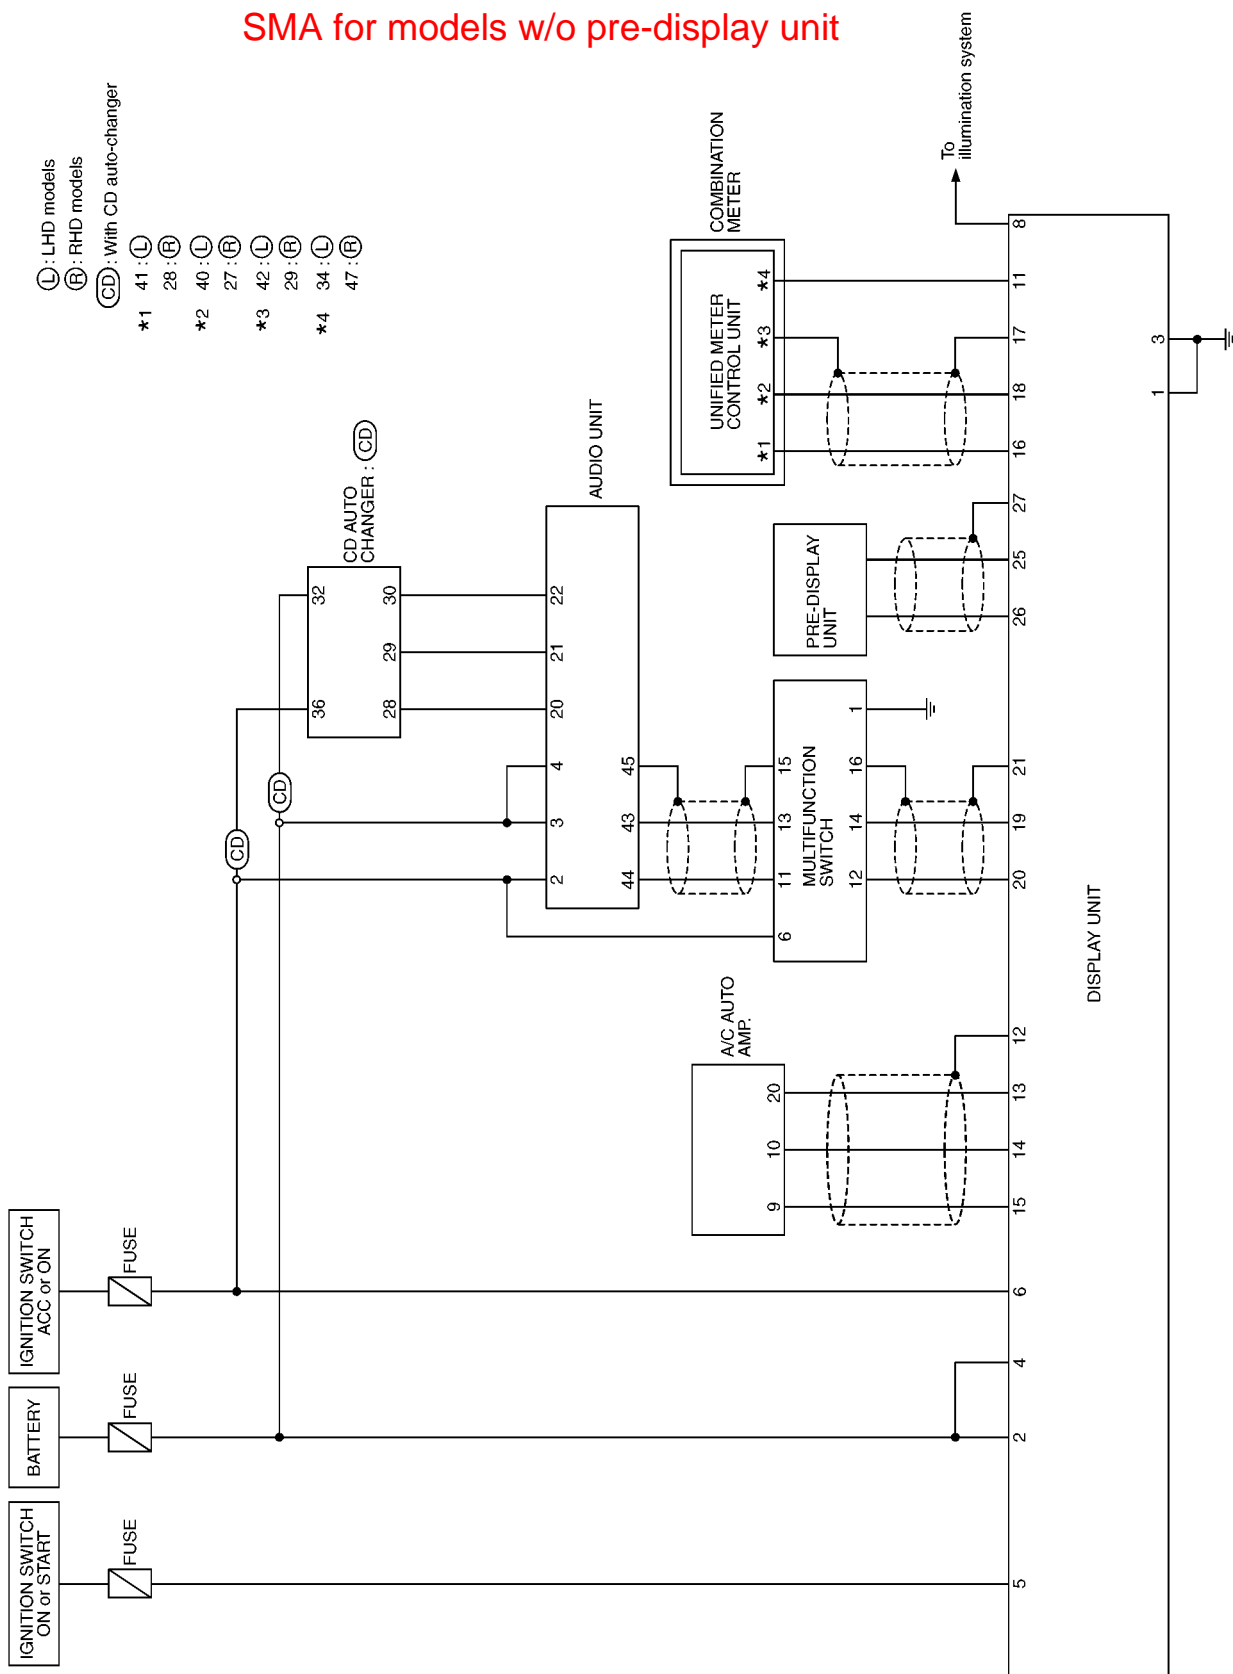

MKWA1021E



# LCD (LIQUID CRYSTAL DISPLAY)

## Wiring Diagram — COMM —

EKS009BX

### DI-COMM-03

⬡ G : WITH GASOLINE ENGINE  
⬡ CD : WITH CD AUTO-CHANGER





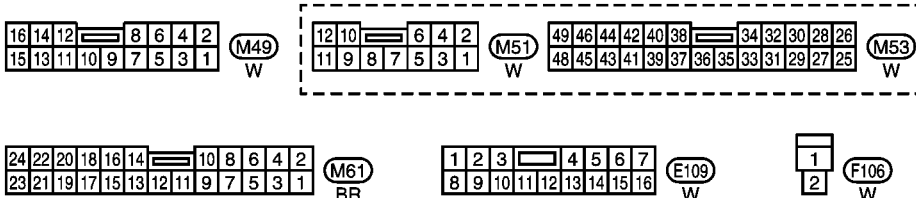
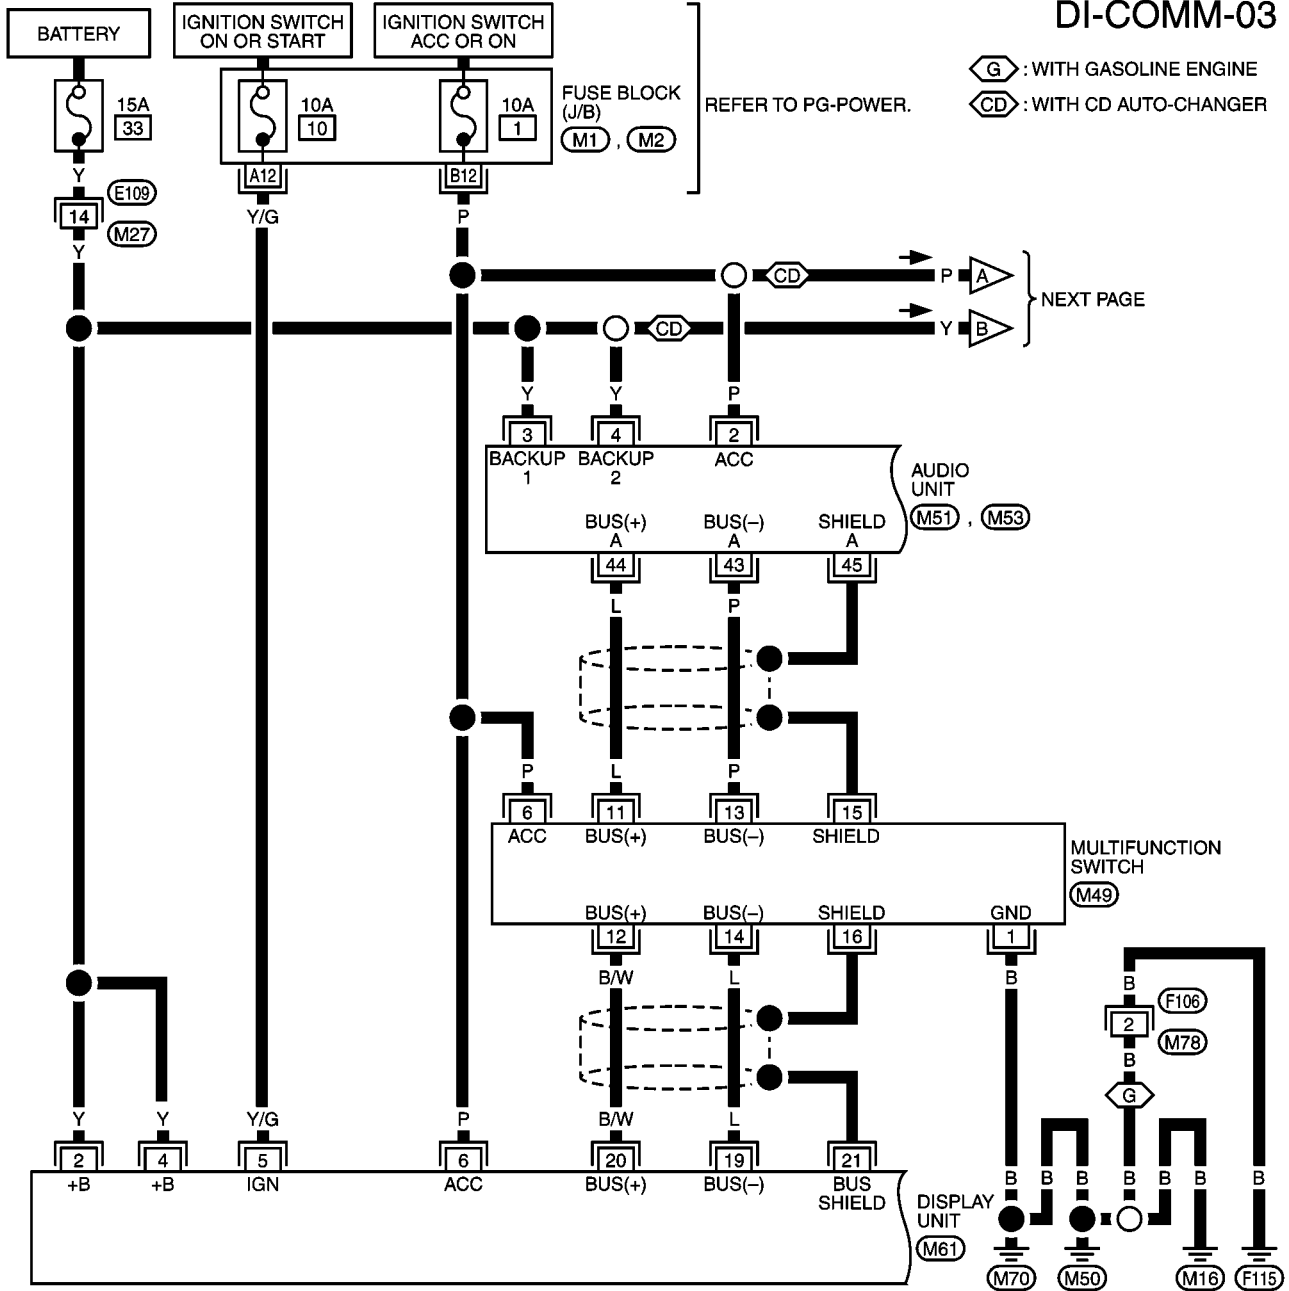


REFER TO THE FOLLOWING.  
⬡ M1, ⬡ M2 - FUSE BLOCK-  
JUNCTION BOX (J/B)

MKWA2481E






# LCD (LIQUID CRYSTAL DISPLAY)

## DI-COMM-04

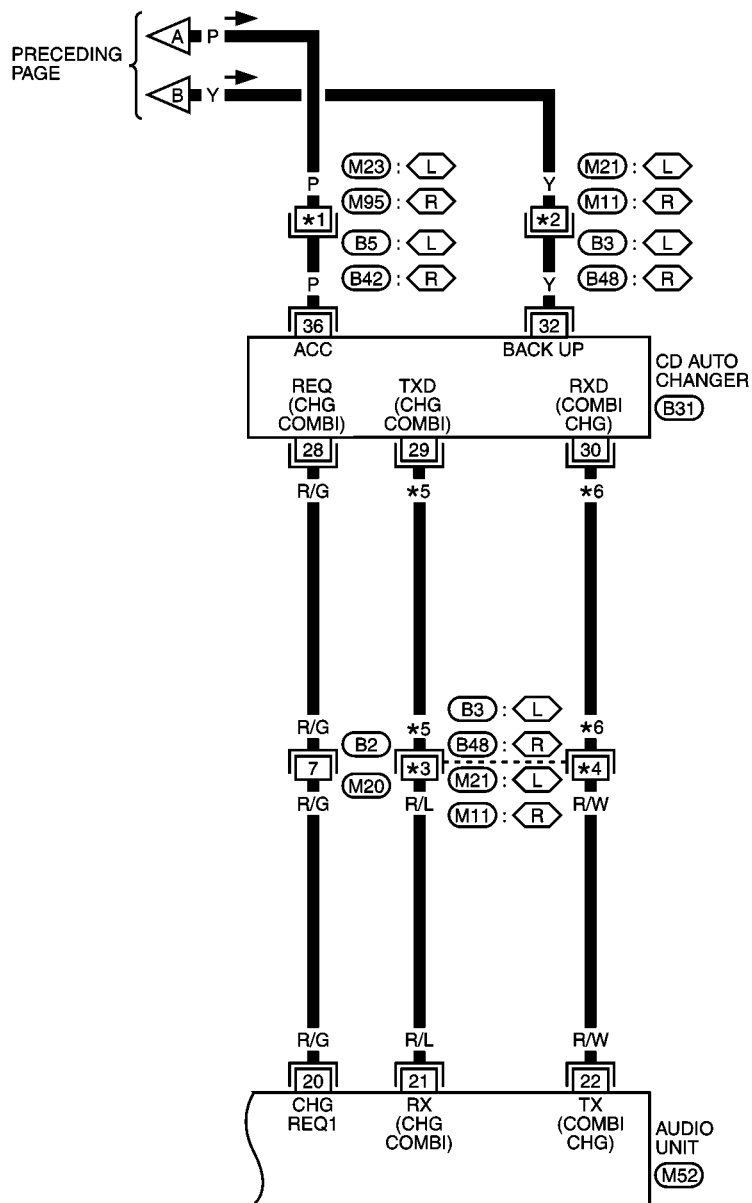

# LCD (LIQUID CRYSTAL DISPLAY)

DI-COMM-05

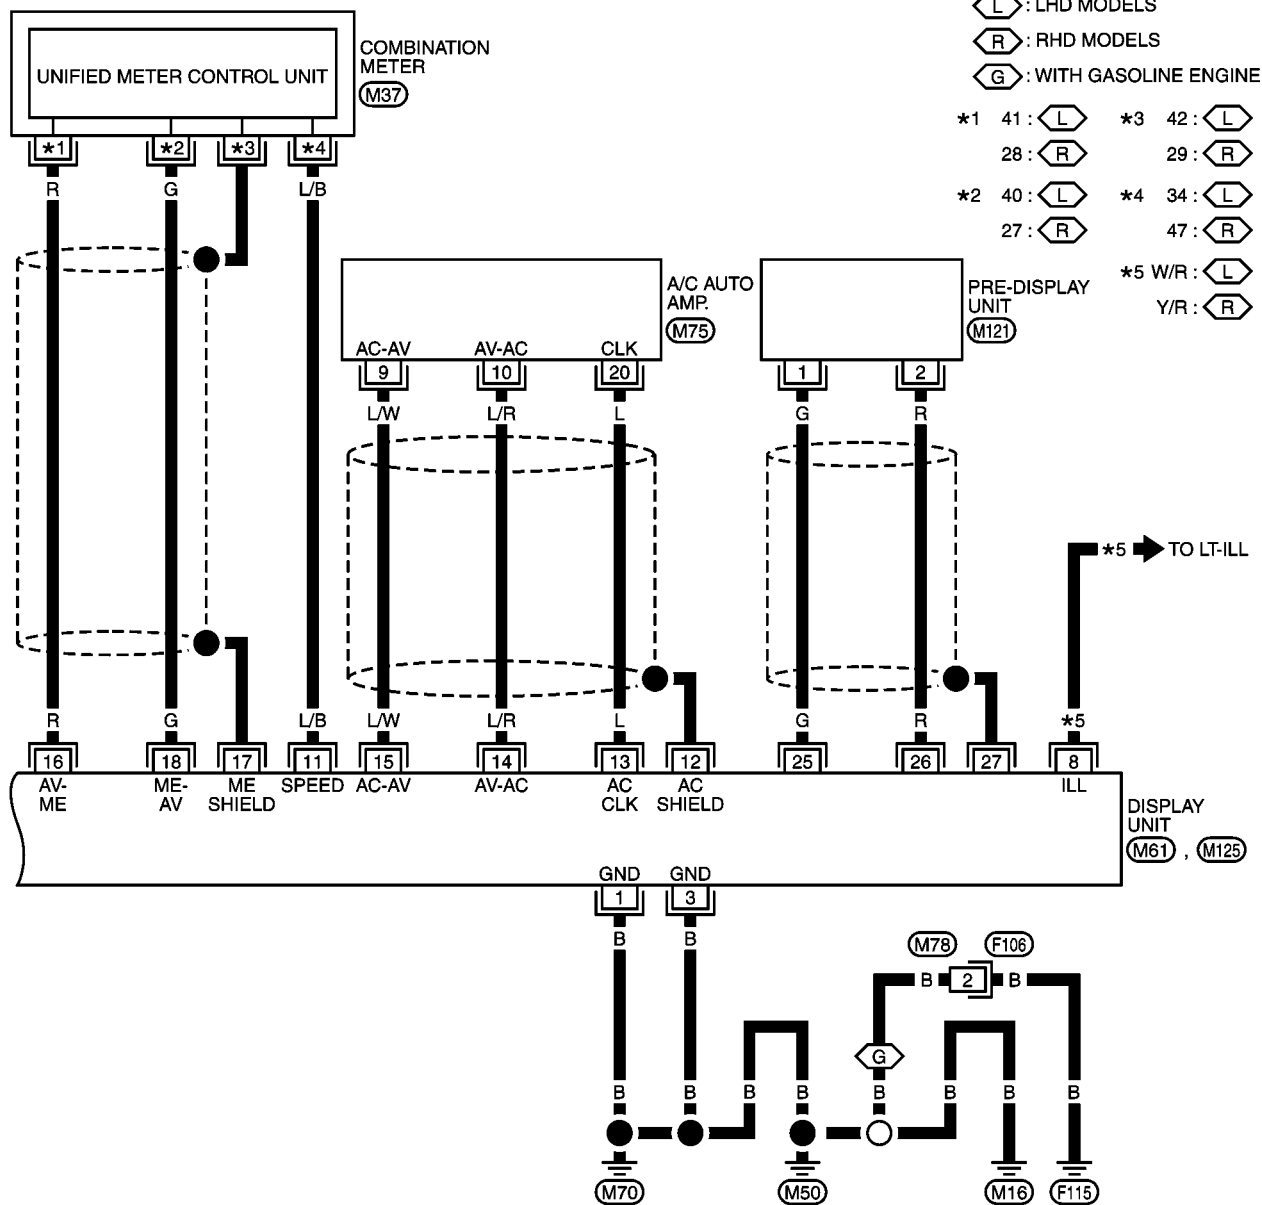





MKWA2483E







# LCD (LIQUID CRYSTAL DISPLAY)

## Terminals and Reference Value for Display Unit

EKS009BY

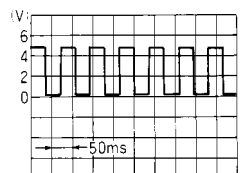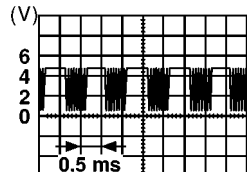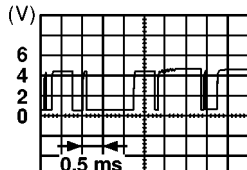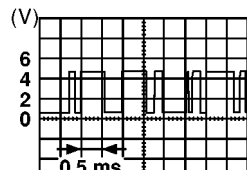TERMINALS			SIGNAL	CONDITION		VOLTAGE
(+)		(-)		IGNITION SWITCH	OPERATION	
TER-MINAL	WIRE COLOR					
1	B	Ground	—	—	—	—
2	Y	Ground	Battery power	OFF	—	Battery voltage
3	B	Ground	—	—	—	—
4	Y	Ground	Battery power	OFF	—	Battery voltage
5	Y/G	Ground	Ignition signal	ON	—	Battery voltage
6	P	Ground	ACC signal	ACC	—	Battery voltage
8	LHD: W/R RHD: Y/R	Ground	Illumination control signal	ON	Lighting switch position	Battery voltage
					1st or 2nd	0V
11	L/B	Ground	Vehicle speed signal (2-pulse)	ON	When vehicle speed is approx. 20 km/h (12 MPH)	
						ELF1080D
12	—	—	Shield ground	—	—	—
13	L	Ground	A/C clock signal	ON	—	
						SKIA0174E
14	L/R	Ground	A/C communication signal (AV-AC)	ON	—	
						SKIA0172E
15	L/W	Ground	A/C communication signal (AV-AC)	ON	—	
						SKIA0173E





# LCD (LIQUID CRYSTAL DISPLAY)

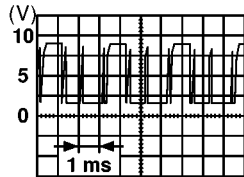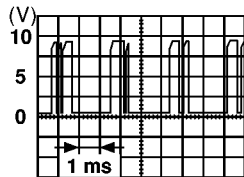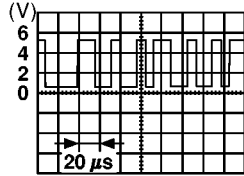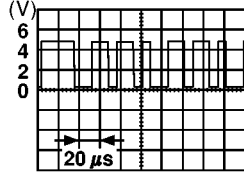TERMINALS			SIGNAL	CONDITION		VOLTAGE
(+) (−)		IGNITION SWITCH		OPERATION		
TER-MINAL	WIRE COLOR					
16	R	Ground	Communica- tion signal (AV-ME)	ON	Display the vehicle information screen.	 SKIA0169E
17	—	—	Shield ground	—	—	—
18	G	Ground	Communica- tion signal (ME-AV)	ON	Perform various settings on the vehicle information screen.	 SKIA0170E
19	L	Ground	Communica- tion signal (-)	ON	—	 SKIA0176E
20	B/W	Ground	Communica- tion signal (+)	ON	—	 SKIA0175E
21	—	Ground	Shield ground	—	—	—

# LCD (LIQUID CRYSTAL DISPLAY)

## Terminals and Reference Value for Multifunction Switch

EKS009BZ

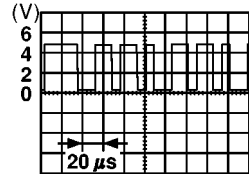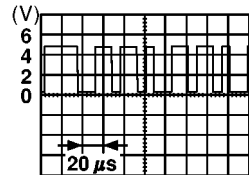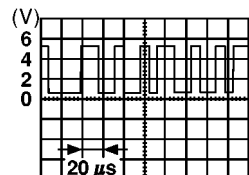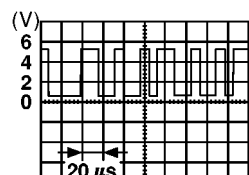TERMINALS			SIGNAL	CONDITION		VOLTAGE
(+) (−)		IGNITION SWITCH		OPERATION		
TERMINAL	WIRE COLOR					
6	P	Ground	ACC	ACC	—	Battery voltage
1	B	Ground	Ground	ON	—	Approx. 0V
11	L	Ground	Communication signal (+)	ON	—	 SKIA0175E
12	B/W	Ground	Communication signal (+)	ON	—	 SKIA0175E
13	P	Ground	Communication signal (-)	ON	—	 SKIA0176E
14	L	Ground	Communication signal (-)	ON	—	 SKIA0176E
15	—	Ground	Shield ground	ON	—	—
16	—	Ground	Shield ground	ON	—	—

## LCD (LIQUID CRYSTAL DISPLAY)

## On Board Self-Diagnosis Function

EK.S009C.0

## DESCRIPTION

- Diagnosis function consists of the self-diagnosis mode performed automatically and the CONFIRMATION/ADJUSTMENT mode operated manually.
- Self-diagnosis mode checks for connections between the units constituting this system, analyzes each individual unit at the same time, and displays the results on the LCD screen.
- CONFIRMATION/ADJUSTMENT mode is used to perform trouble diagnosis that require operation and judgment by an operator (trouble that cannot be automatically judged by the system), to check/change the set value.


## DIAGNOSIS ITEM

Mode			Description	Reference page
Self-diagnosis			<ul style="list-style-type: none"> <li>Center control unit (display unit) diagnosis.</li> <li>Analyzes connection between the display unit and each unit, and operation of each unit.</li> </ul>	<a href="#">DI-124, "Self-Diagnosis Mode"</a>
CONFIRMATION/ADJUSTMENT	Display Diagnosis	Display Color Spectrum Bar	Color of display can be checked in this mode.	<a href="#">DI-129, "DISPLAY DIAGNOSIS"</a>
		Display Gradation Bar	Gray gradation of display can be checked in this mode.	
	Vehicle Signals	Vehicle Speed	Vehicle speed input signal to center control unit (display unit), can be monitored in this mode.	<a href="#">DI-129, "VEHICLE SIGNALS"</a>
		Light	Light input signal to center control unit (display unit), can be monitored in this mode.	
		IGN	Ignition input signal to center control unit (display unit), can be monitored in this mode.	
	Auto Climate Control		Trouble diagnosis for auto climate control unit (A/C auto amp), can be checked in this mode.	<a href="#">ATC-55, "FUNCTION CONFIRMATION PROCEDURE"</a>
	Service		Service schedule can be changed in this mode	<a href="#">DI-130, "SERVICE"</a>

## Self-Diagnosis Mode OPERATION PROCEDURES


EK.S009C.1

1. Start the engine.
2. Turn the audio system off.
3. While pressing the “INFO” switch, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
  - Shifting from current screen to previous screen is performed by pressing “PREV” switch.

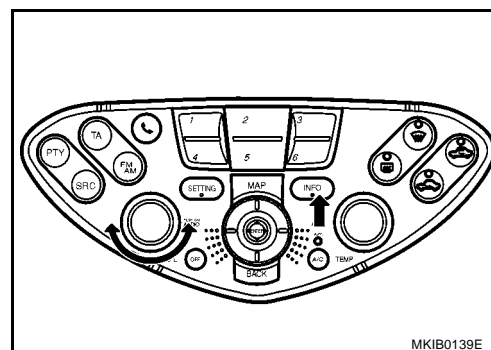


## LCD (LIQUID CRYSTAL DISPLAY)


4. The initial trouble diagnosis screen will be shown, and items "SELF-DIAGNOSIS" and "CONFIRMATION/ADJUSTMENT" will become selective.

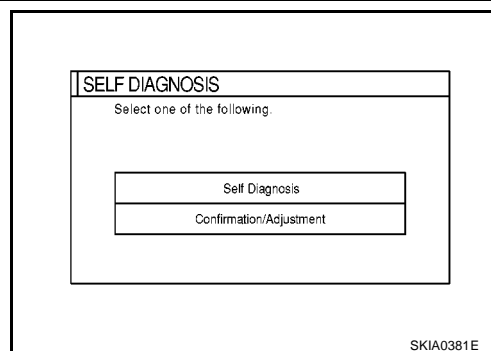

5. Perform self-diagnosis by selecting the "SELF-DIAGNOSIS".
- Self-diagnosis subdivision screen will be shown and the operation enters the self-diagnosis mode.
  - A bar graph shown below the self-diagnosis subdivision screen indicates progress of the diagnosis.

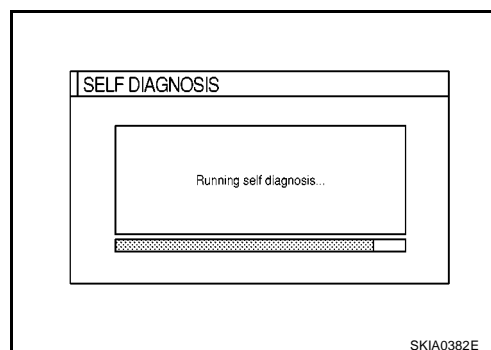

6. When the self-diagnosis completes, optional part confirmation screen will be shown.
- When connection of an optional part is judged malfunction, a screen to check if the optional part is fitted on the vehicle or not will be shown. When fitted, select the switch of the part on the screen and press "END". Then the "Self-diagnosis" screen will be shown.
  - When the optional part is connected normally, the switch for the part will not appear on the screen.

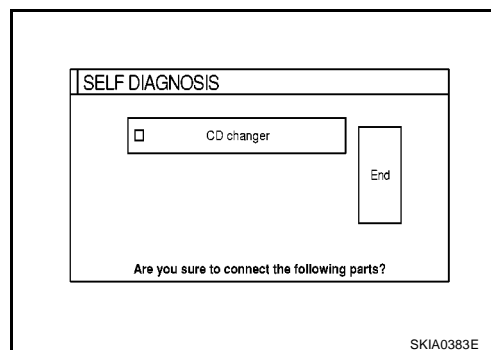


7. On the "Self-diagnosis" screen, each unit name will be colored according to the diagnosis result, as follows.

**Green** : No malfunctioning.

**Yellow** : Cannot be judged by self-diagnosis results.


**Red** : Unit is malfunctioning.

- If several malfunctions are present in a unit, color of its switch on the screen will be either red, yellow, or gray, determined by the malfunction of the highest priority.

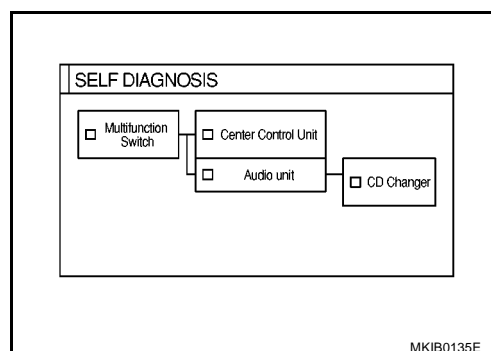

8. Select a switch on the "Self-diagnosis" screen and comments for the diagnosis results will be shown.

- When the switch is green, the following comment will be shown. "Self-diagnosis was successful. Further diagnosis and adjustments are recommended. Follow the "confirmation and adjustments" menu or refer to the service manual".
- When the switch is yellow, the following comment will be shown. "Connection to the following unit is abnormal. See the service manual for further details".
- When the switch is red, the following comment will be shown. "Center Control Unit is abnormal".

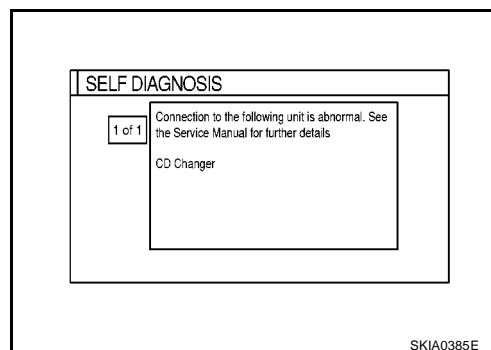

## LCD (LIQUID CRYSTAL DISPLAY)

---

**CAUTION:**

If self-diagnosis cannot activated, refer to [DI-138. "Self-Diagnosis Does Not Perform"](#) .

# LCD (LIQUID CRYSTAL DISPLAY)

## SELF-DIAGNOSIS RESULT

### Quick Reference Table

1. Select an applicable diagnosis No. in the diagnosis result quick reference table.
2. Find estimated malfunctioning system in the diagnosis No. table and perform check by referring to the AV communication line circuit diagram.
3. Turn the ignition switch to OFF and perform self-diagnosis again.

Screen switch					Diagnosis No.
Switch color	Center control unit *	Multifunction switch	Audio unit	CD auto changer	
Red	×				1
Yellow	×	×			2
	×		×	×	3
	×			×	4
	×	×	×	×	5

\*: Center control unit = Display unit

### CAUTION:

When an error is in the AV communication line, it cannot be detected on the screen because self-diagnosis is inoperative.

### Self-Diagnosis Codes


Diagnosis No.	Possible cause	Reference page
1	Display unit malfunction.	—
2	Multifunction switch power supply and ground circuit.	<a href="#">DI-132, "Power Supply and Ground Circuit Check for Multifunction Switch"</a>
3	Audio unit power supply and ground circuit. AV communication line between multifunction switch and the display unit. Audio unit internal communication circuit.	<ul style="list-style-type: none"><li>● <a href="#">AV-48, "Power Supply Circuit Inspection"</a></li><li>● <a href="#">DI-136, "Audio Circuit Check"</a></li></ul>
4	CD auto changer power supply and ground circuit. AV communication line between CD auto changer and audio unit.	<ul style="list-style-type: none"><li>● <a href="#">AV-48, "Power Supply Circuit Inspection"</a></li><li>● <a href="#">DI-136, "CD Auto Changer Circuit Check"</a></li></ul>
5	AV communication line circuit malfunction.	<a href="#">DI-137, "AV Communication Line Check"</a>

# LCD (LIQUID CRYSTAL DISPLAY)


## CONFIRMATION/ADJUSTMENT Mode OPERATION PROCEDURE

EKS009C2


1. Start the engine.
2. Turn the audio system off.
3. While pressing the "INFO" switch, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
  - Shifting from current screen to previous screen is performed by pressing "PREV" switch.

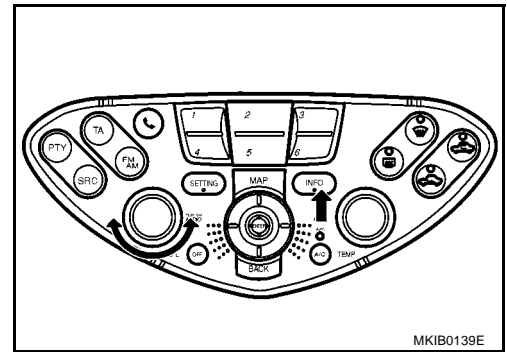

4. The initial trouble diagnosis screen will be shown, and items "SELF-DIAGNOSIS" and "CONFIRMATION/ADJUSTMENT" will become selective.

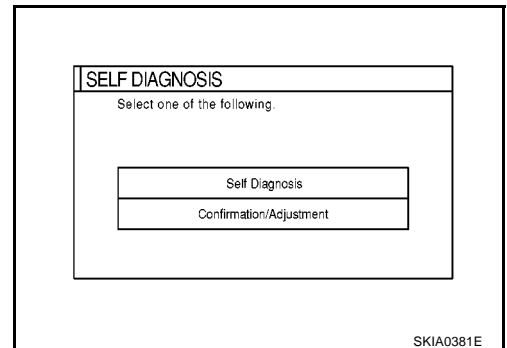

5. When "CONFIRMATION/ADJUSTMENT" is selected on the initial trouble diagnosis screen, the operation will enter the CONFIRMATION/ADJUSTMENT mode. In this mode, check and adjustment of each item will become possible.
6. Select each switch on "CONFIRMATION/ADJUSTMENT" screen to display the relevant diagnosis screen.

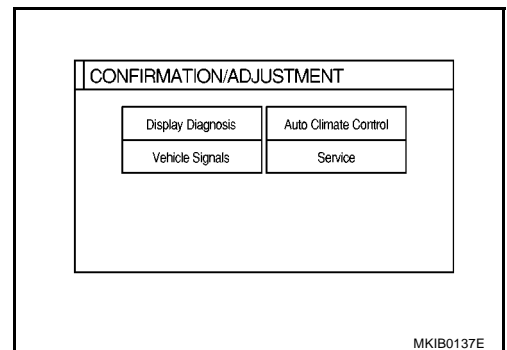




# LCD (LIQUID CRYSTAL DISPLAY)

## DISPLAY DIAGNOSIS

Use this mode to check the display color brightness and setting. The display unit must be replaced if the color brightness and shading are unusual.

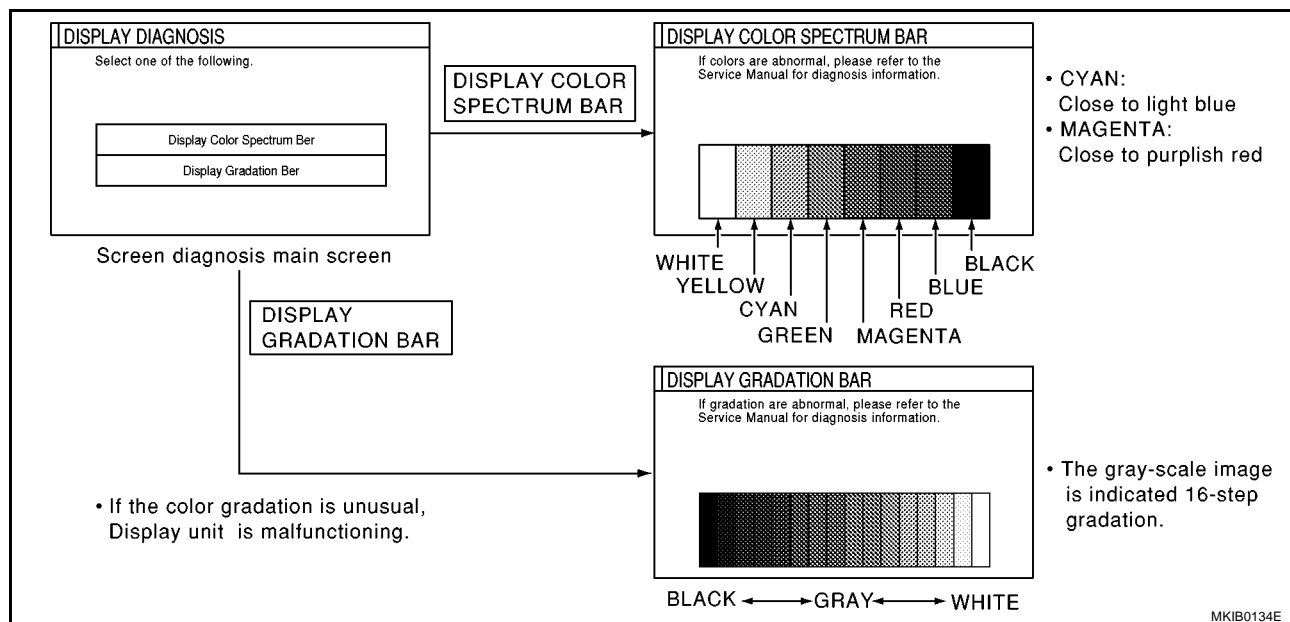


### CAUTION:

When Display Color Spectrum Bar screen is completed after “BACK” switch is pressed, the screen color changes once. This is normal.

## VEHICLE SIGNALS

- In this mode, following input signals to the display unit can be checked on the display.

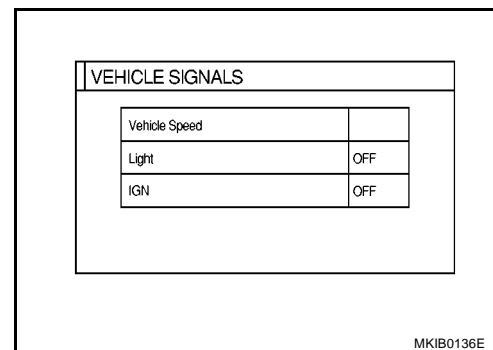

Diagnosis item	Display	Condition	Remarks
Vehicle speed	ON	Vehicle speed is greater than 0 km/h (0 MPH).	Changes in indication may be delayed by approx. 1.5 seconds. This is normal.
	OFF	Vehicle speed is 0 km/h (0 MPH).	
	—	Ignition switch is in “ACC” position.	
Light	ON	Lighting switch is 1st or 2nd position.	-
	OFF	Lighting switch is “OFF” position.	
IGN	ON	Ignition switch is in “ON” position.	-
	OFF	Ignition switch is in “ACC” or “OFF” position.	

- If vehicle speed is NG, refer to [DI-133, "Vehicle Speed Signal Check/LHD Models"](#) or [DI-134, "Vehicle Speed Signal Check/RHD Models"](#).
- If light is NG, refer to [DI-135, "Illumination Control Signal Check"](#).
- If IGN is NG, refer to [DI-135, "Ignition Signal Check"](#).


# LCD (LIQUID CRYSTAL DISPLAY)

## SERVICE

- In this mode, service schedule can be set on this display.

### NOTE:

- To set service schedule, change journey distance.
- When the indicator of “Service Information Display” is set green, the color of the journey distance marker will be red. And automatically service information screen will be displayed when journey distance is reached on service schedule.

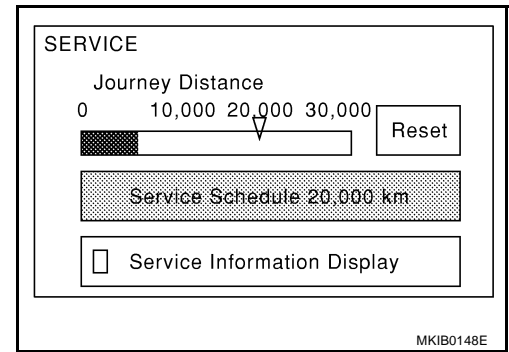

# LCD (LIQUID CRYSTAL DISPLAY)

## Power Supply and Ground Circuit Check for Display Unit

EKS009C3

### 1. CHECK FUSE

Check that the following fuses in display are blown.

Unit	Power source	Fuse No.
Display	Battery power	33
	Ignition switch ACC or ON	1

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse. Refer to [PG-3](#), "[POWER SUPPLY ROUTING](#)".

### 2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect display connector.
2. Check voltage between display unit harness connector and ground.

Terminals			Ignition switch position		
(+) Terminal (Wire color)		(-)	OFF	ACC	ON
M61	2 (Y)	Ground	Battery voltage	Battery voltage	Battery voltage
	4 (Y)	Ground	Battery voltage	Battery voltage	Battery voltage
	6 (P)	Ground	0V	Battery voltage	Battery voltage

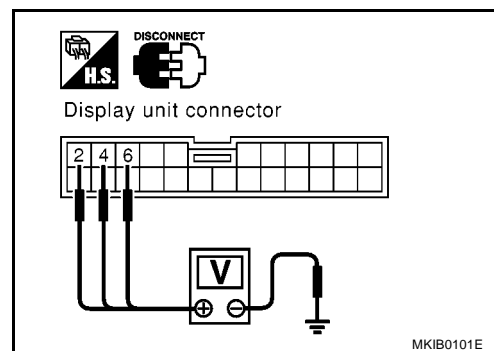

OK or NG


OK >> GO TO 3.

NG >> Check harness for open or short between display and fuse.

### 3. GROUND CIRCUIT CHECK

Check continuity between display unit and ground.

Terminals			Continuity
(+) Terminal (wire color)		(-)	
M61	1 (B)	Ground	Yes
	3 (B)	Ground	Yes

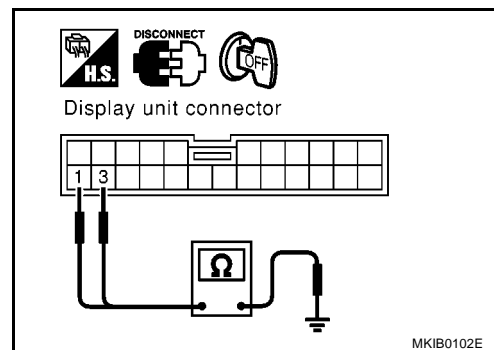

OK or NG

OK >> Inspection end.

NG >> Check ground harness.

# LCD (LIQUID CRYSTAL DISPLAY)

## Power Supply and Ground Circuit Check for Multifunction Switch

EKS009C4

### 1. CHECK FUSES

Check the fuse below.

Unit	Power source	Fuse No.
Multifunction switch	Ignition switch ACC or ON	1

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse. Refer to [PG-3](#).  
"POWER SUPPLY ROUTING".

### 2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect multifunction switch connector.
2. Check voltage between multifunction switch and ground.

Terminals		Ignition switch position			
(+)		(-)	OFF	ACC	ON
Connector	Terminal (Wire color)				
M49	6 (P)	Ground	0V	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between multifunction switch and fuse.

### 3. GROUND CIRCUIT CHECK



1. Check continuity between multifunction switch harness connector M49 terminal 1 (B) and ground.

**Continuity should exist.**

OK or NG

OK >> Inspection end.

NG >> Check ground harness.

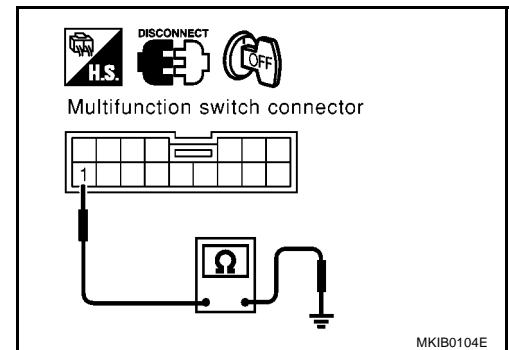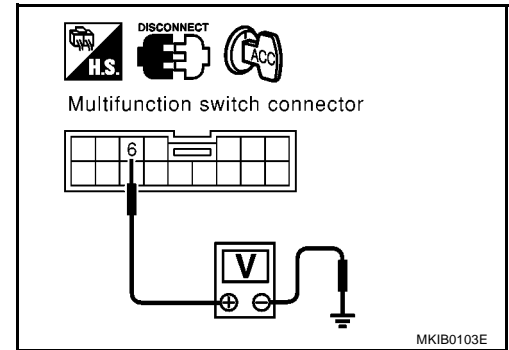

# LCD (LIQUID CRYSTAL DISPLAY)

## Vehicle Speed Signal Check/LHD Models

EKS009C5

### 1. HARNESS CHECK

1. Disconnect display unit connector and combination meter connector.
2. Check the following.
- Continuity between display unit harness connector M61 terminal 11 (L/B) and combination meter harness connector M37 terminal 34 (L/B).

**Continuity should exist.**


- Continuity between display unit harness connector M61 terminal 11 (L/B) and ground.

**Continuity should not exist.**

OK or NG

OK >> GO TO 2.

NG >> Replace harness or connector.

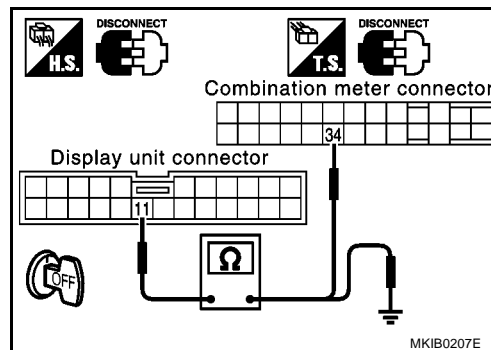



### 2. VEHICLE SPEED SIGNAL CHECK

Connect combination meter connector and display unit connector.

#### Ⓜ With CONSULT-II

1. Lift up drive wheels.
2. Start engine and drive vehicle at more than 20 km/h (12MPH).
3. Check signal between display unit harness connector M61 terminal 11(L/B) and ground when rotating wheels with engine at idle. (Use "SIMPLE OSCILLOSCOPE" in "SUB MODE" with CONSULT-II.)

**11- Ground:**

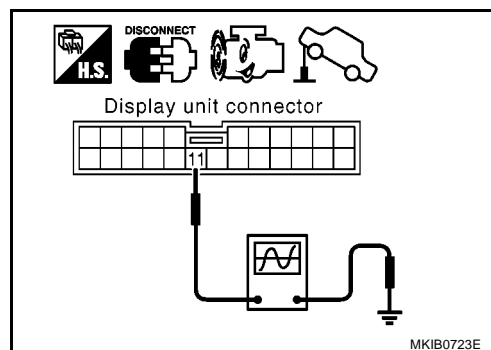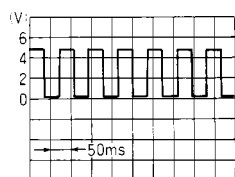

#### ⊗ Without CONSULT-II


1. Lift up drive wheels.
2. Start engine and drive vehicle at more than 20 km/h (12MPH).
3. Check voltage between display unit harness connector M61 terminal 11(L/B) and ground when rotating wheels with engine at idle.

**Voltage: Approximately 0 – 5V**

OK or NG

OK >> Replace display unit.

NG >> Check combination meter system. Refer to [DI-36, "Combination Meter Self-Diagnosis"](#).

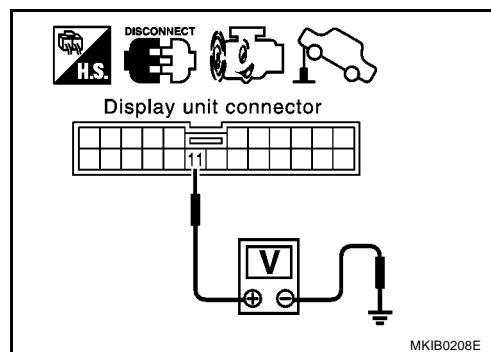

# LCD (LIQUID CRYSTAL DISPLAY)

## Vehicle Speed Signal Check/RHD Models

EKS009C6


### 1. HARNESS CHECK

1. Disconnect display unit connector and combination meter connector.
2. Check the following.
- Continuity between display unit harness connector M61 terminal 11 (L/B) and combination meter harness connector M37 terminal 47 (L/B)

**Continuity should exist.**

- Continuity between display unit harness connector M61 terminal 11 (L/B) and ground.

**Continuity should not exist.**

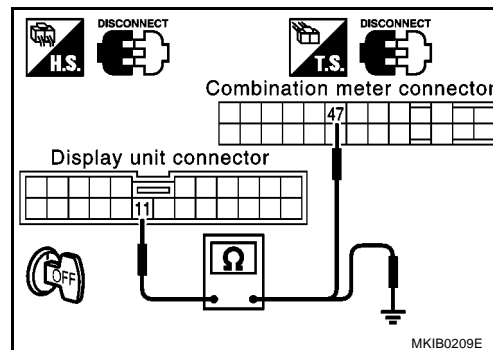

OK or NG

OK >> GO TO 2.

NG >> Replace harness or connector.


### 2. VEHICLE SPEED SIGNAL CHECK

Connect combination meter connector and display unit connector.


#### Ⓜ With CONSULT-II

1. Lift up drive wheels.
2. Start engine and drive vehicle at more than 20 km/h (12MPH).
3. Check signal between display unit harness connector M61 terminal 11(L/B) and ground when rotating wheels with engine at idle. (Use "SIMPLE OSCILLOSCOPE" in "SUB MODE" with CONSULT-II.)

**11- Ground:**

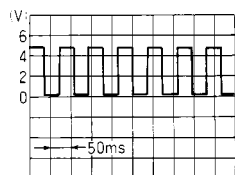

ELF1080D

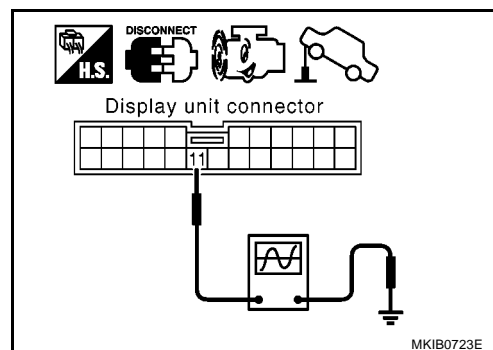

#### ⊗ Without CONSULT-II


1. Lift up drive wheels.
2. Start engine and drive vehicle at more than 20 km/h (12MPH).
3. Check voltage between display unit harness connector M61 terminal 11(L/B) and ground when rotating wheels with engine at idle.

**Voltage: Approximately 0 – 5V**

OK or NG

OK >> Replace display unit.

NG >> Check combination meter system. Refer to [DI-77, "Combination Meter Self-Diagnosis"](#).

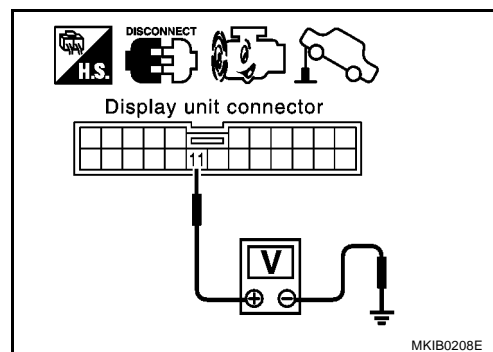

# LCD (LIQUID CRYSTAL DISPLAY)

## Illumination Control Signal Check

EKS009C7

### 1. ILLUMINATION CONTROL SIGNAL CHECK

1. Check voltage between display unit and ground.


Terminals		(-)	Condition	Voltage [V]
(+)				
Connector	Terminal (wire color)			
M61	8*	Ground	Lighting switch 1st or 2nd position	Battery voltage
			OFF	Approx.0

\*: LHD: (W/R), RHD: (Y/R)

#### OK or NG

OK >> Replace display unit.

NG >> Check harness for open or short between display unit and lighting switch.

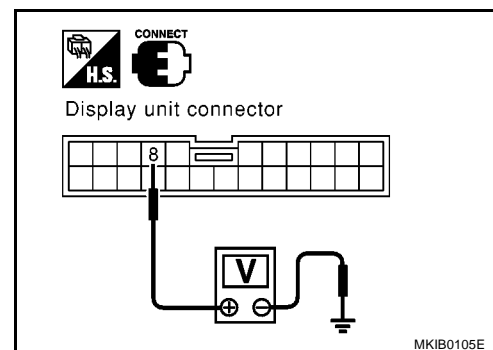

## Ignition Signal Check

EKS009C8

### 1. IGNITION SIGNAL CHECK


1. Turn ignition switch ON.
2. Disconnect the display unit connector.
3. Check voltage between display unit harness connector M61 terminal 5 (Y/G) and ground.

**Battery voltage should exist.**

#### OK or NG

OK >> Replace display unit.

NG >> Check harness for open or short between display unit and fuse.

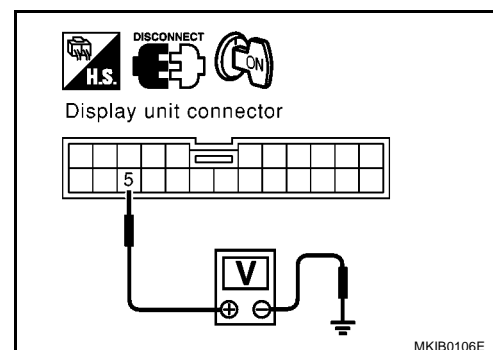

# LCD (LIQUID CRYSTAL DISPLAY)

## Audio Circuit Check

EKS009C9

### 1. AUDIO UNIT CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect audio unit connector.
3. Check continuity between multifunction switch and audio unit.

Terminals				Continuity
Multifunction switch		Audio unit		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M49	11 (L)	M53	44 (L)	Yes
	13 (P)		43 (P)	


4. Check continuity between multifunction switch and ground.

Terminals			Continuity
Connector	Terminal (Wire color)	Terminal	
M49	11 (L)	Ground	No
	13 (P)		

OK or NG

OK >> Replace audio unit.

NG >> Replace harness or connector.

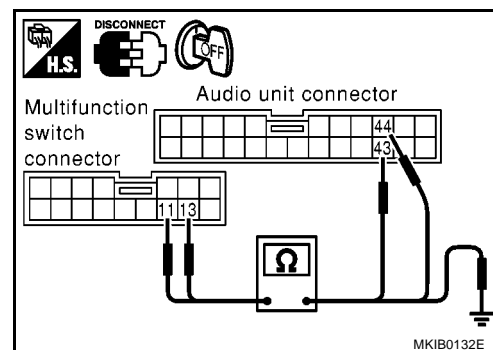

## CD Auto Changer Circuit Check

EKS009CA

### 1. CD AUTO CHANGER CIRCUIT CHECK

1. Disconnect CD auto changer connector.
2. Check continuity between audio unit and CD auto changer.

Terminals				Continuity
Audio unit		CD auto changer		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M52	20 (R/G)	B31	28 (R/G)	Yes
	21 (R/L)		29 (*1)	
	22 (R/W)		30 (*2)	

\*1: Sedan and wagon models (W)  
Hatchback models (R/L)

\*2: Sedan and wagon models (B)  
Hatchback models (R/W)


3. Check continuity between multifunction switch and ground.

Terminals			Continuity
Connector	Terminal (Wire color)	Terminal	
M49	20 (R/G)	Ground	No
	21 (R/L)		
	22 (R/W)		

OK or NG

OK >> Replace CD auto changer.

NG >> Replace harness or connector.

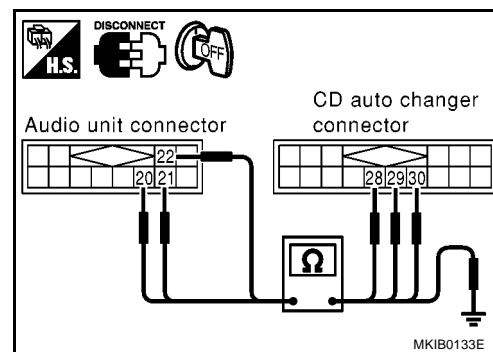



# LCD (LIQUID CRYSTAL DISPLAY)

## AV Communication Line Check

EKS009CB

### 1. MULTIFUNCTION SWITCH CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect display unit connector and multifunction switch connector.
3. Check continuity between display unit and multifunction switch.

Terminals				Continuity
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M61	19 (L)	M49	14 (L)	Yes
	20 (B/W)		12 (B/W)	

4. Check continuity between display unit and ground.

Terminals			Continuity
Connector	Terminal (Wire color)	Terminal	
M61	19 (L)	Ground	No
	20 (B/W)		

OK or NG

OK >> GO TO 2.

NG >> Replace harness or connector

### 2. AUDIO UNIT CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect audio unit connector.
3. Check continuity between multifunction switch and audio unit.

Terminals				Continuity
Multifunction switch		Audio unit		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M49	11 (L)	M53	44 (L)	Yes
	13 (P)		43 (P)	



4. Check continuity between multifunction switch and ground.

Terminals			Continuity
Connector	Terminal (Wire color)	Terminal	
M49	11 (L)	Ground	No
	13 (P)		

OK or NG

OK >> GO TO 3.

NG >> Replace harness or connector.

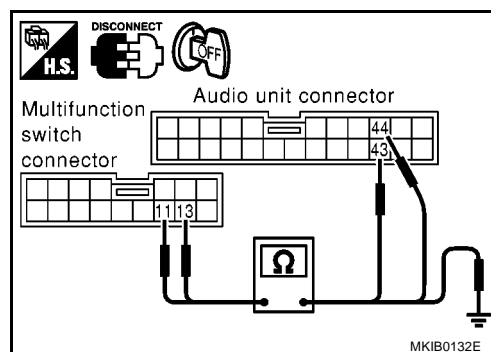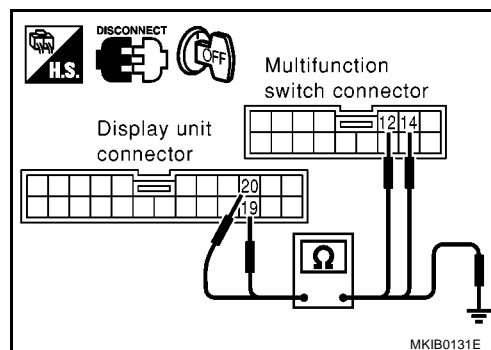

# LCD (LIQUID CRYSTAL DISPLAY)

## 3. CD CHANGER CIRCUIT CHECK

1. Disconnect CD auto changer connector.
2. Check continuity between audio unit and CD auto changer.

Terminals				Continuity
Audio unit		CD auto changer		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M52	20 (R/G)	B31	28 (R/G)	Yes
	21 (R/L)		29 (*1)	
	22 (R/W)		30 (*2)	

\*1: Sedan and wagon models (W)

Hatchback models (R/L)

\*2: Sedan and wagon models (B)

Hatchback models (R/W)

3. Check continuity between multifunction switch and ground.

Terminals			Continuity
Connector	Terminal (Wire color)	Terminal	
M49	20 (R/G)	Ground	No
	21 (R/L)		
	22 (R/W)		

OK or NG

OK >> Replace display unit.

NG >> Replace harness or connector.

## Self-Diagnosis Does Not Perform

EKS009CC

### 1. MULTIFUNCTION SWITCH CHECK

Check multifunction switch power and ground circuit. Refer to [DI-132, "Power Supply and Ground Circuit Check for Multifunction Switch"](#).

>> GO TO 2.

### 2. DISPLAY UNIT CHECK

Check display unit power and ground circuit. Refer to [DI-131, "Power Supply and Ground Circuit Check for Display Unit"](#).

>> GO TO 3.


### 3. SELF-DIAGNOSIS CHECK

1. Disconnect audio unit connector M53.
2. Perform self-diagnosis mode.

Can self-diagnosis mode be activated?

Yes >> GO TO 4.

No >> AV communication line check. Refer to [DI-137, "AV Communication Line Check"](#).

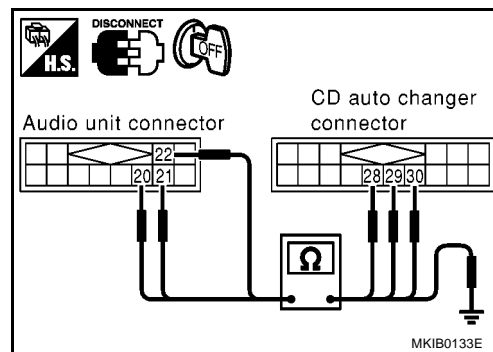

# LCD (LIQUID CRYSTAL DISPLAY)

## 4. MULTIFUNCTION SWITCH CIRCUIT CHECK

1. Disconnect multifunction switch connector.
2. Check continuity between multifunction switch and audio unit.

Terminals				Continuity
Multifunction switch		Audio unit		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M49	11 (L)	M53	44 (L)	Yes
	13 (P)		43 (P)	


3. Check continuity between multifunction switch and ground.

Terminals			Continuity
Connector	Terminal (Wire color)	Terminal	
M49	11 (L)	Ground	No
	13 (P)		

OK or NG

OK >> GO TO 5.

NG >> Replace harness or connector.

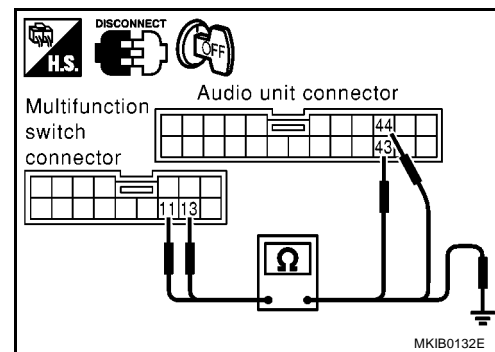

## 5. AUDIO UNIT CIRCUIT CHECK

1. Disconnect CD auto changer connector.
2. Check continuity between audio unit and CD auto changer.

Terminals				Continuity
Audio unit		CD auto changer		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M52	20 (R/G)	B31	28 (R/G)	Yes
	21 (R/L)		29 (*1)	
	22 (R/W)		30 (*2)	

\*1: Sedan and wagon models (W)  
Hatchback models (R/L)

\*2: Sedan and wagon models (B)  
Hatchback models (R/W)


3. Check continuity between audio unit and ground.

Terminals			Continuity
Connector	Terminal (Wire color)	Terminal	
M52	20 (R/G)	Ground	No
	21 (R/L)		
	22 (R/W)		

OK or NG

OK >> Inspection end.

NG >> Replace harness or connector.

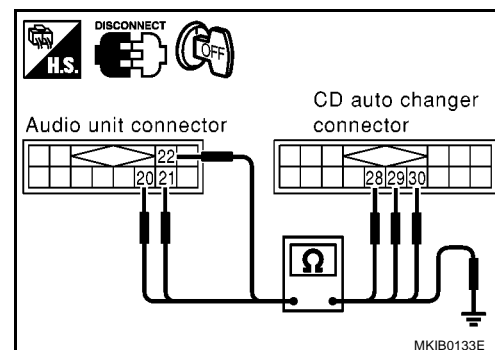

## RGB Screen Is Not Shown

Replace display unit.

EKS009CD

# LCD (LIQUID CRYSTAL DISPLAY)

## Color of RGB Image Is Not Proper

EKS009CE

Replace display unit.

## RGB Screen Is Rolling

EKS009CF

Replace display unit.


## Air Conditioning Controls (Only) Are Ineffective (Rear Defogger Control Excluded)

EKS009CG

### 1. A/C AUTO AMP. AND DISPLAY UNIT CIRCUIT CHECK


1. Turn the ignition switch OFF.
2. Disconnect A/C auto amp. connector and display unit connector.
3. Check continuity between display unit and A/C auto amp.

Terminals				Continuity
Display unit (+)		A/C auto amp. (-)		
Connector	Terminal (wire color)	Connector	Terminal (wire color)	
M61	13 (L)	M75	20 (L)	YES
	14 (L/R)		10 (L/R)	
	15 (L/W)		9 (L/W)	

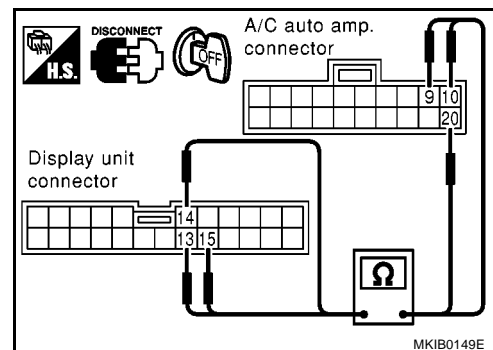

4. Check continuity between display unit and ground.

Terminals			Continuity
Connector	Terminal (wire color)	(-)	
M61	13 (L)	Ground	NO
	14 (L/R)		
	15 (L/W)		

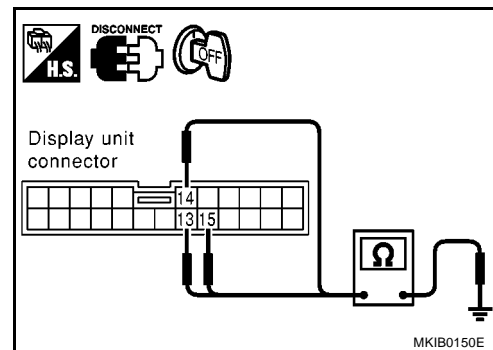

OK or NG


OK >> GO TO 2.

NG >> Replace harness or connector.

### 2. A/C-AV, AV-AC, AC-CLK COMMUNICATION SIGNAL CHECK

1. Connect A/C auto amp. connector.
2. Turn the ignition switch ON.
3. Check voltage between display unit and ground.

Terminals			Voltage [V]
(+) (Terminal (wire color))		(-)	
Connector	Terminal (wire color)		
M61	13 (L)	Ground	Approx. 3.5 or more
	14 (L/R)		
	15 (L/W)		

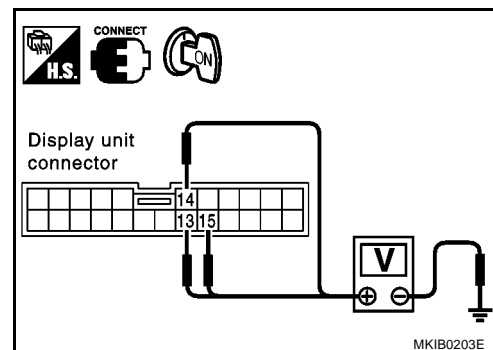

OK or NG

OK >> GO TO 3.

NG >> Replace A/C auto amp.


## LCD (LIQUID CRYSTAL DISPLAY)

### 3. A/C- AV, AV- AC, AC- CLK COMMUNICATION SIGNAL CHECK

1. Connect display unit harness connector.
2. Turn the ignition switch ON.
3. Check voltage signal between display unit and ground with oscilloscope or CONSULT-II.

Terminals		Reference signal
(+)	(-)	
Connector	Terminal (wire color)	
M61	13 (L)	Ground
	14 (L/R)	
	15 (L/W)	

DI-121, "Terminals and Reference Value for Display Unit"

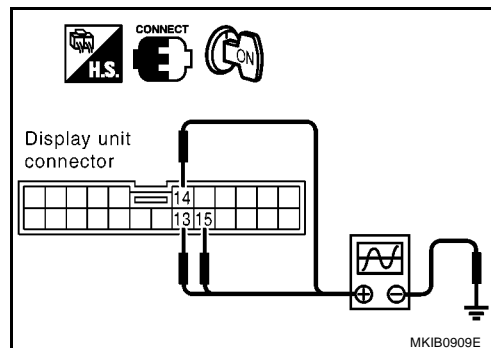

OK or NG

- OK >> Replace A/C auto amp.  
NG >> Replace display unit.

### Fuel Information Is Not Displayed/Warning Message Is Not Displayed/LHD Models

EKS009CH

#### 1. COMMUNICATION LINE (MA-AV, AV-ME) CIRCUIT CHECK

1. Disconnect the display unit connector and combination meter connector.
2. Check continuity between display unit and ground.


Terminals		Continuity
Connector	Terminal (wire color)	
M61	16 (R)	Ground
	18 (G)	

3. Check continuity between display unit and combination meter.

Terminals				Continuity
Display unit		Combination meter		
Connector	Terminal (wire color)	Connector	Terminal (wire color)	
M61	16 (R)	M37	41 (R)	Yes
	18 (G)		40 (G)	

OK or NG


- OK >> GO TO 2.  
NG >> Replace harness or connector.

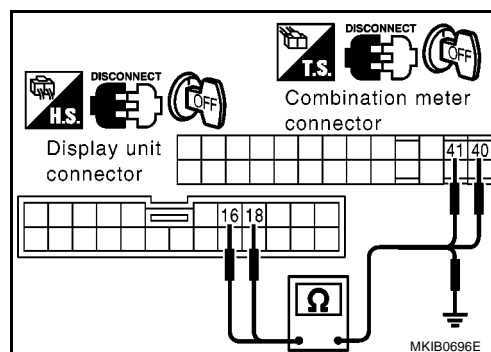


# LCD (LIQUID CRYSTAL DISPLAY)

## 2. COMMUNICATION SIGNAL (AV-ME) CHECK

1. Connect display unit connector and combination meter connector.
2. Turn ignition switch ON.
3. Check voltage signal between display unit harness connector M61 terminal 16 (R) and ground with oscilloscope or CONSULT-II.

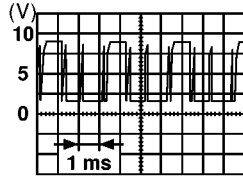

SKIA0169E

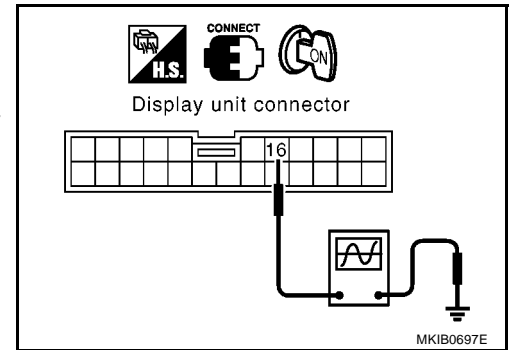

MKIB0697E


OK or NG

OK >> GO TO 3.


NG >> Replace display unit.

## 3. COMMUNICATION SIGNAL (ME-AV) CHECK

1. Turn ignition switch to ON and display.
2. Check voltage signal between display unit harness connector M61 terminal 18 (G) and ground with oscilloscope or CONSULT-II.

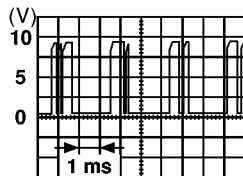

SKIA0170E

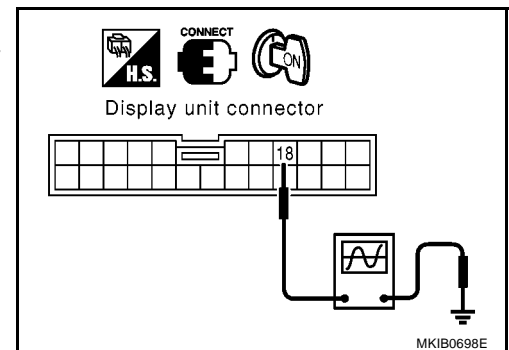

MKIB0698E

OK or NG

OK >> Replace display unit.

NG >> Replace combination meter.

# LCD (LIQUID CRYSTAL DISPLAY)


## Fuel Information Is Not Displayed/Warning Message Is Not Displayed/RHD Models

EKS009CI

### 1. COMMUNICATION LINE (MA-AV, AV-ME) CIRCUIT CHECK

1. Disconnect the display unit connector and combination meter connector.
2. Check continuity between display unit and combination meter.

Terminals				Continuity
Display unit		Combination meter		
Connector	Terminal (wire color)	Connector	Terminal (wire color)	
M61	16 (R)	M37	28 (R)	Yes
	18 (G)		27 (G)	

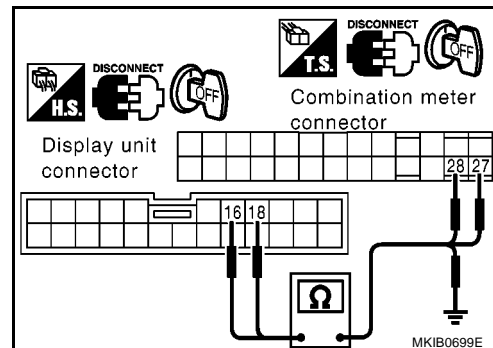

3. Check continuity between display unit and ground.


Terminals			Continuity
Connector	Terminal (wire color)	Terminal	
M61	16 (R)	Ground	No
	18 (G)		

OK or NG


- OK >> GO TO 2.  
 NG >> Replace harness or connector.

### 2. COMMUNICATION SIGNAL (AV-ME) CHECK

1. Connect display unit connector and combination meter connector.
2. Turn ignition switch ON.
3. Check voltage signal between display unit harness connector M61 terminal 16 (R) and ground with oscilloscope or CONSULT-II.

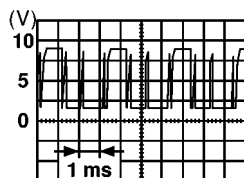

SKIA0169E

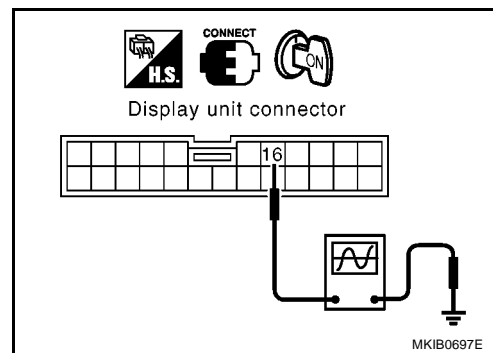



OK or NG

- OK >> GO TO 3.  
 NG >> Replace display unit.

# LCD (LIQUID CRYSTAL DISPLAY)

## 3. COMMUNICATION SIGNAL (ME-AV) CHECK

1. Turn ignition switch to ON and display.
2. Check voltage signal between display unit harness connector M61 terminal 18 (L) and ground with oscilloscope or CONSULT-II.

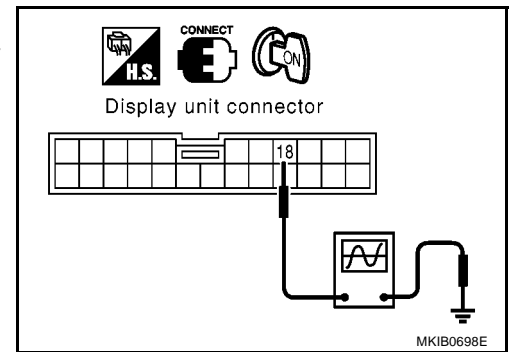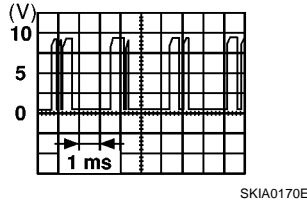

OK or NG

- OK >> Replace display unit.
- NG >> Replace combination meter.

## Multifunction Switch Does Not Operate

EKS009CJ

### 1. POWER AND GROUND CIRCUIT CHECK

- Check power and ground circuit. Refer to [DI-123, "Terminals and Reference Value for Multifunction Switch"](#).


OK or NG

- OK >> Replace multifunction switch.
- NG >> Repair or replace harness.

## Removal and Installation of Multifunction switch

EKS009CK


1. Remove the cluster lid C. Refer to IP section in P12 ESM (SM2E00-1P12E0E).
2. Remove the screw (4), and remove the multifunction switch.

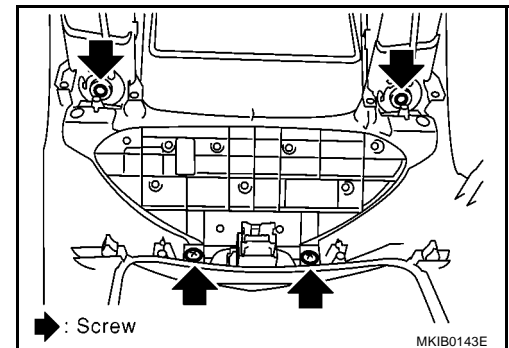

## Removal and Installation of Display Unit

EKS009CL

1. Remove the cluster lid C. Refer to IP section in P12 ESM (SM2E00-1P12E0E).
2. Remove the screws (2), and remove the display unit.

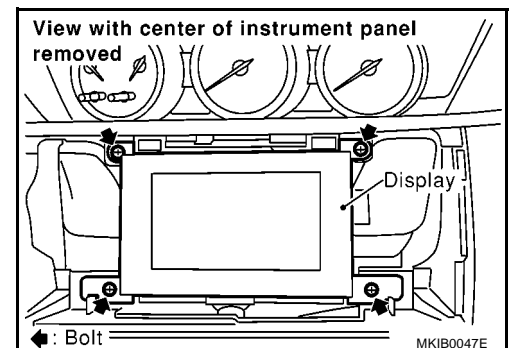



## WARNING LAMPS


PFP:24814

### Schematic

SMA for models with seat belt warning on display

EKS009CM

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
DI  
L  
M

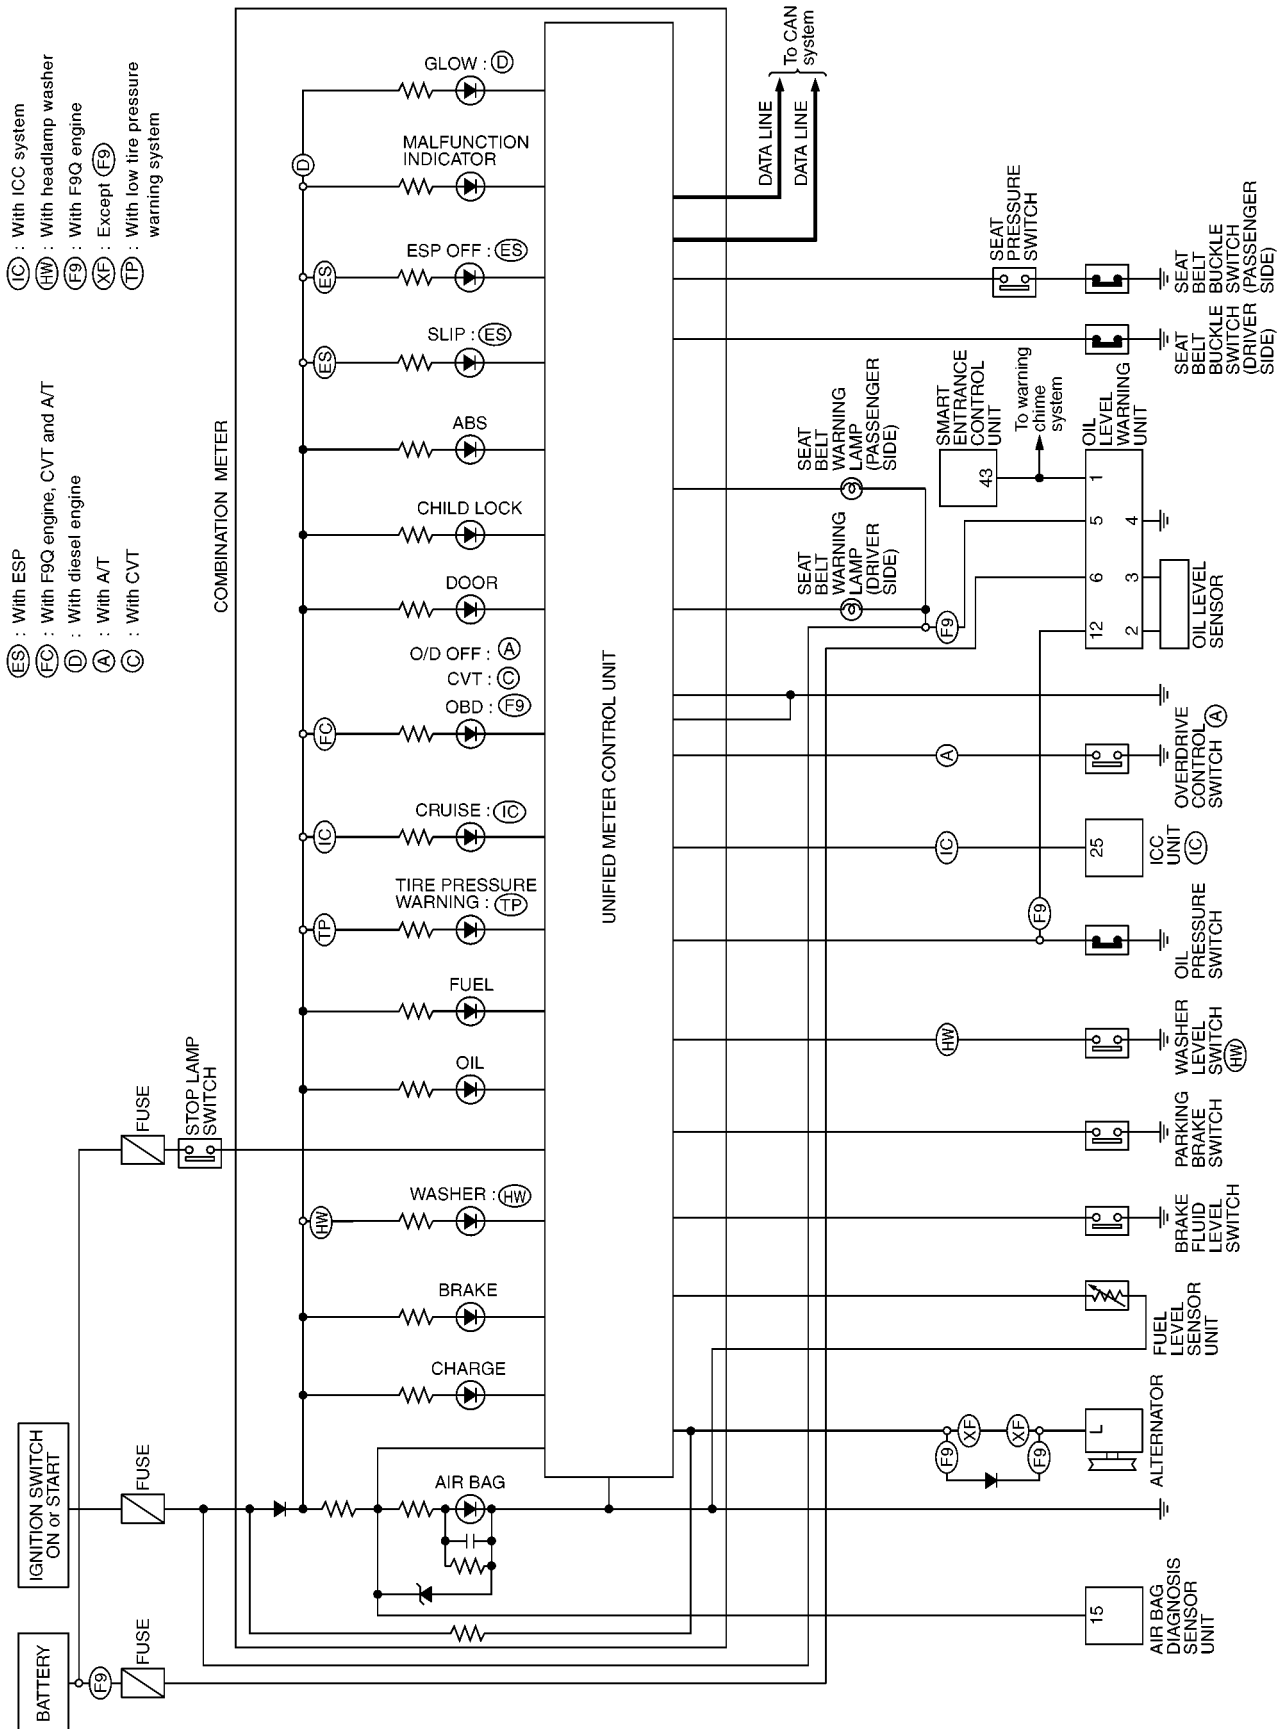

MKWA1025E


# WARNING LAMPS

## Wiring Diagram — WARN —/LHD Models Except for F9Q Engine

EKS009CN

DI-WARN-01

HW : WITH HEADLAMP WASHER

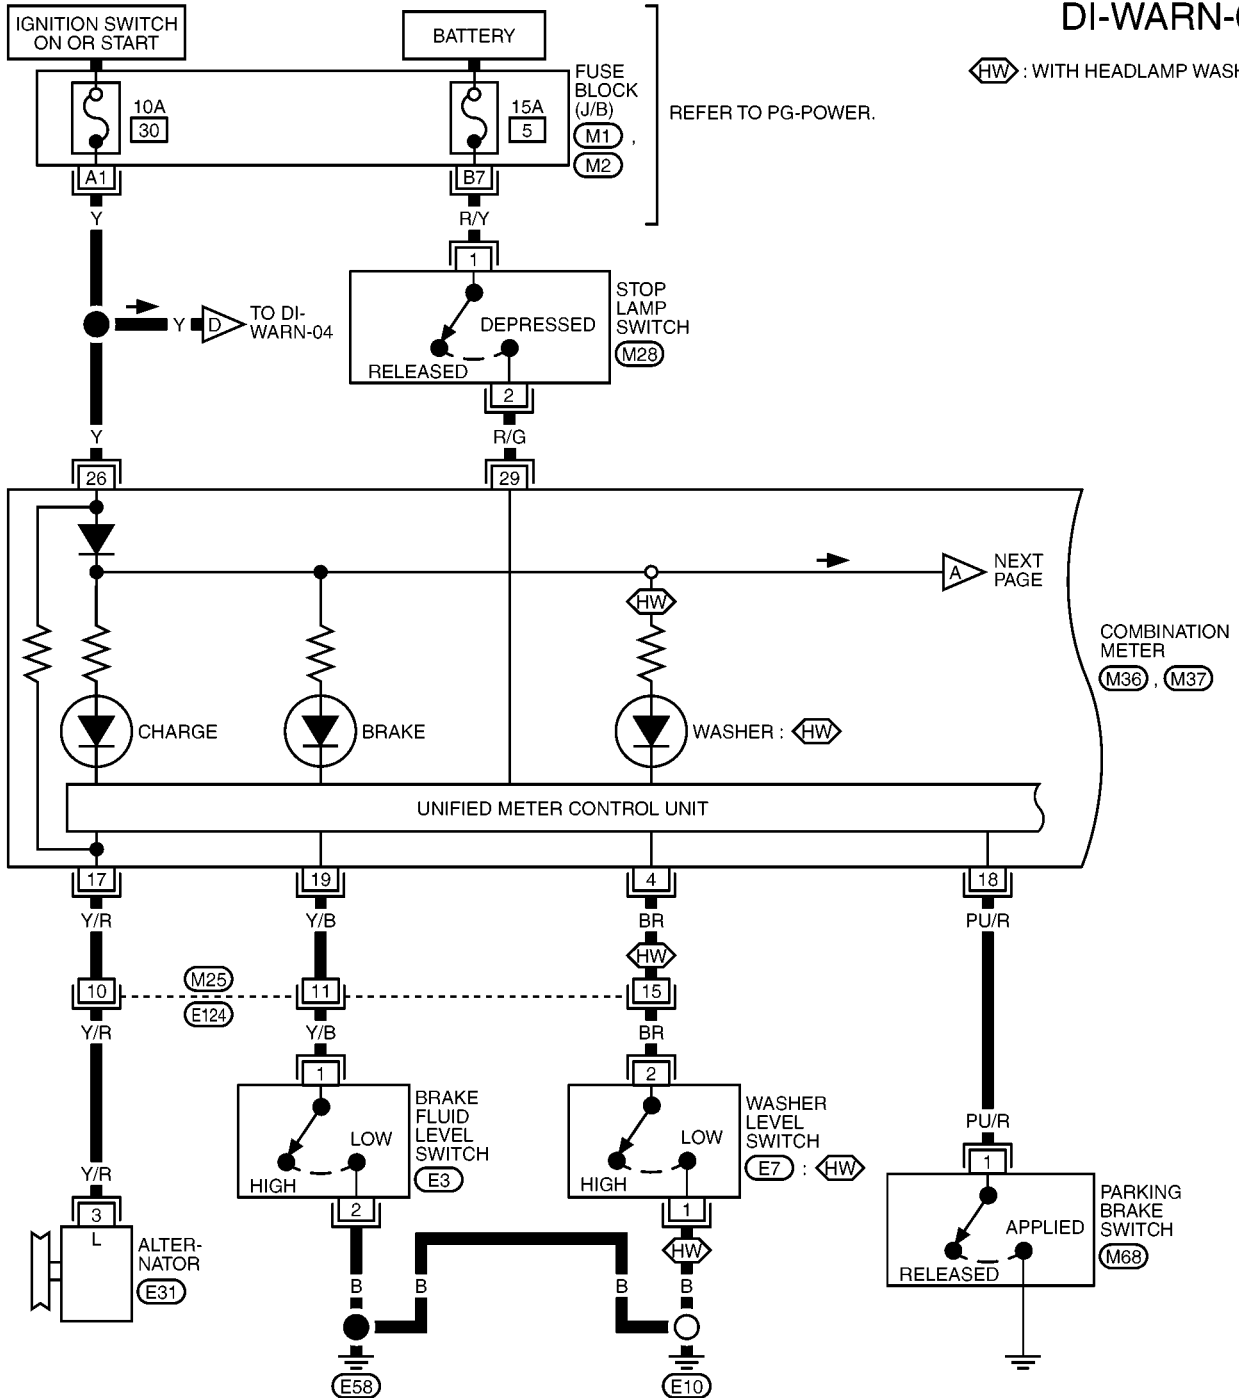

1 2 M28, E7  
B B

26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 M36 L 52 51 50 49 48 47 46 45 44 43 42 41 40 39 38 37 36 35 34 33 32 31 30 29 28 27 M37 Y

1 M68 B 1 2 E3 GY 3 4 E31 GY 1 2 3 4 5 6 7 E124 W 8 9 10 11 12 13 14 15 16

REFER TO THE FOLLOWING.

M1, M2 - FUSE BLOCK-JUNCTION BOX (J/B)

MKWA1026E





# WARNING LAMPS

DI-WARN-02

(G) : WITH GASOLINE ENGINE  
 (Y9) : WITH YD93KW ENGINE  
 (Y1) : WITH YD100KW ENGINE  
 (QR) : WITH QR ENGINE



(XY) : EXCEPT (Y9)  
 (XQ) : EXCEPT (QR)  
 (TP) : WITH TYRE PRESSURE MONITORING SYSTEM

\* 1 1 : (G)  
 7 : (Y9)  
 17 : (Y1)

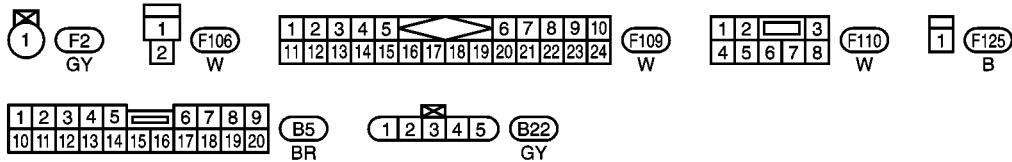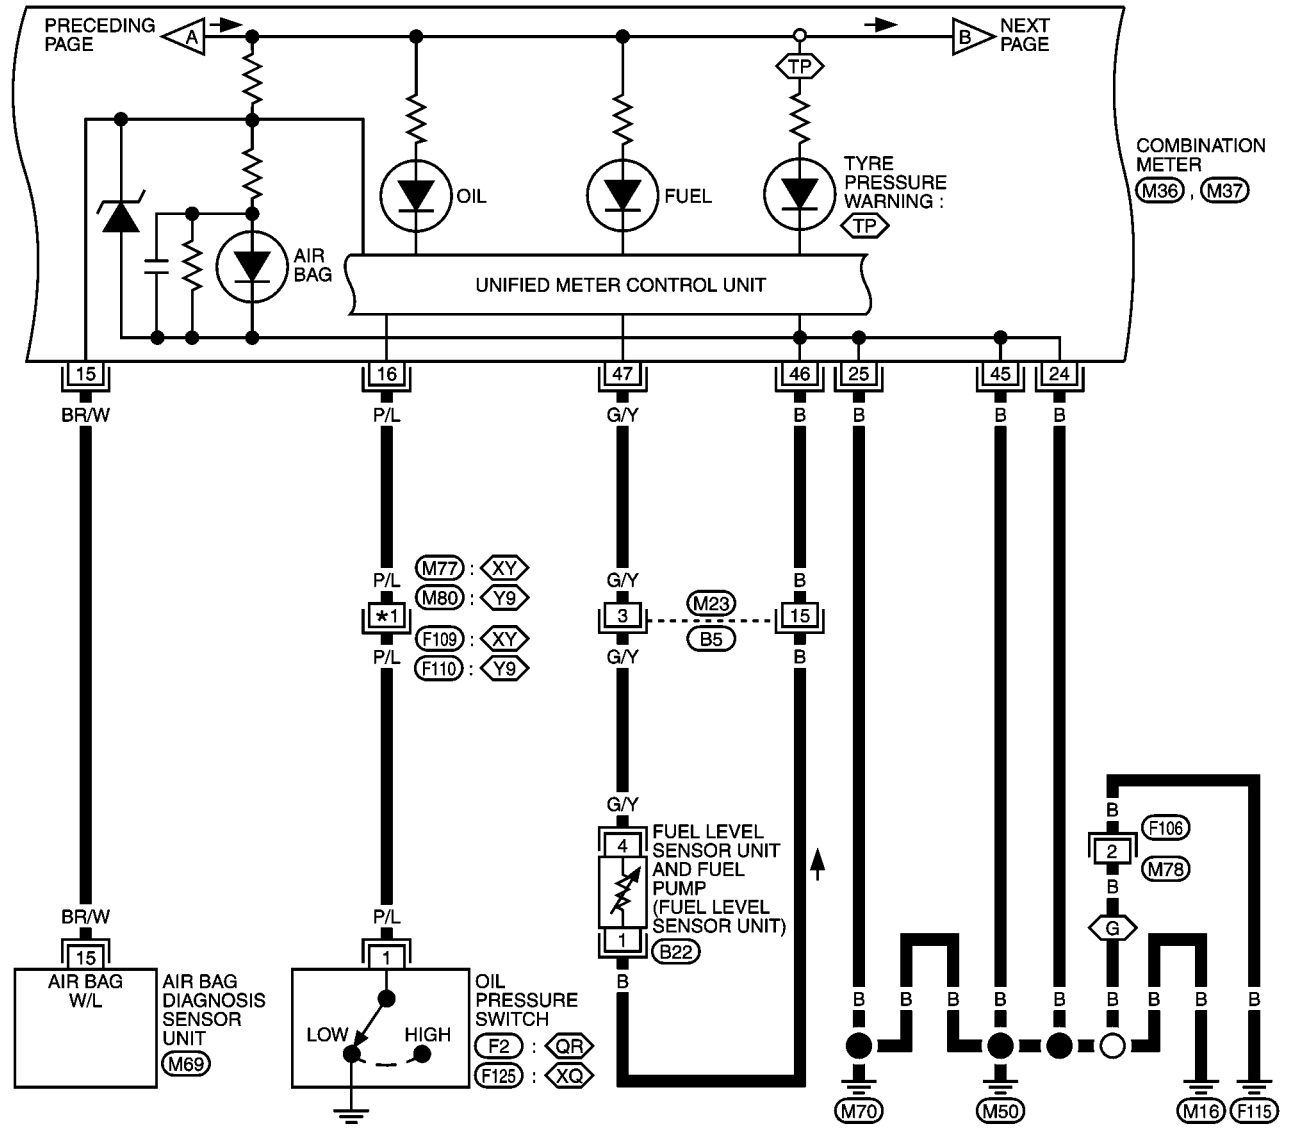

MKWA2484E


DI-WARN-03

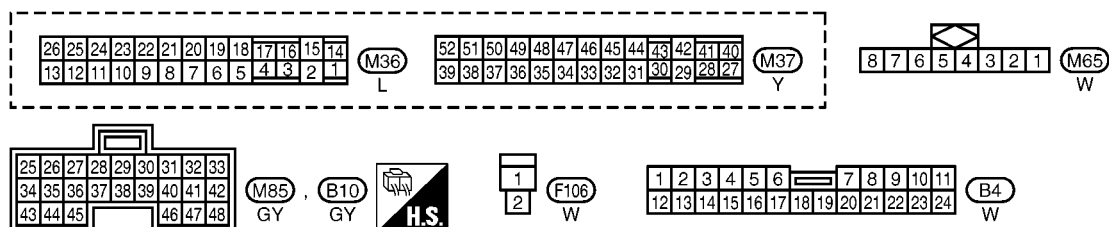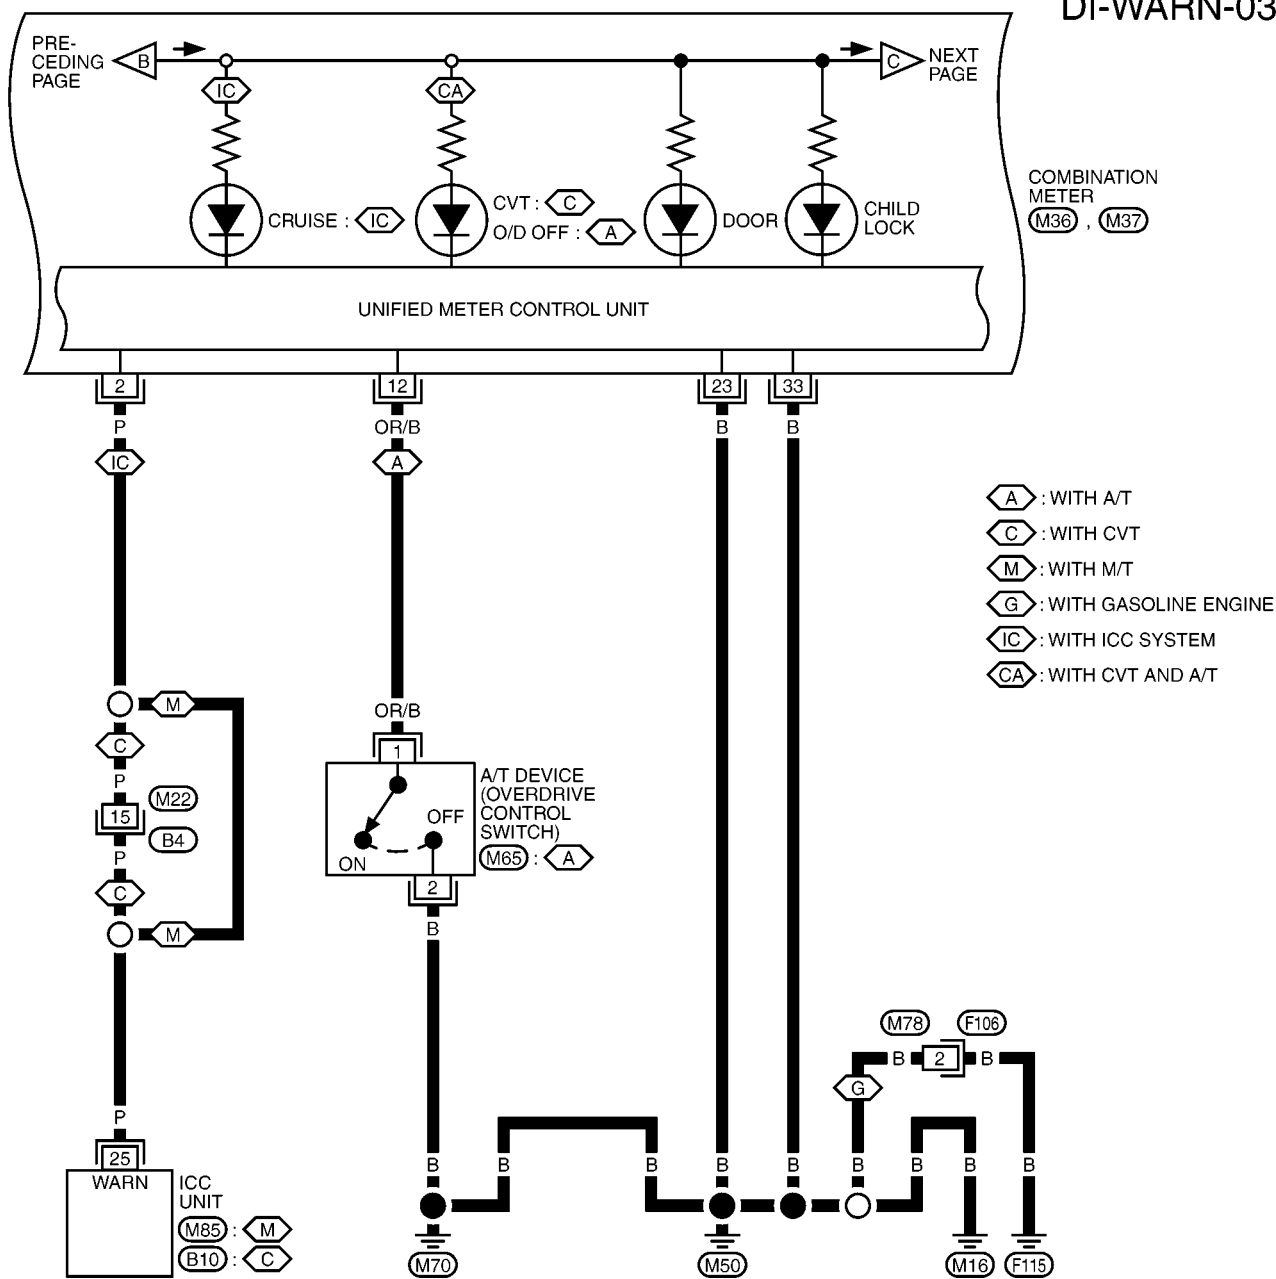

# WARNING LAMPS

DI-WARN-04

DATA LINE

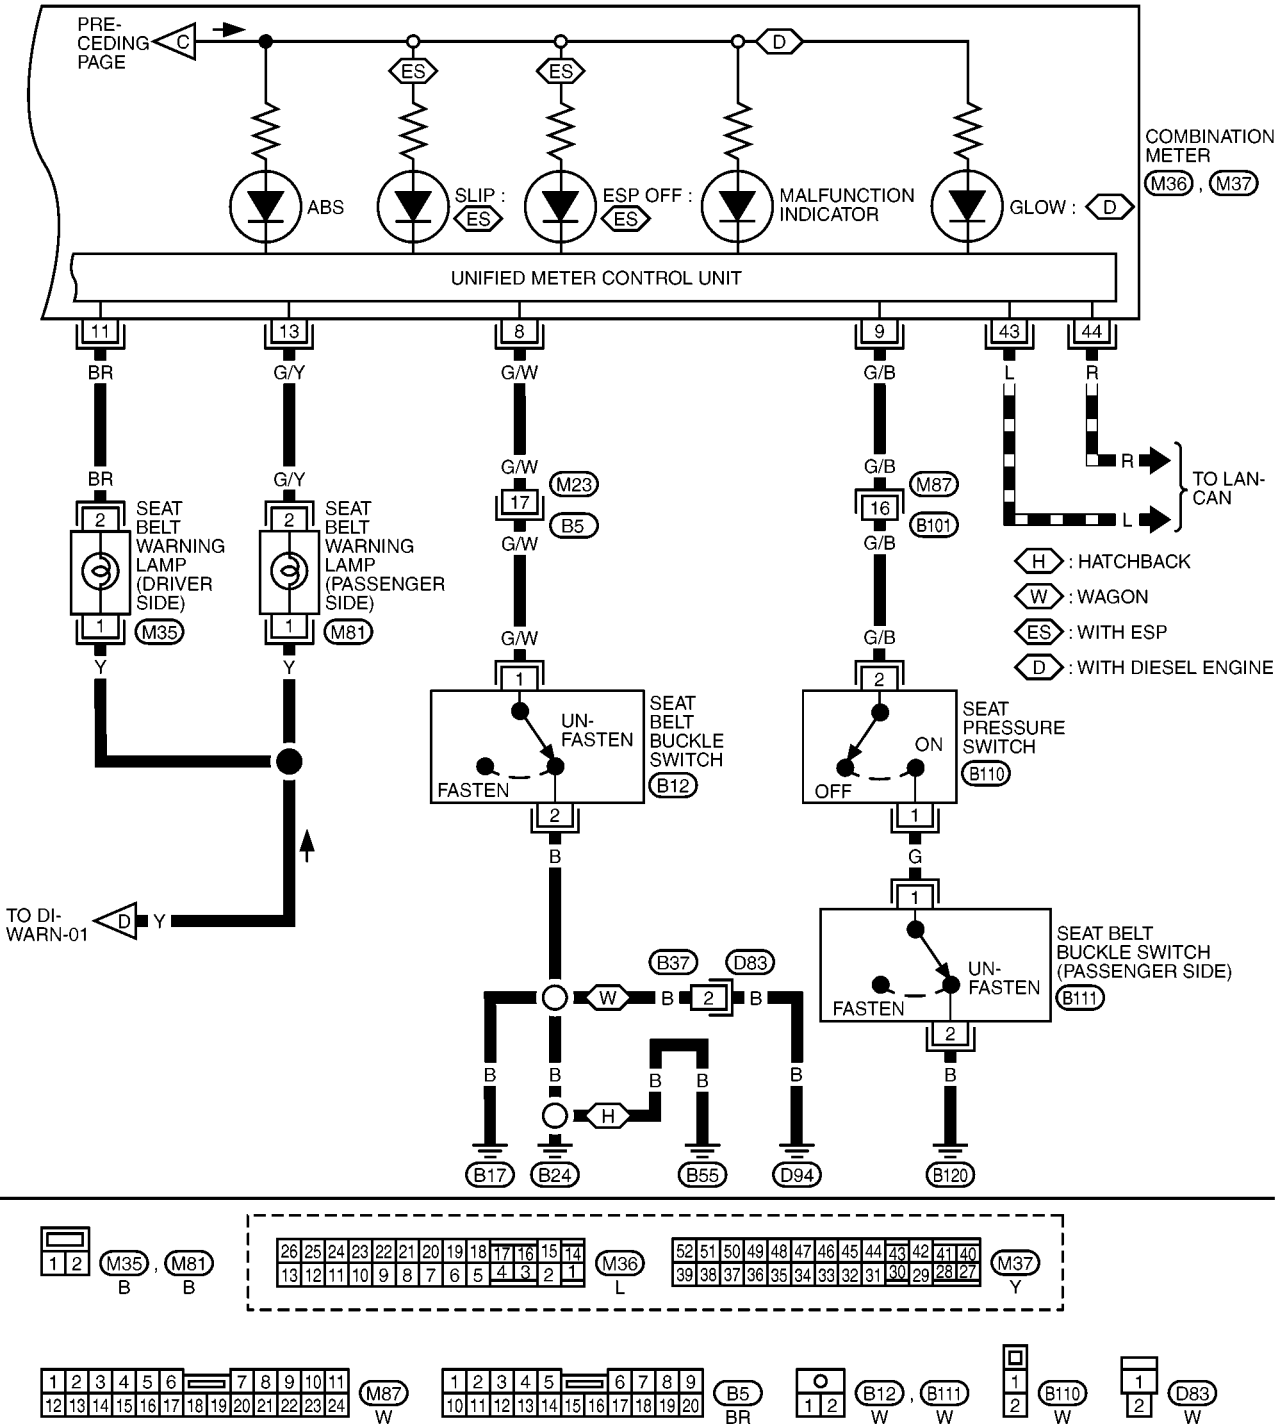


# WARNING LAMPS

## Wiring Diagram — WARN —/LHD Models For F9Q Engine

EKS00B8R

DI-WARN-05

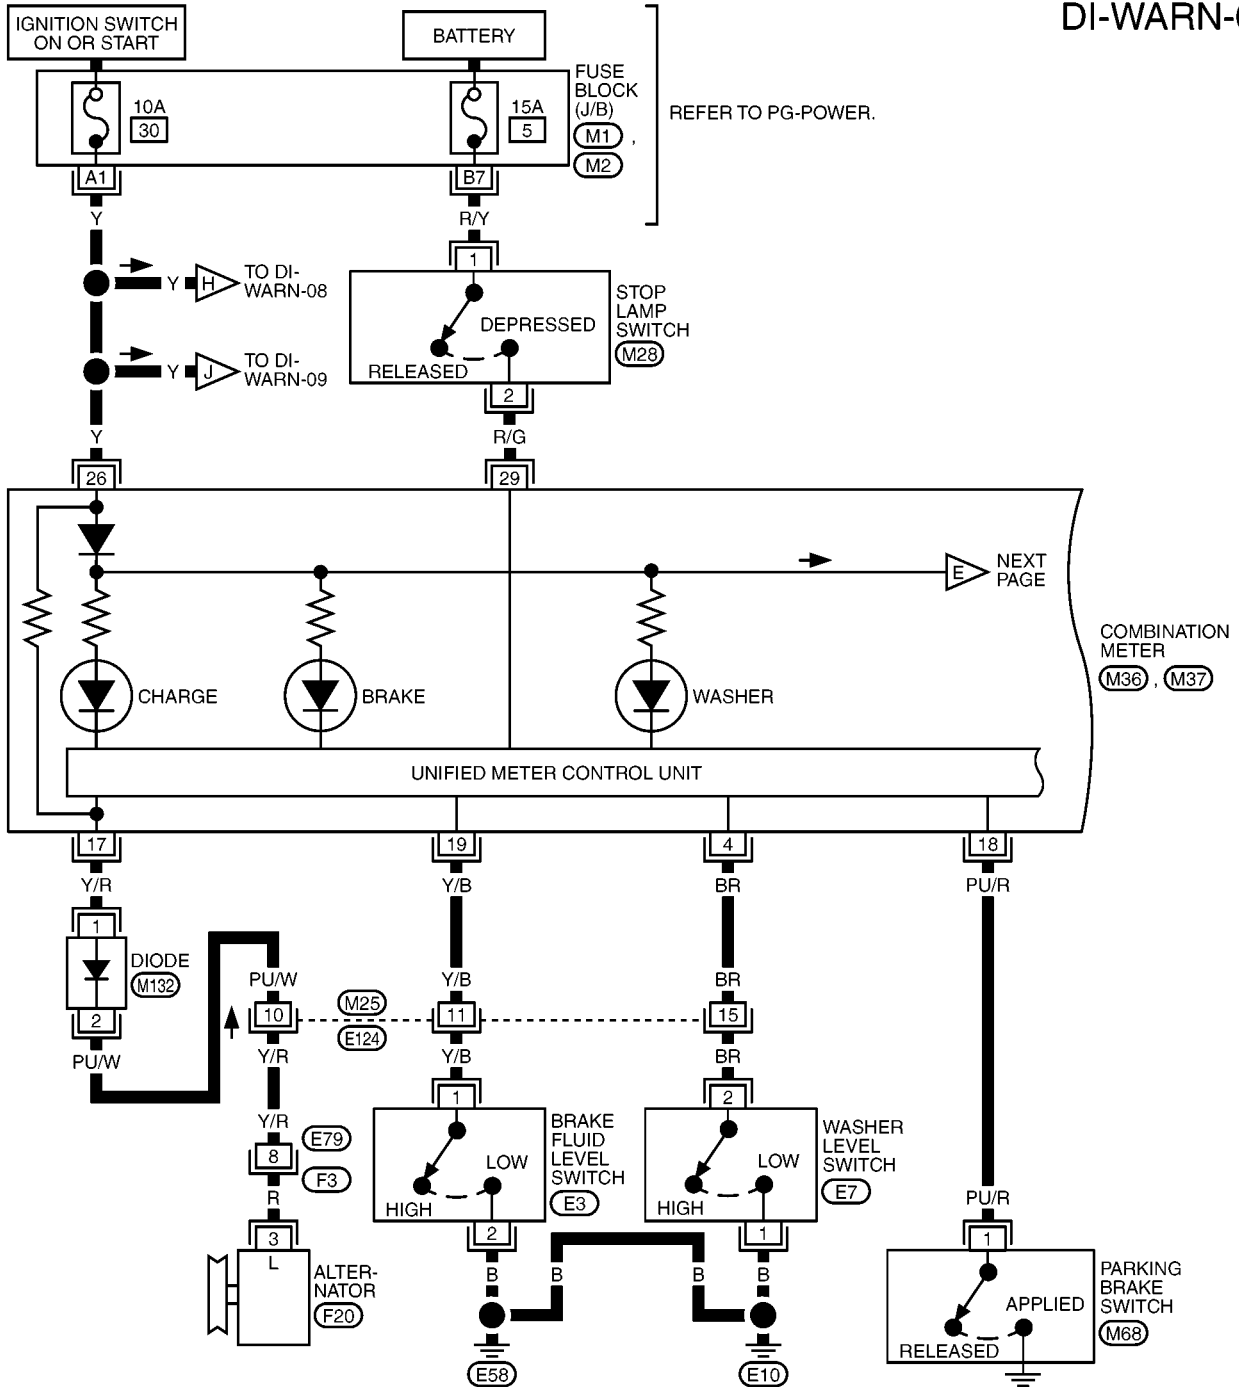

1 2 M28, E7  
B B

26 25 24 23 22 21 20 19 18 17 16 15 14  
13 12 11 10 9 8 7 6 5 4 3 2 1

M36 L

52 51 50 49 48 47 46 45 44 43 42 41 40  
39 38 37 36 35 34 33 32 31 30 29 28 27

M37 Y

1 M68  
B

1 2 M132  
B

1 2 E3  
GY

1 2 3 4 5 6 7  
8 9 10 11 12 13 14 15 16

E124 W

1 2 3 4  
5 6 7 8

F3 B

3 4 F20





REFER TO THE FOLLOWING.  
M1, M2 - FUSE BLOCK-  
JUNCTION BOX (J/B)

MKWA1030E

# WARNING LAMPS


DI-WARN-06

TP : WITH LOW TIRE PRESSURE WARNING SYSTEM

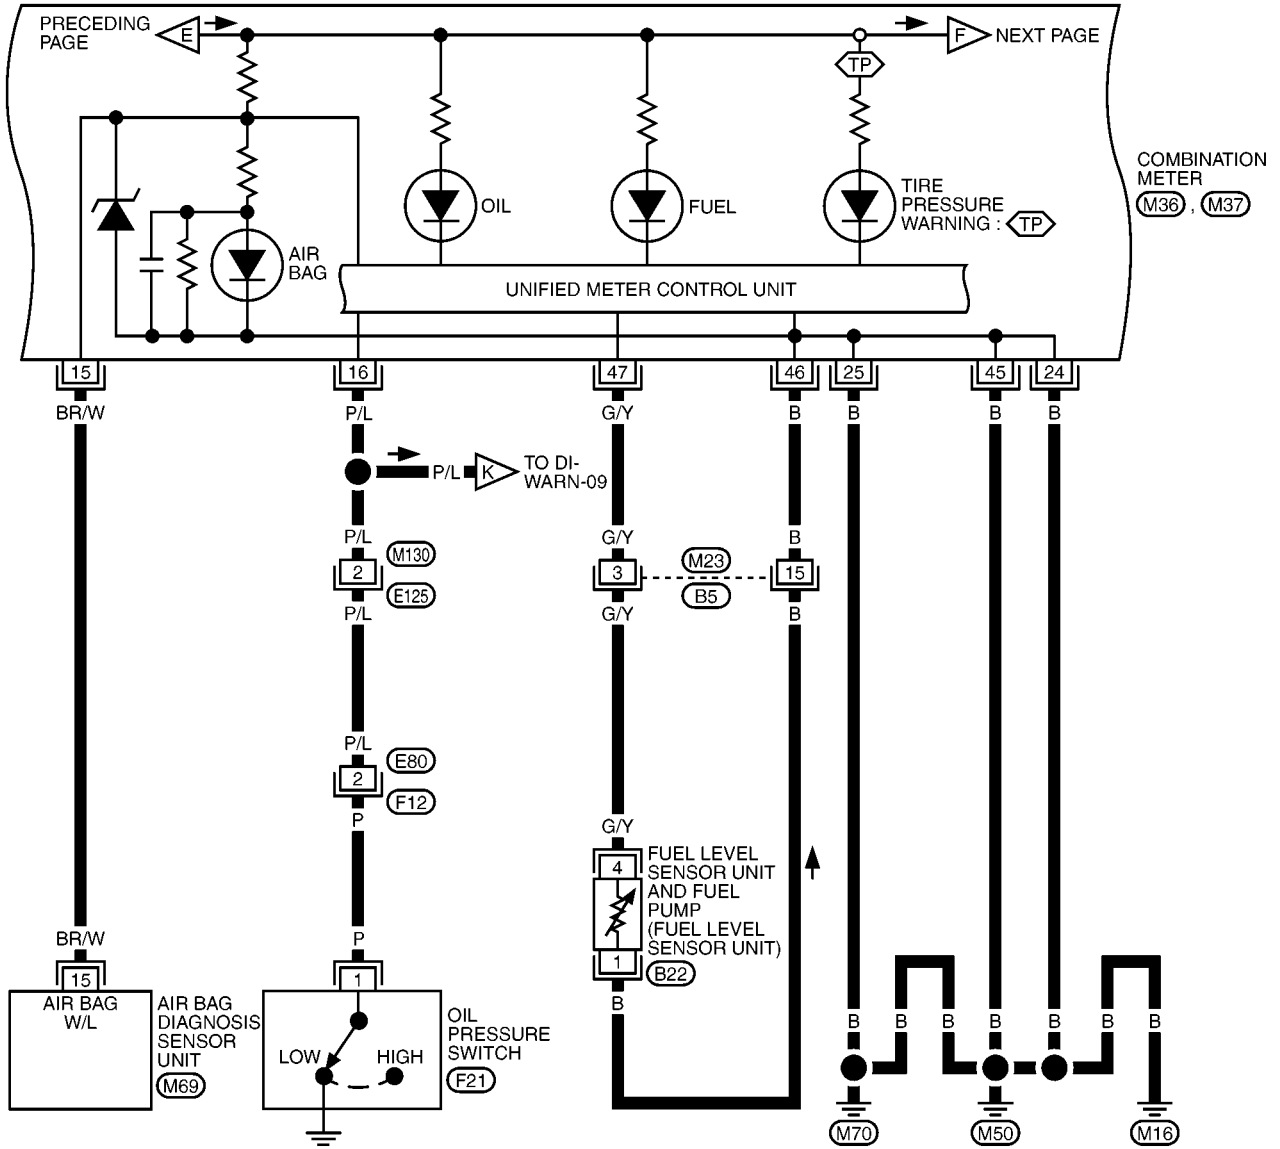

# WARNING LAMPS

DI-WARN-07

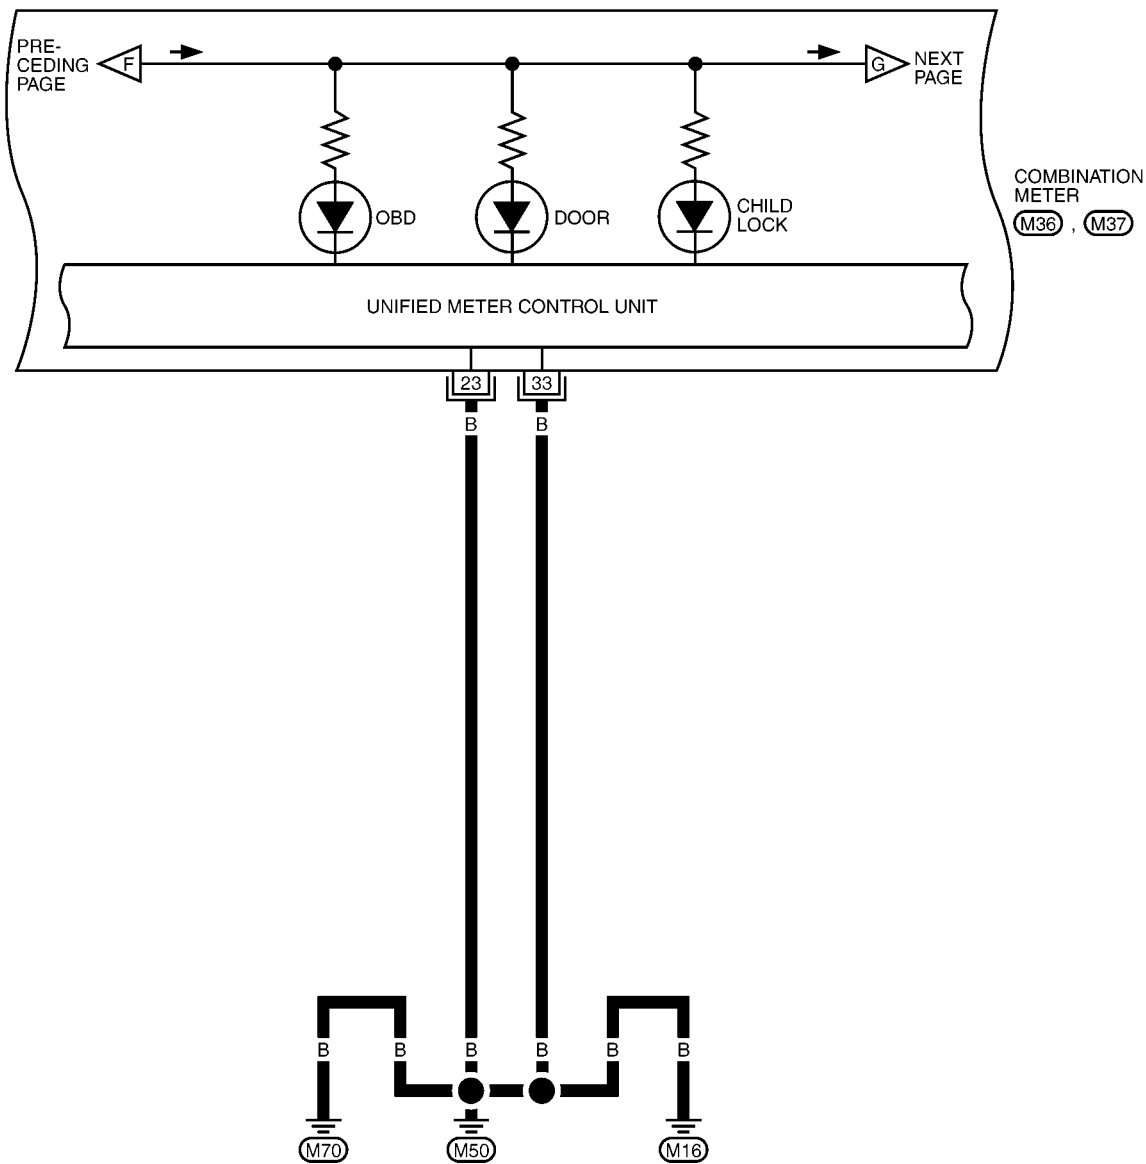

26	25	24	23	22	21	20	19	18	17	16	15	14	M36	52	51	50	49	48	47	46	45	44	43	42	41	40	M37
13	12	11	10	9	8	7	6	5	4	3	2	1		39	38	37	36	35	34	33	32	31	30	29	28	27	
													L														Y


MKWA1032E



# WARNING LAMPS

DI-WARN-08



DATA LINE

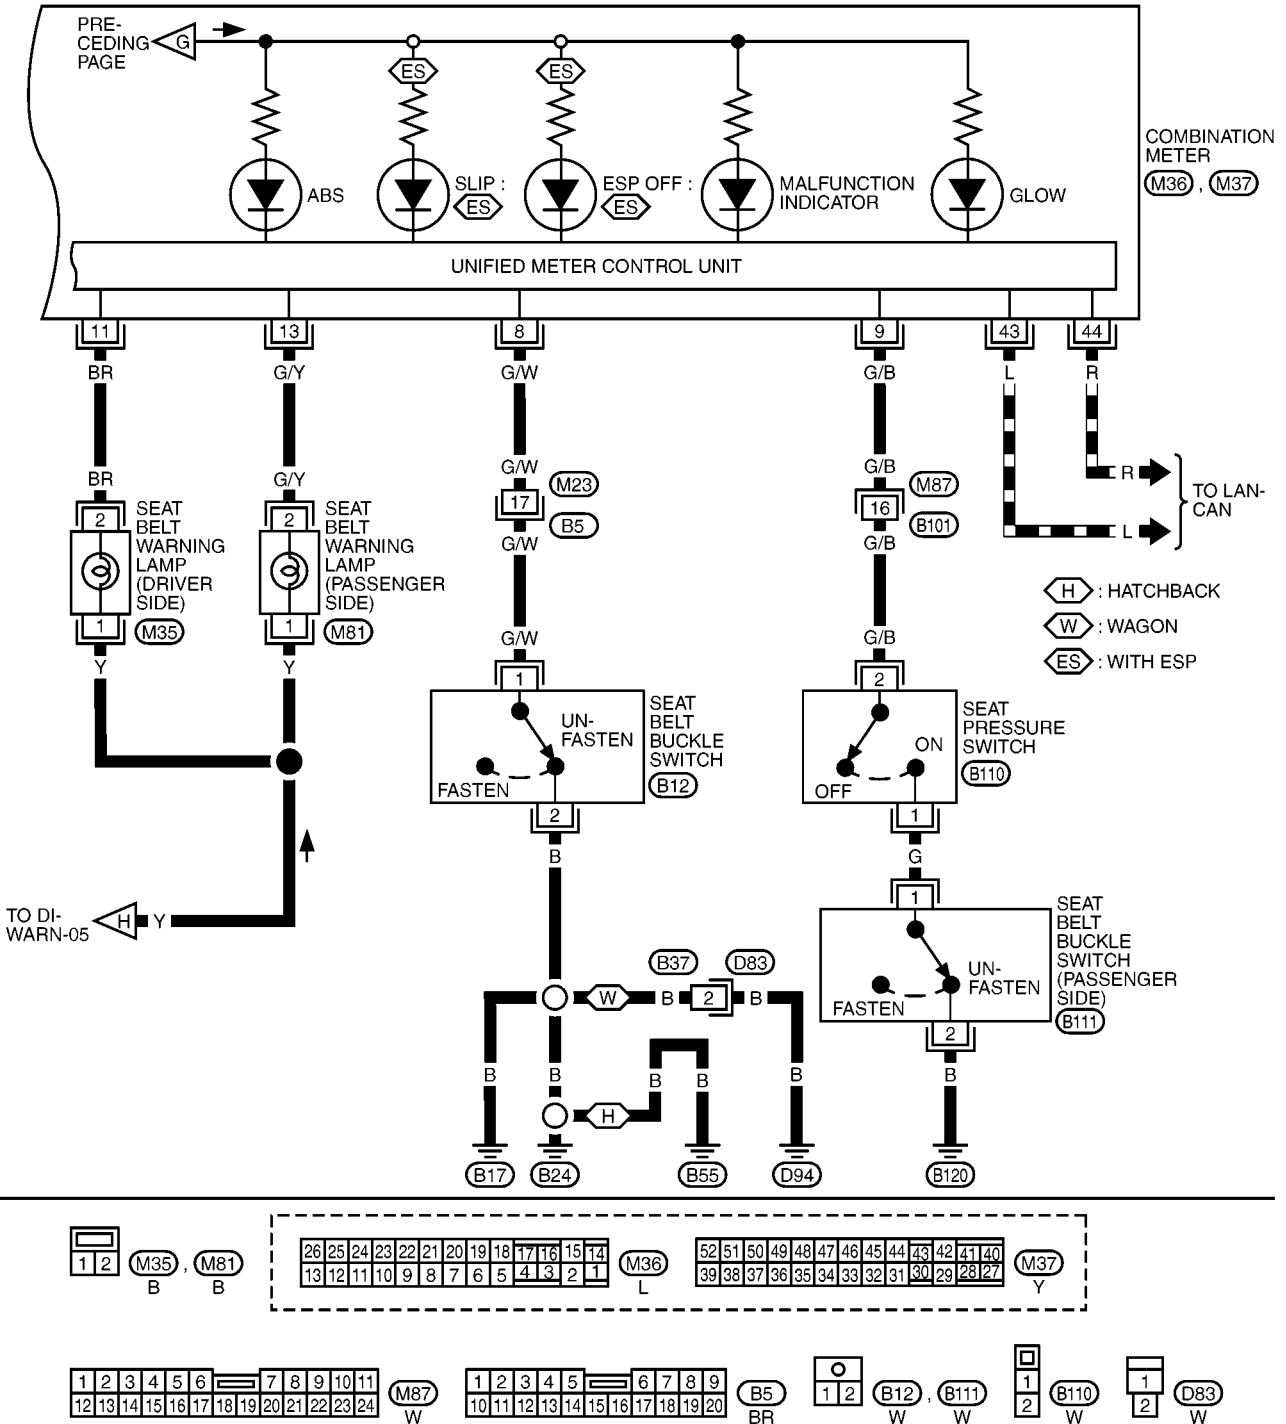


MKWA1033E

# WARNING LAMPS


DI-WARN-09

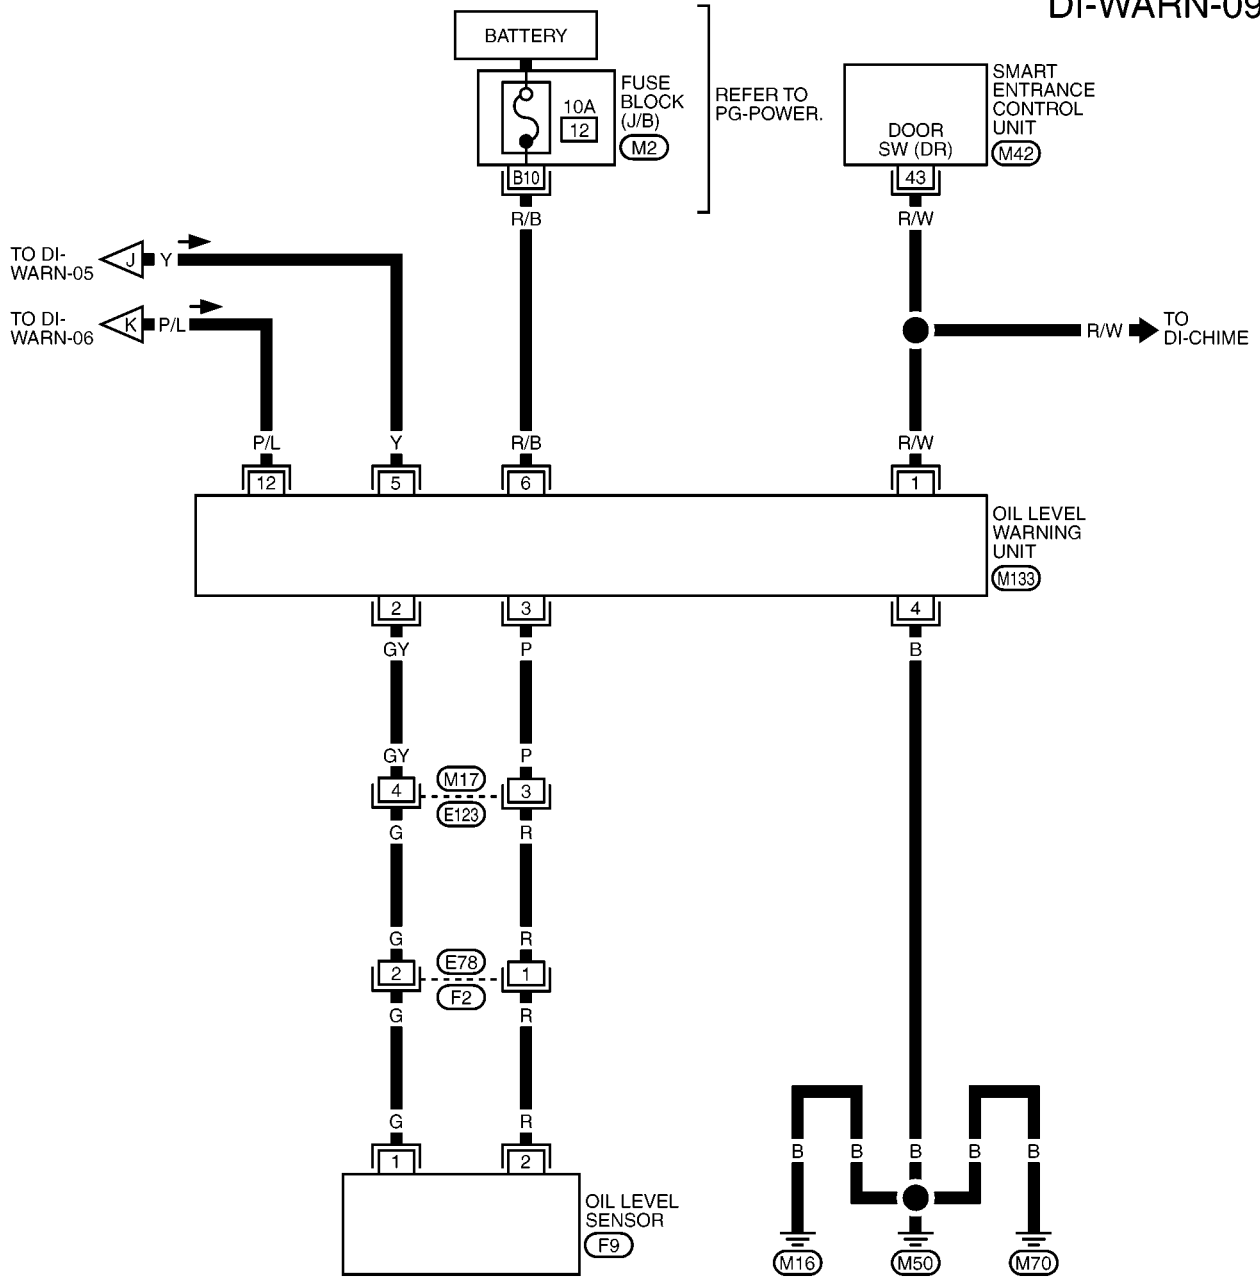

M42  
GY



M133  
W




E123  
W

REFER TO THE FOLLOWING.

(M2) - FUSE BLOCK-  
JUNCTION BOX (J/B)



F2  
GY




F9

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## EKS009CO

## DI

L  
M


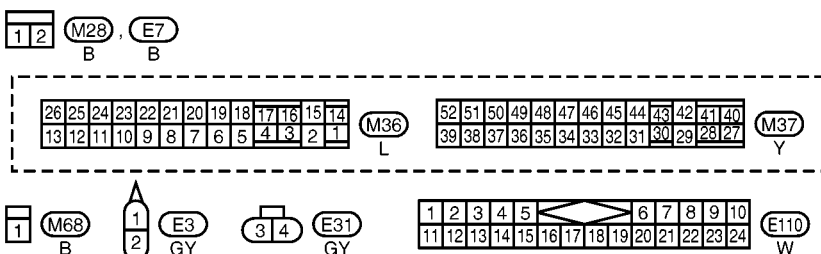


MKWA1035F



# WARNING LAMPS

## DI-WARN-11

- (G) : WITH GASOLINE ENGINE      \*1 1 : (G)  
 (Y9) : WITH YD93kW ENGINE      7 : (Y9)  
 (XY) : EXCEPT (Y9)      17 : (Y1)  
 (Y1) : WITH YD100kW ENGINE  
 (QR) : WITH QR ENGINE  
 (XQ) : EXCEPT (QR)

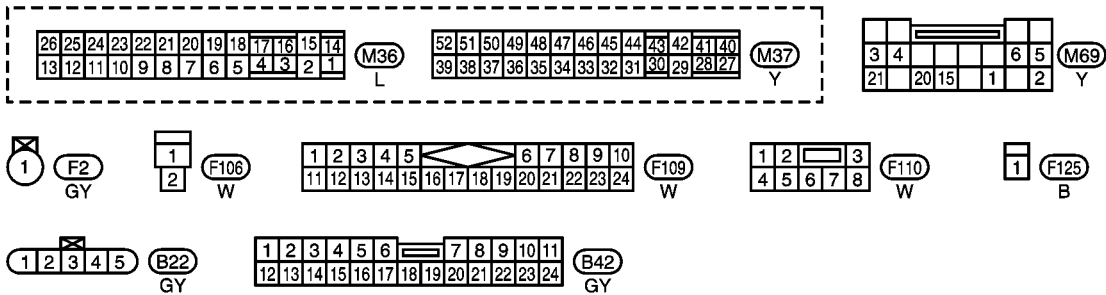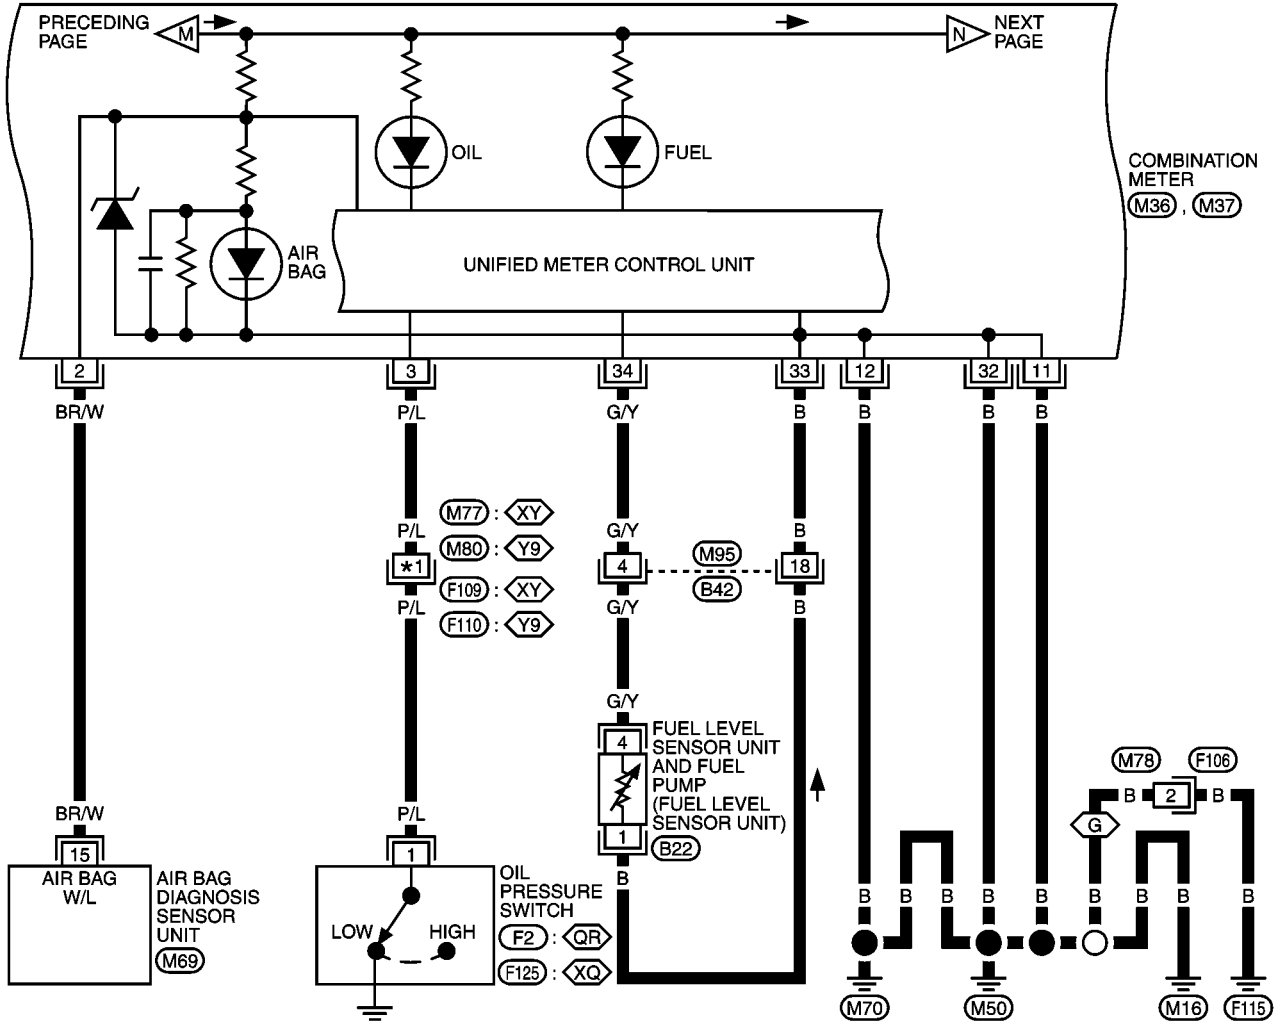







MKWA2485E

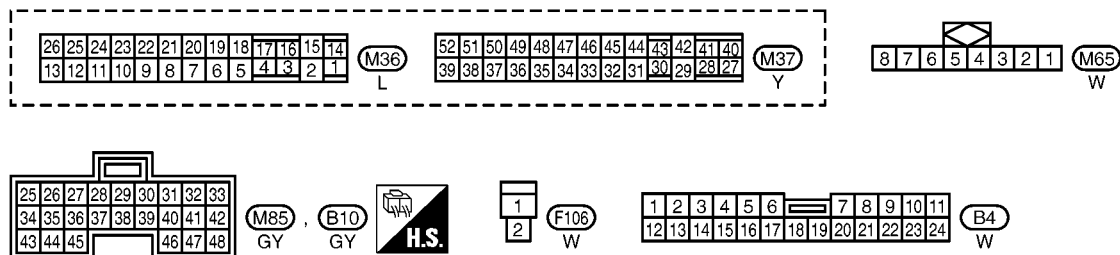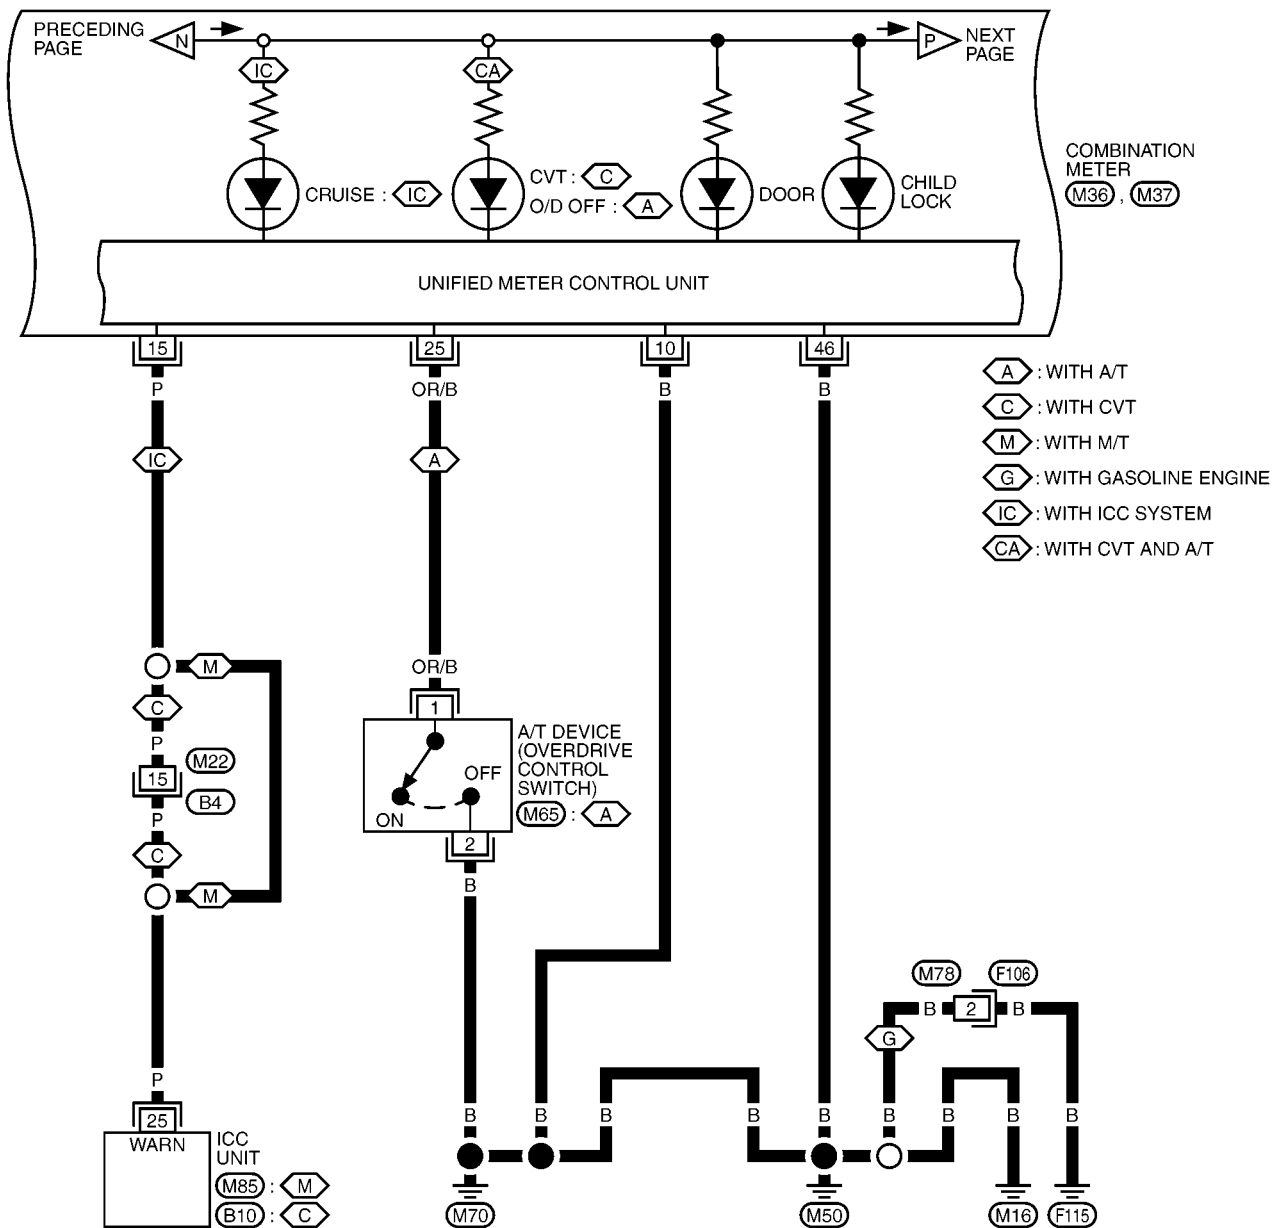

# WARNING LAMPS

DI-WARN-13

DATA LINE

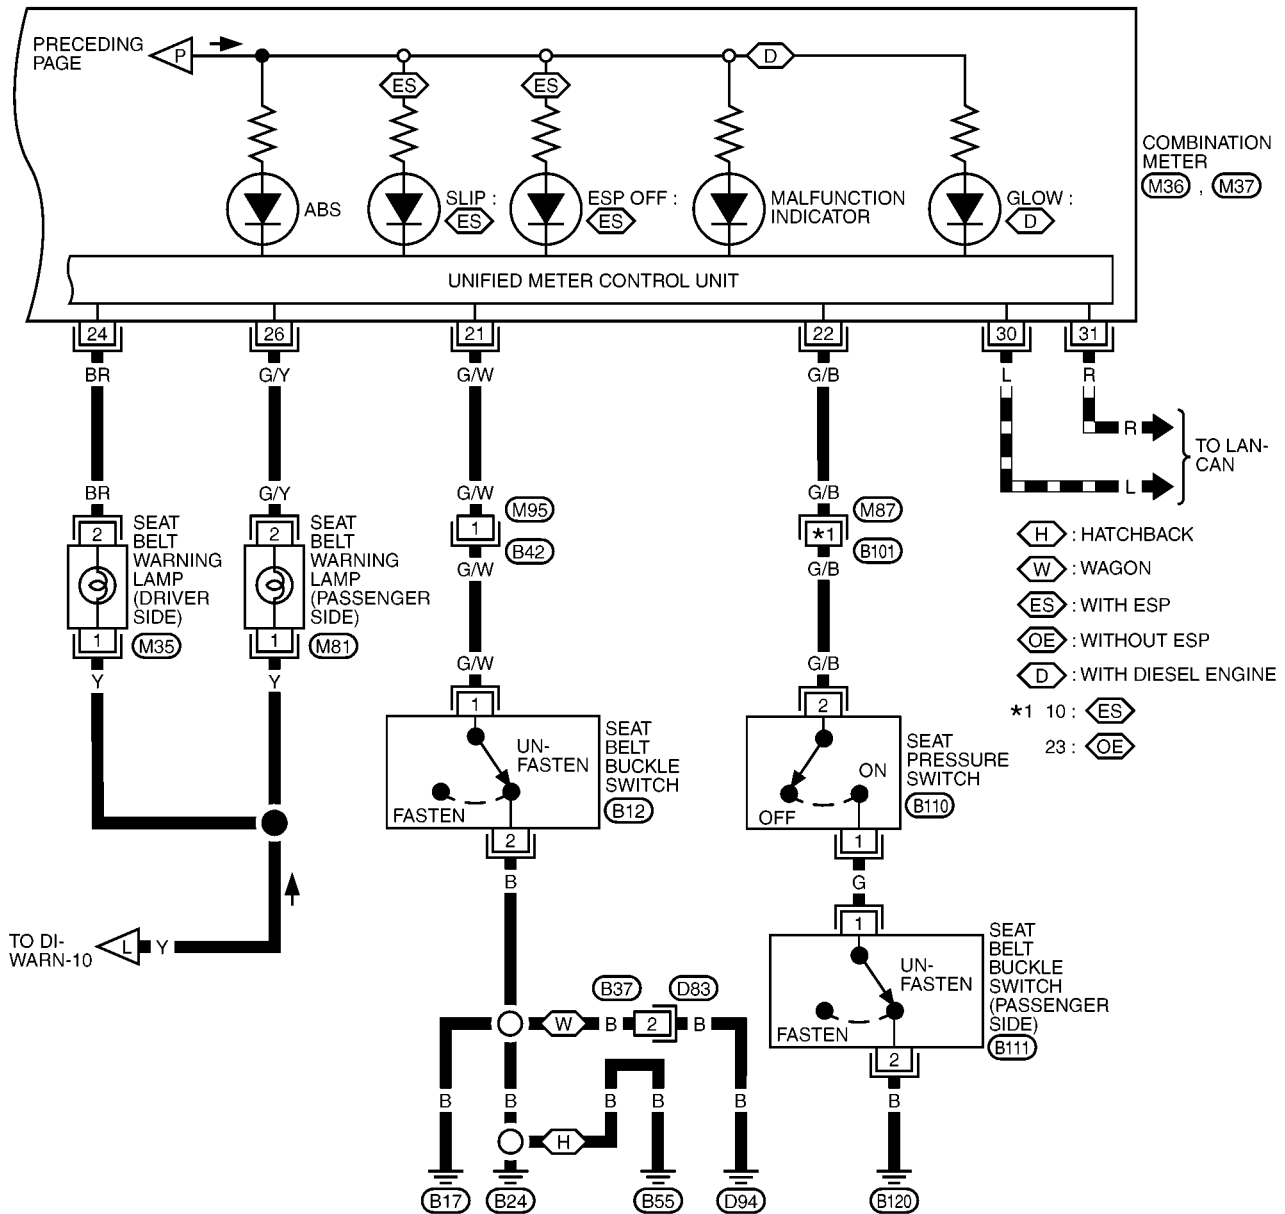

MKWA1038E


## WARNING LAMPS

### Electrical Components Inspection OIL PRESSURE SWITCH CHECK

EKS009CP

	Oil pressure kPa (bar, kg/cm <sup>2</sup> , psi)	Continuity
Engine running	More than 10 - 20 (0.10 - 0.20, 0.1 - 0.2, 1 - 3)	No
Engine not running	Less than 10 - 20 (0.10 - 0.20, 0.1 - 0.2, 1 - 3)	Yes

Check the continuity between the terminals of oil pressure switch and body ground.

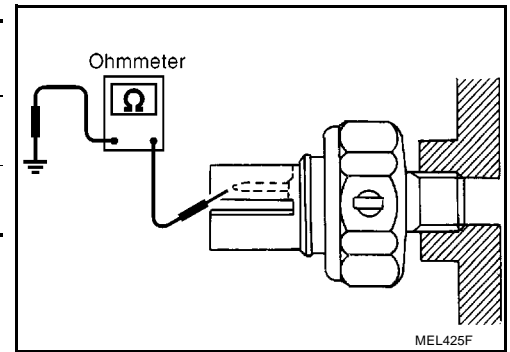

A

B

C

D

E

F

G

H

I

J

DI

L

M

# A/T INDICATOR


PFP:24814

EKS009CQ

## A/T INDICATOR

### Wiring Diagram — AT/IND —

#### DI-AT/IND-01

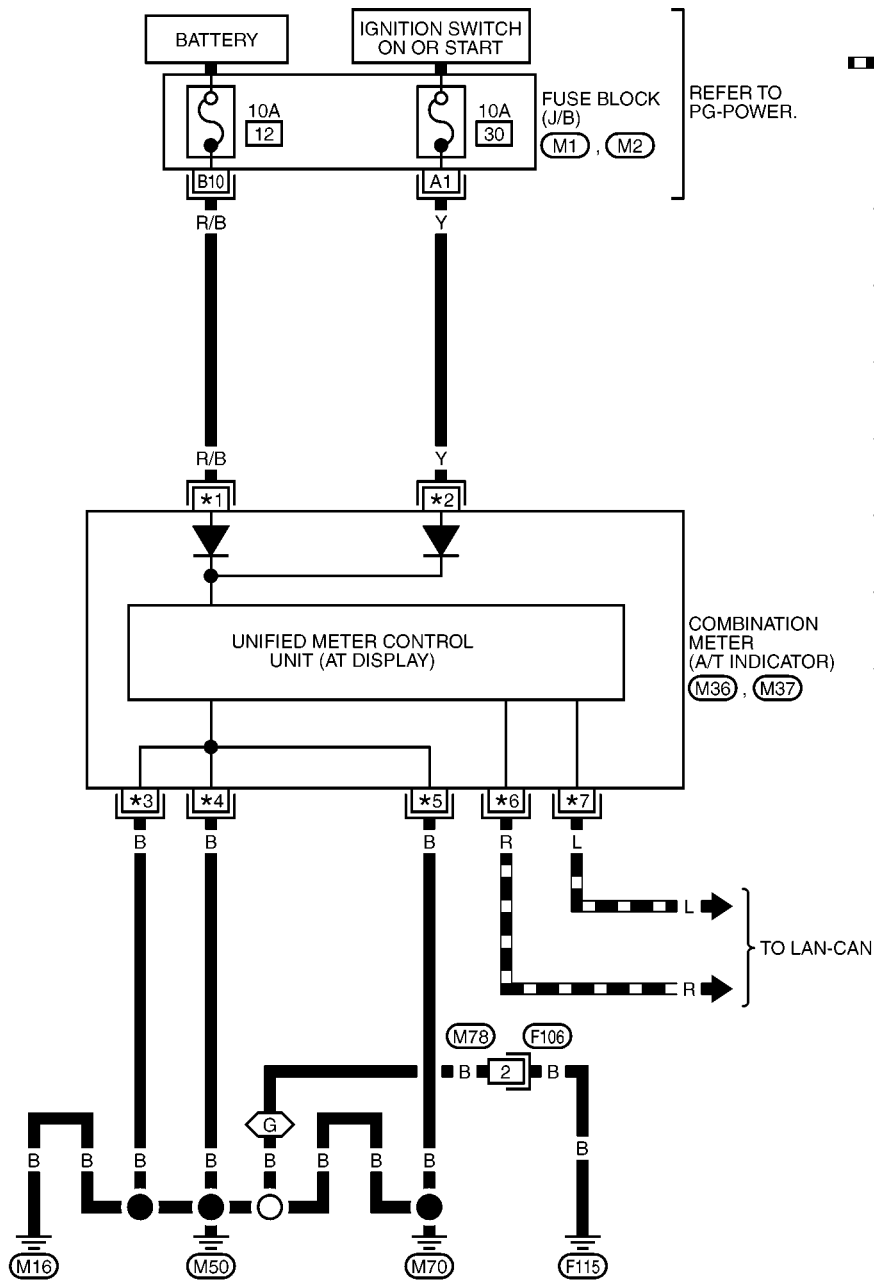

DATA LINE

L : LHD MODELS

R : RHD MODELS

G : WITH GASOLINE ENGINE

\*1 52 : L

39 : R

\*2 51 : L

38 : R

\*3 24 : L

11 : R

\*4 45 : L

32 : R

\*5 25 : L

12 : R

\*6 44 : L



31 : R

\*7 43 : L

30 : R

COMBINATION  
METER  
(A/T INDICATOR)  
M36, M37

TO LAN-CAN



REFER TO THE FOLLOWING.

M1, M2 - FUSE BLOCK-  
JUNCTION BOX (J/B)

MKWA1039E



# A/T INDICATOR

## SYMPTOM CHART

Symptom		Possible cause
A/T indicator lamp is malfunctioning.	All the lamps inactive Partially inactive	A/T indicator does not illuminate. Shown the below.
	Segment is missing	<ul style="list-style-type: none"><li>● Combination meter self-diagnosis mode. Refer to <a href="#">DI-36, "Combination Meter Self-Diagnosis"</a> (LHD models) or <a href="#">DI-77, "Combination Meter Self-Diagnosis"</a> (RHD models).</li><li>● Check the connector conditions in combination meter.</li></ul> If the above system is OK, replace unified meter control unit.

## 1. TCM CONTROL UNIT SYSTEM INSPECTION

Perform TCM self-diagnosis. Refer to the following.

- [AT-37, "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"](#) with EURO-OBD (A/T models).
- [AT-248, "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"](#) without EURO-OBD (A/T models).
- [CVT-20, "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"](#) with EURO-OBD (CVT models).
- [CVT-114, "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION"](#) without EURO-OBD (CVT models).

OK or NG

- OK >> GO TO 2.  
NG >> GO TO TCM trouble diagnosis.

## 2. SELF-DIAGNOSIS INSPECTION

Perform combination meter self-diagnosis mode. Refer to [DI-36, "Combination Meter Self-Diagnosis"](#) (LHD models) or [DI-77, "Combination Meter Self-Diagnosis"](#) (RHD models).

OK or NG

- OK >> A/T indicator is OK.  
NG >> Replace combination meter control unit assembly.

## WARNING CHIME

PFP:24814

### System Description

EKS009CR

#### POWER SUPPLY AND GROUND CIRCUIT

Power is supplied at all times

- through 10A fuse (No. 32, located in fuse and fusible link box)
- to combination switch terminal 11
- through 10A fuse [No. 12, located in the fuse block (J/B)]
- to key switch terminal 1 and
- to smart entrance control unit terminal 56.

With ignition switch in ON or START position, power is supplied

- through 10A fuse [No. 10, located in the fuse block (J/B)]
- to smart entrance control unit terminal 29.

Ground is supplied

- to smart entrance control unit terminal 53
- through body grounds M16, M50, M70 or F115 (gasoline engine models).

#### IGNITION KEY WARNING CHIME

With the key in the ignition key cylinder, the ignition switch in OFF or ACC position, and the driver's door open, the warning chime will sound. Power is supplied

- through key switch terminal 2
- to smart entrance control unit terminal 5.

Ground is supplied

- from front door switch (driver side) terminal 1
- to smart entrance control unit terminal 43.

Ground is supplied through the case of the front door switch (driver side).

#### LIGHT WARNING CHIME

With ignition switch OFF position, driver's door open, and lighting switch in 1ST or 2ND position, warning chime will sound. Power is supplied

- from the lighting switch terminal 12
- to smart entrance control unit terminal 17.

Ground is supplied

- from front door switch (driver side) terminal 1
- to smart entrance control unit terminal 43.

Ground is supplied through the case of the front door switch (driver side).

#### SEAT BELT WARNING CHIME

##### Driver Side

When the vehicle speed exceeds 25 km/h (16 MPH) with front driver side seat belt unfastened (seat belt switch ON), warning chime will sound for approximately 90 seconds.

If the seat belt are fastened, then unfastened again, warning chime will sound.

Smart entrance control unit received vehicle speed signal from combination meter with CAN communication line.

Ground is supplied:

- from seat belt buckle switch (driver side) terminal 1
- to combination meter terminal 8 (LHD models) or 21 (RHD models).

Seat belt buckle switch (driver side) terminal 2 is grounded through body grounds B17, B24, B55 (hatchback models) or D94 (wagon models).

##### Passenger Side

When the person is sitting on the passenger side seat

Ground is supplied:

- from seat belt buckle switch (passenger side) terminal 1


# WARNING CHIME

- through seat belt pressure switch terminals 1 and 2
- from combination meter terminal 9 (LHD models) or 22 (RHD models).

Warning chime will sound in case of the same condition as the driver side.

## Component Parts and Harness Connector Location

EKS009CS

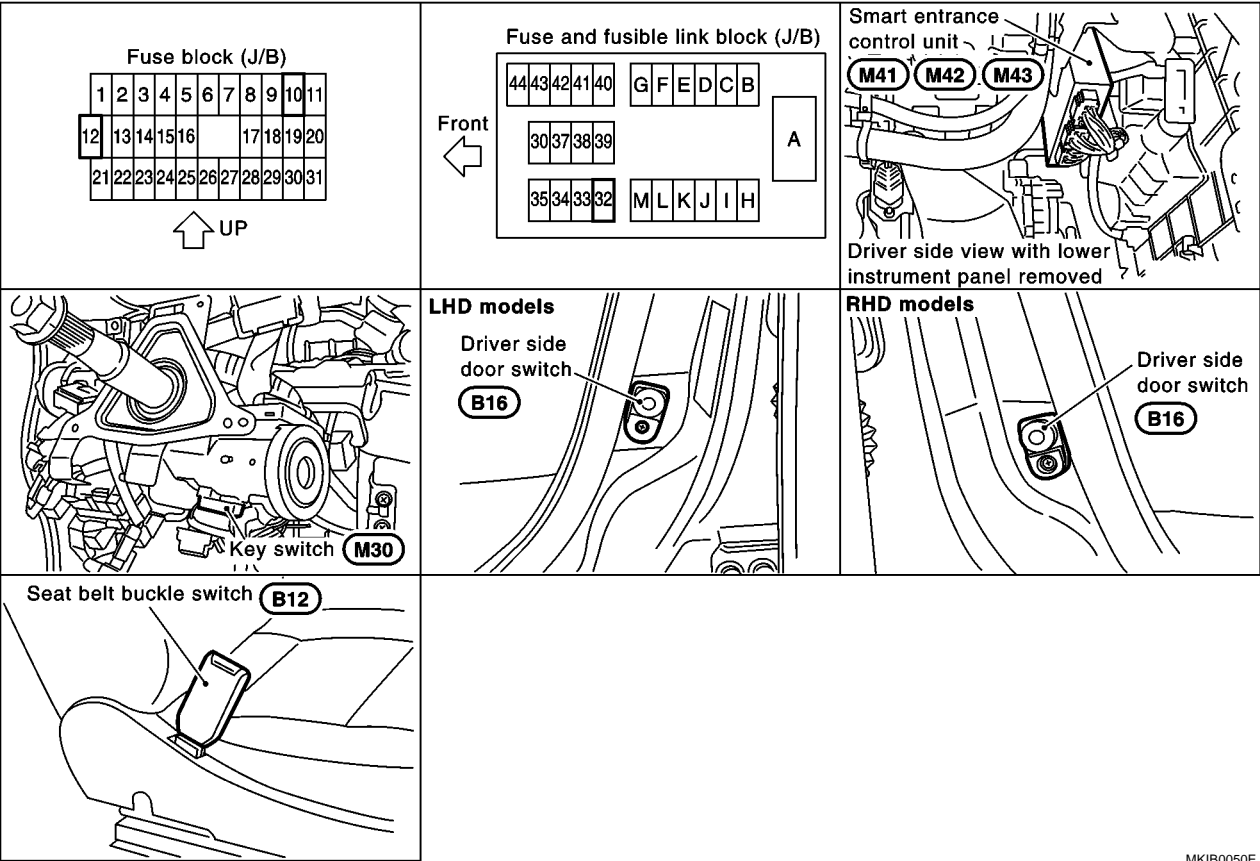

MKIB0050E

# WARNING CHIME




## Wiring Diagram — CHIME — LHD MODELS

EKS009CT

### DI-CHIME-01

**G** : WITH GASOLINE ENGINE

REFER TO  
PG-POWER.

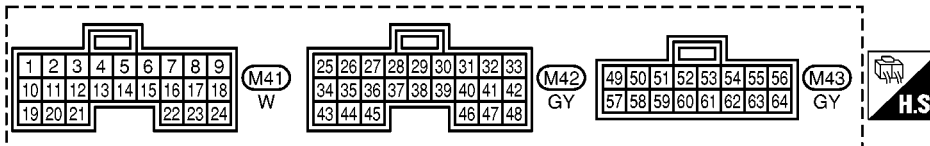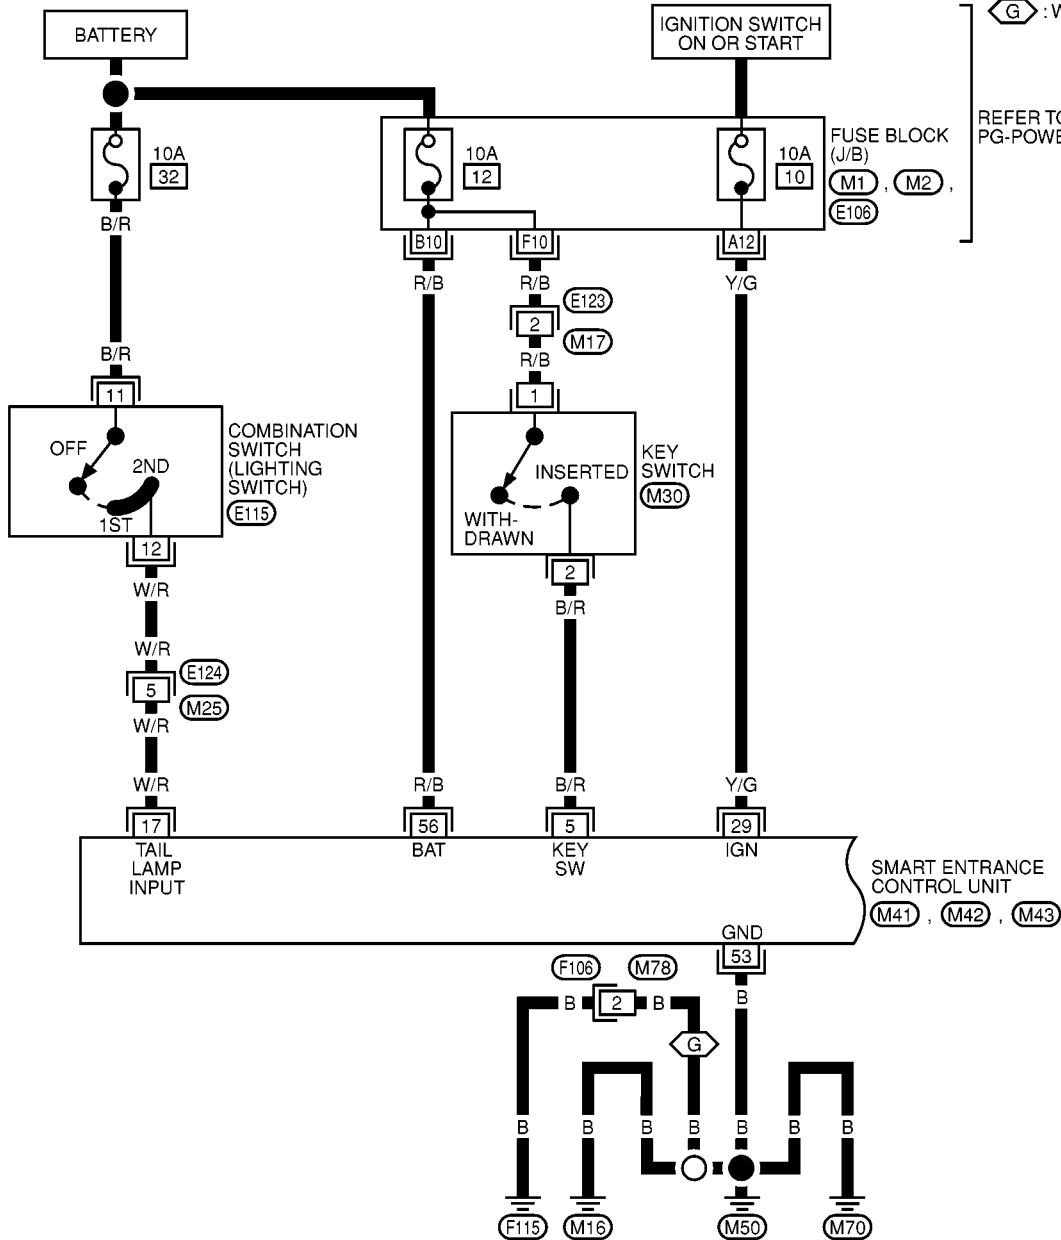

REFER TO THE FOLLOWING.

**M1**, **M2**, **E106** - FUSE BLOCK-  
JUNCTION BOX (J/B)





MKWA0638E

WARNING CHIME

DI-CHIME-02



— : DATA LINE  
H : HATCHBACK  
W : WAGON

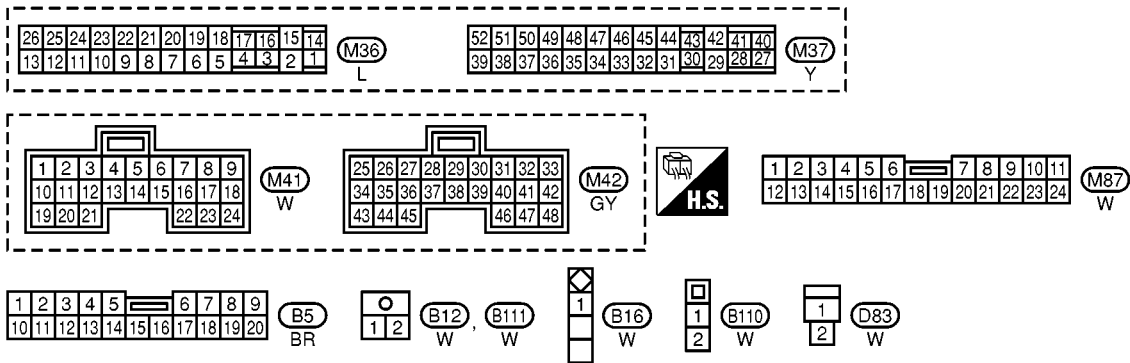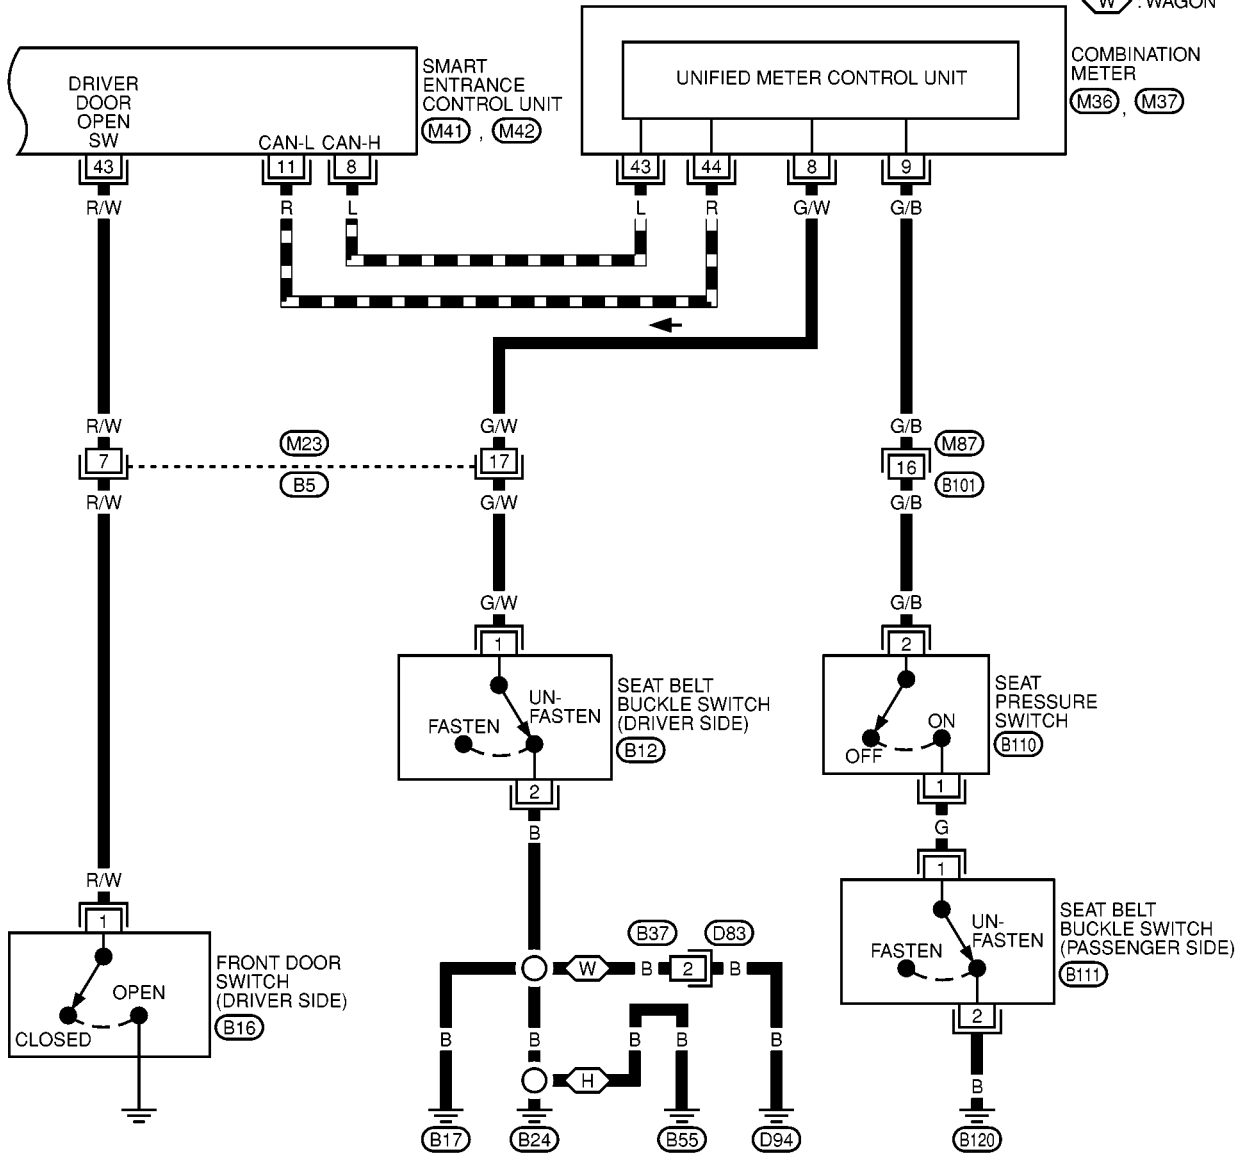

## WARNING CHIME

## RHD MODELS

## DI-CHIME-03

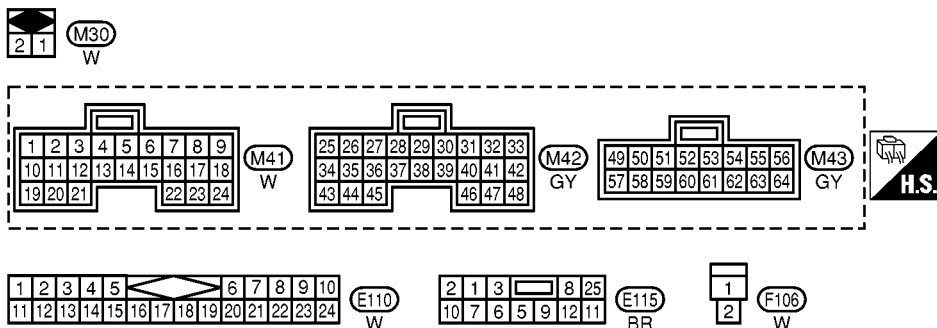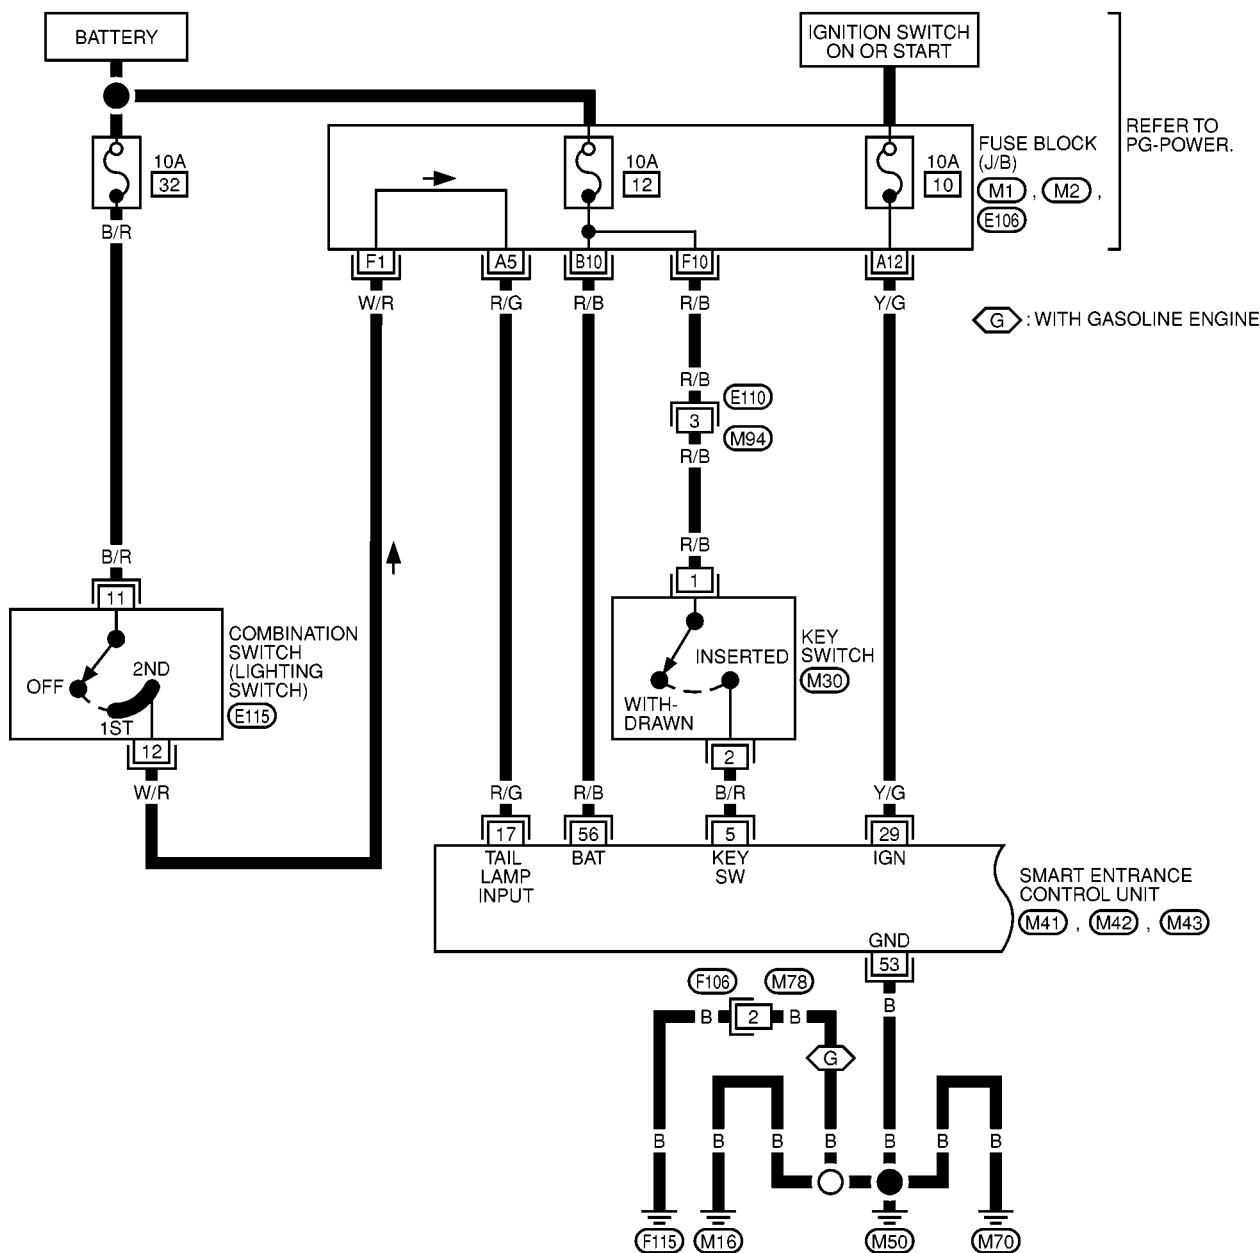



REFER TO THE FOLLOWING.

(M1), (M2), (E106) - FUSE BLOCK-JUNCTION BOX (J/B)

WARNING CHIME

DI-CHIME-04

DATA LINE

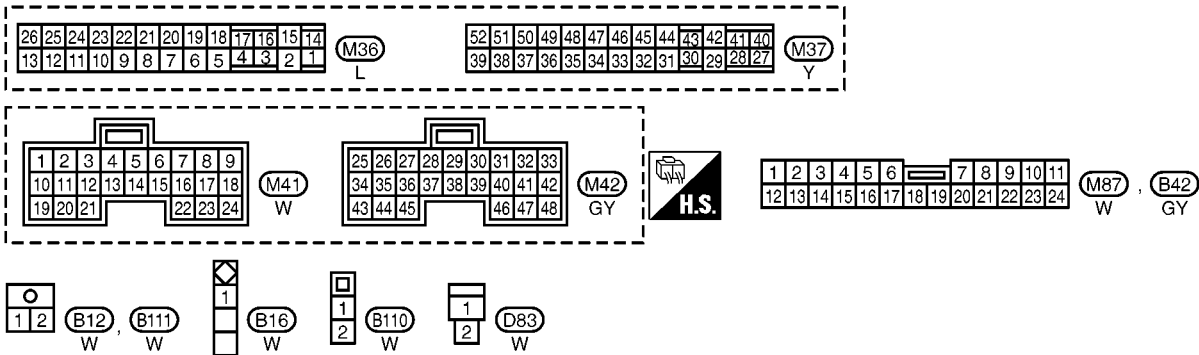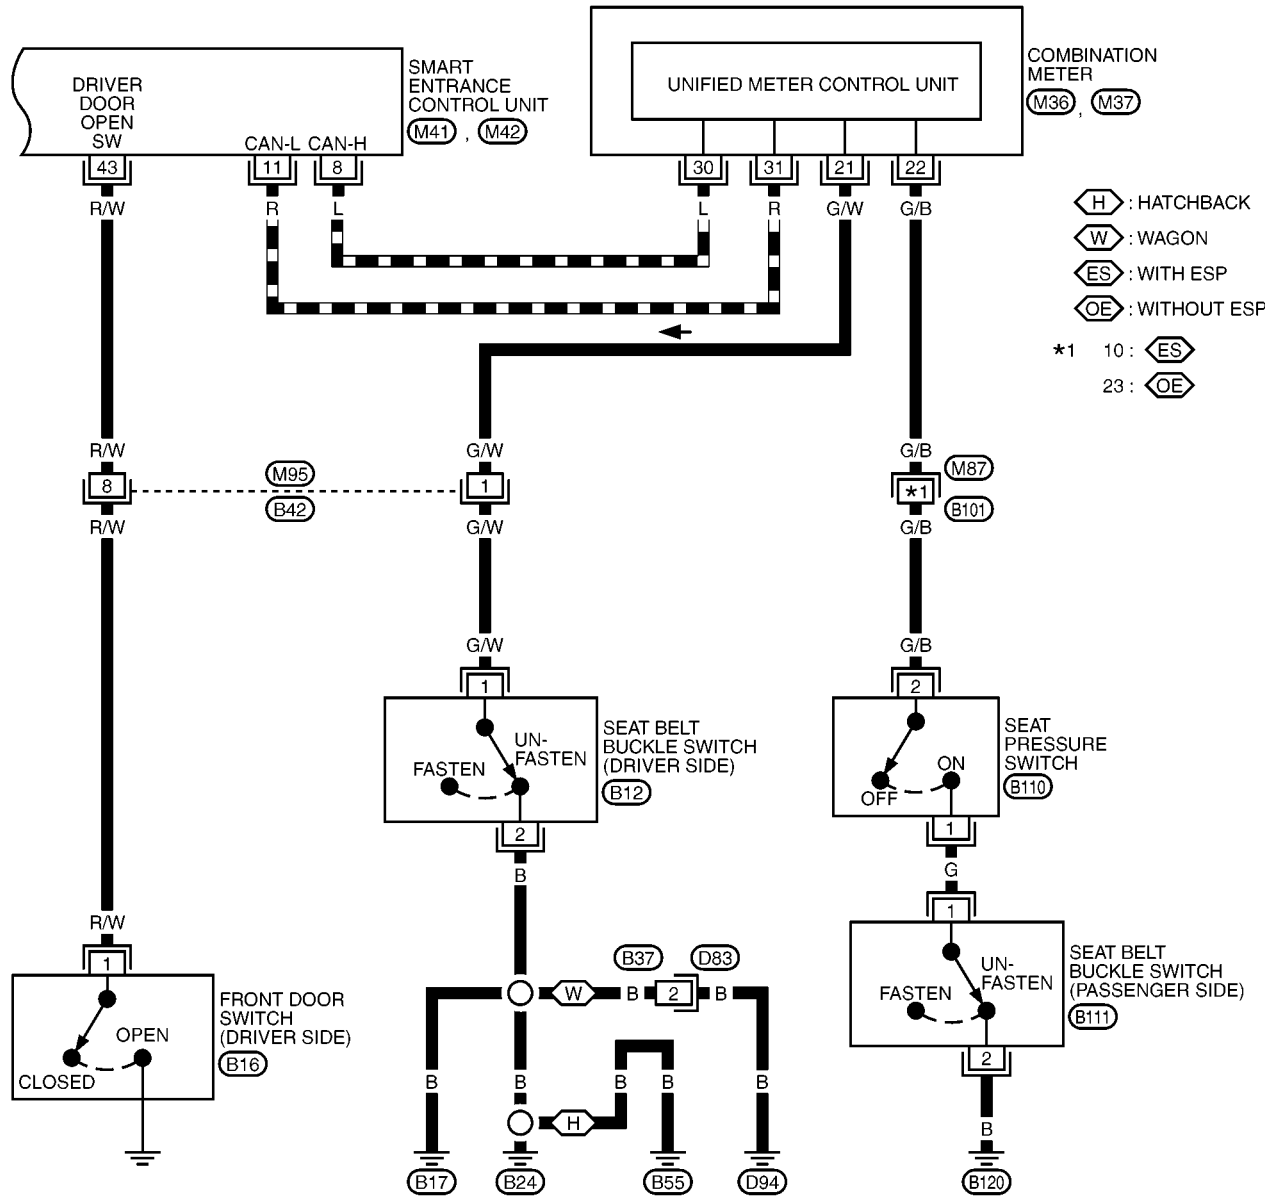

MKWA1040E

# WARNING CHIME

## CONSULT-II Inspection Procedure

EKS009CU


CONSULT-II executes the following functions by combining data reception and command transmission via the communication line from smart entrance control unit. CAN communication inspection and data monitor display.

### DIAGNOSTIC ITEMS DESCRIPTION


SMART ENTRANCE diagnosis position	Diagnosis mode	Description
KEY REMINDER	Data monitor	The input data to the SMART ENTRANCE control units is displayed in real time.
LIGHT ON REMINDER	Data monitor	The input data to the SMART ENTRANCE control units is displayed in real time.
SMART ENTRANCE PART NUMBER		Displays SMART ENTRANCE part No.

### CONSULT-II BASIC OPERATION PROCEDURE


1. With the ignition switch OFF, connect CONSULT-II to the data link connector, and turn the ignition switch ON.

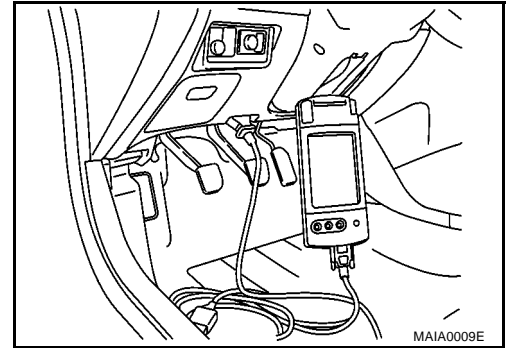

2. Touch "START (NISSAN BASED VHCL)".

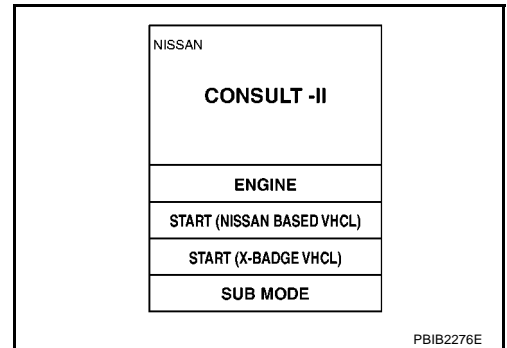

3. Touch "SMART ENTRANCE".

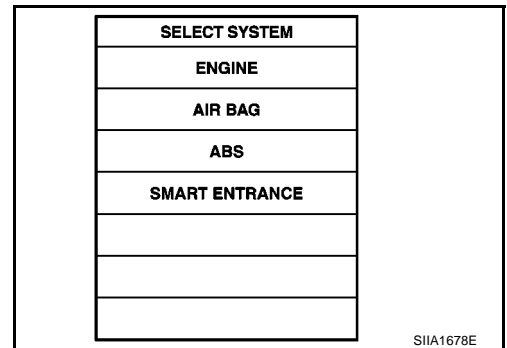

4. Select the desired part to be diagnosed on the "SELECT TEST ITEM" screen.



# WARNING CHIME

## Data Monitor Item (KEY REMINDER)

Monitored item	Description
IGNITION SW	Indicates [ON/OFF] condition of ignition switch.
KEY IN DETECT	Indicates [ON/OFF] condition of electronic key switch.
DR DOOR SW	Indicates [ON/OFF] condition of front door switch (driver side).
CDL LOCK SW	Indicates [ON/OFF] condition of door lock/unlock switch.
RKE LOCK	Indicates [ON/OFF] condition of lock signal from remote controller.

## Data Monitor Item (Light warning chime)

Monitored item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
DR DOOR SW	Indicates [ON/OFF] condition of front door switch (driver side).
TAIL LAMP ON	Indicates [ON/OFF] condition of lighting switch.

## Symptom Chart

EKS009CV

First perform the "SELF-DIAG RESULTS" in "SMART ENTRANCE" with CONSULT-II, when perform the each trouble diagnosis.

Symptom	Diagnoses/Service procedure	Reference page
Light warning chime does not activate.	● Power supply and ground circuit check	<a href="#">DI-170, "Power Supply and Ground Circuit Check"</a>
	● Lighting switch check	<a href="#">DI-171, "Lighting Switch Input Signal Check"</a>
	● Front door switch (driver side) check	<a href="#">DI-174, "Front Door Switch (Driver side) Check"</a>
Key warning chime does not activate.	● Power supply and ground circuit check	<a href="#">DI-170, "Power Supply and Ground Circuit Check"</a>
	● Key switch insert signal check	<a href="#">DI-173, "Key Switch Insert Signal Check"</a>
	● Front door switch (driver side) check	<a href="#">DI-174, "Front Door Switch (Driver side) Check"</a>
Seat belt chime does not activate.	● Power supply and ground circuit check	<a href="#">DI-170, "Power Supply and Ground Circuit Check"</a>
	● Seat belt buckle switch (driver side) check	<a href="#">DI-176, "Seat Belt Buckle Switch Check (Driver side)"</a>
	● Seat belt buckle switch (passenger side) and seat pressure switch check	<a href="#">DI-178, "Seat Belt Buckle Switch (Passenger Side) and Seat Pressure Switch Check"</a>
All warning chimes do not activate.	● Power supply and ground circuit check	<a href="#">DI-170, "Power Supply and Ground Circuit Check"</a>
With the ignition switch turned OFF and the door closed (driver side) turning the lighting switch ON (1st) activates the chime.	● Front door switch (driver side) check	<a href="#">DI-174, "Front Door Switch (Driver side) Check"</a>

# WARNING CHIME


EKS009CW

## Power Supply and Ground Circuit Check

### 1. POWER SUPPLY CIRCUIT CHECK

1. Disconnect smart entrance control unit connector.
2. Check the following.

Terminals		Ignition switch position			
(+) (−)		OFF	ACC	ON	
Connector	Terminal (Wire color)				
M42	29 (Y/G)	Ground	0V	0V	Battery voltage
M43	56 (R/B)	Ground	Battery voltage	Battery voltage	Battery voltage

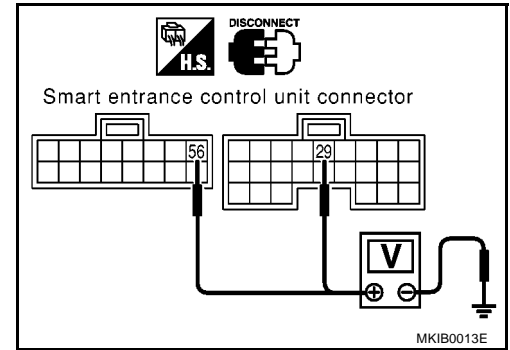

OK or NG

OK >> GO TO 2.

- NG >> ● 10A fuse [NO. 10, located in fuse block (J/B)].  
● 10A fuse [NO. 12, located in fuse block (J/B)].  
● Check harness for open or short between smart entrance control unit and fuse.

### 2. GROUND CIRCUIT CHECK


Check continuity between smart entrance control unit harness connector M43 terminal 53 (B) and ground.

**Continuity should exist.**

OK or NG

OK >> INSPECTION END.

NG >> Check ground harness.

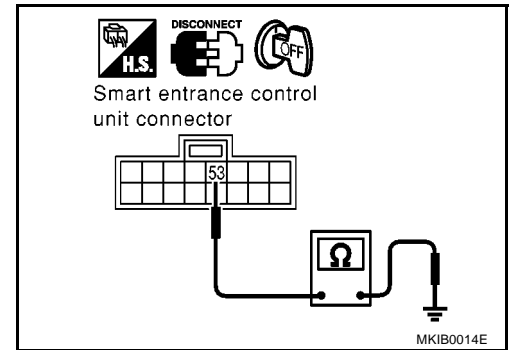

# WARNING CHIME

## Lighting Switch Input Signal Check

EKS009CX

### 1. CHECK LIGHTING SWITCH INPUT SIGNAL

#### With CONSULT-II

Check lighting switch ("TAIL LAMP ON") in "DATA MONITOR" mode with CONSULT-II.

When lighting switch is in : TAIL LAMP ON ON  
1st or 2nd position

When lighting switch is in : TAIL LAMP ON OFF  
OFF position

DATA MONITOR	
MONITOR	NO DTC
IGNITION SW	ON
DR DOOR SW	OFF
TAIL LAMP ON	OFF

MKIB0192E


#### Without CONSULT-II

Check voltage between smart entrance control unit harness connector M41 terminal 17 (W/R) and ground.

Condition of switch	Voltage [V]:
Lighting switch: 1st or 2nd	Approx. 12
Lighting switch: OFF	0

OK or NG

OK >> Lighting switch is OK.  
NG >> GO TO 2.

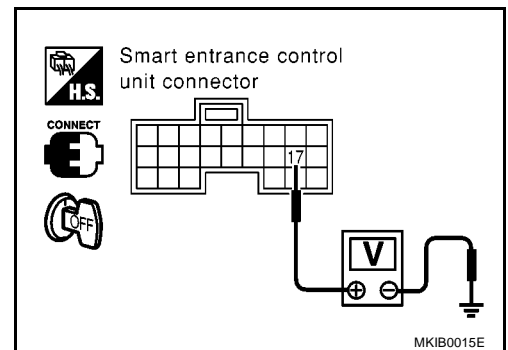


### 2. CHECK LIGHTING SWITCH POWER SUPPLY CIRCUIT FOR OPEN OR SHORT

1. Disconnect lighting switch harness connector.
2. Check voltage between lighting switch harness connector E115 terminal 11 (W/R: LHD models or R/G: RHD models) and ground.

Battery voltage should exist.

OK or NG

- OK >> GO TO 3.  
NG >> Check the following.
- 10A fuse (No. 32 located in the fuse and fusible link box)
  - Harness for open or short between lighting switch and fuse

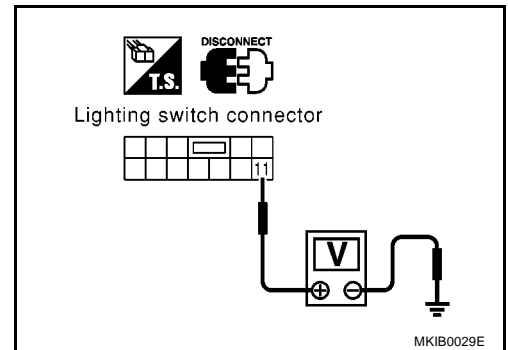

## WARNING CHIME

### 3. CHECK LIGHTING SWITCH INPUT SIGNAL CIRCUIT FOR OPEN OR SHORT

Check harness continuity between lighting switch harness connector E115 terminal 12 (W/R) and smart entrance control unit harness connector M41 terminal 17 (W/R: LHD models or R/G: RHD models).


**Continuity should exist.**

OK or NG

OK >> GO TO 4.

NG >> Check the following.

- Harness for open or short between smart entrance control unit and lighting switch.
- Harness for open or short between smart entrance control unit and lighting switch.

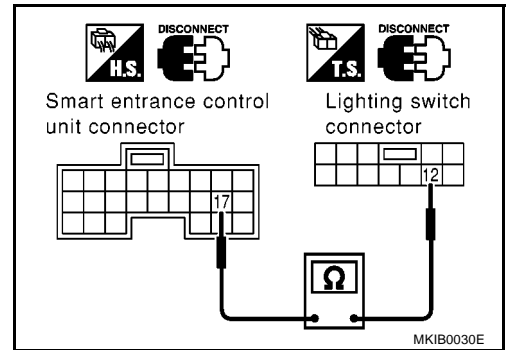

### 4. CHECK LIGHTING SWITCH


Check continuity between lighting switch connector E115 terminals 11 and 12.

Terminals			Condition	Continuity
(+) (–)				
Connector	Terminal	Terminal		
E115	11	12	OFF position	No
			1st or 2nd position	Yes

OK or NG

OK >> Lighting switch is OK.

NG >> Replace lighting switch.

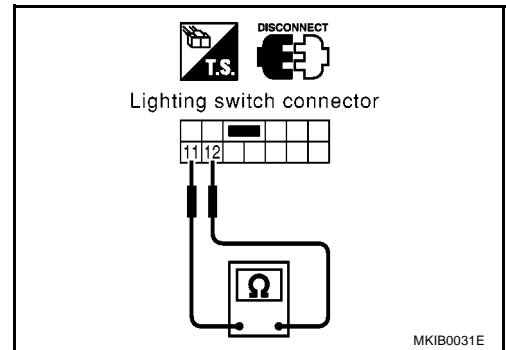

# WARNING CHIME

## Key Switch Insert Signal Check

EKS009CY

### 1. CHECK KEY SWITCH INPUT SIGNAL

#### With CONSULT-II

Check key switch ("KEY IN DETECT") in "DATA MONITOR" mode with CONSULT-II.

When key is inserted to ignition key cylinder : KEY IN DETECT ON

When key is removed from ignition key cylinder : KEY IN DETECT OFF

DATA MONITOR	
MONITOR	NO DTC
IGNITION SW	ON
KEY IN DETECT	ON
DR DOOR SW	ON
CDL LOCK SW	OFF
RKE LOCK	OFF

MKIB0193E


#### Without CONSULT-II

Check voltage between smart entrance control unit harness connector M41 terminal 5 (B/R) and ground.

Condition of key switch Voltage [V]

When key is inserted to ignition key cylinder: : Approx. 12

When key is removed from ignition key cylinder: 0

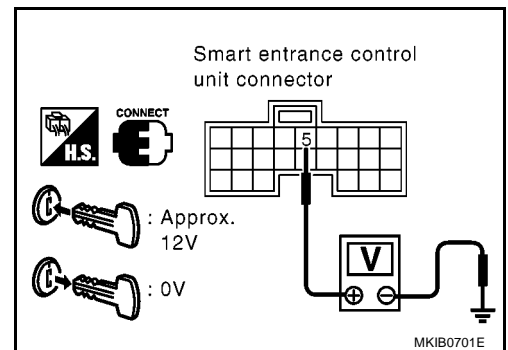

OK or NG

OK >> Key switch is OK.

NG >> GO TO 2.

### 2. CHECK KEY SWITCH POWER SUPPLY CIRCUIT FOR OPEN OR SHORT

1. Disconnect key switch harness connector.
2. Check voltage between key switch harness connector M30 terminal 1 (R/B) and ground.


Battery voltage should exist.

OK or NG

OK >> GO TO 3.

NG >> Check the following.

- 10A fuse [No. 12 located in fuse block (J/B)]
- Harness for open or short between key switch and fuse

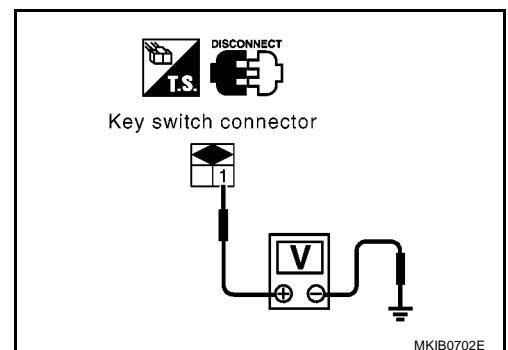

### 3. CHECK KEY SWITCH INPUT SIGNAL CIRCUIT FOR OPEN OR SHORT


Check harness continuity between key switch harness connector M30 terminal 2 (B/R) and smart entrance control unit harness connector M41 terminal 5 (B/R).

Continuity should exist.

OK or NG

OK >> GO TO 4.

NG >> Repair or replace harness.

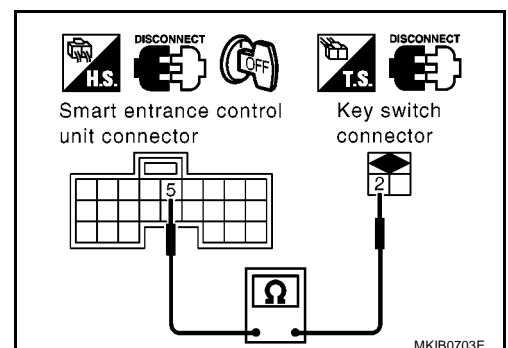

# WARNING CHIME


## 4. CHECK KEY SWITCH

Check continuity between key switch connector M30 terminals 1 and 2.

Terminals			Condition	Continuity
(+)		(-)		
Connector	Terminal	Terminal		
M30	1	2	Inserted	Yes
			Removed	No

OK or NG

- OK >> Key switch is OK.  
 NG >> Replace key switch.

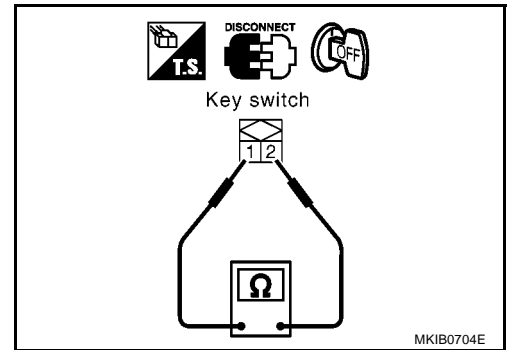

## Front Door Switch (Driver side) Check

EKS009CZ

### 1. CHECK FRONT DOOR SWITCH (DRIVER SIDE) INPUT SIGNAL

#### With CONSULT-II

- Check front door switch ("DR DOOR SW") in "DATA MONITOR" mode with CONSULT-II.

When driver's door is open : DR DOOR SW ON  
 When driver's door is closed : DR DOOR SW OFF

DATA MONITOR	
MONITOR	NO DTC
IGNITION SW	ON
KEY IN DETECT	ON
DR DOOR SW	ON
CDL LOCK SW	OFF
RKE LOCK	OFF

MKIB0193E


#### Without CONSULT-II

- Check voltage between smart entrance control unit harness connector M42 terminal 43 (R/W) and ground.

Terminal		Condition (Driver's door)	Voltage [V]
(+)	(–)		
43 (R/W)	Ground	Open	0
		Closed	Approx. 5

OK or NG

- OK >> INSPECTION END  
 NG >> GO TO 2.

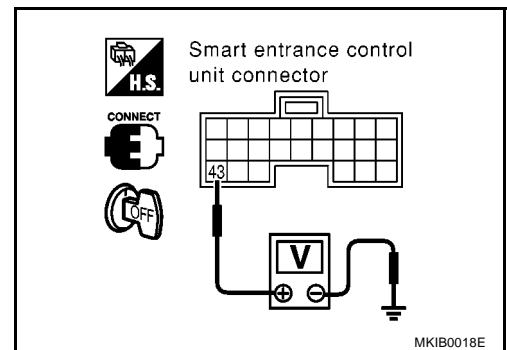

# WARNING CHIME

## 2. CHECK DOOR SWITCH OPEN OR SHORT CIRCUIT


1. Disconnect smart entrance control unit harness connector and front door switch (driver side) connector.
2. Check the following.
  - Harness continuity between smart entrance control unit harness connector M42 terminal 43 (R/W) and door switch (driver side) connector B16 terminal 1 (R/W).
  - Harness continuity between smart entrance control unit harness connector M42 terminal 43 (R/W) and body ground.

Terminals				Continuity
(+)		(-)		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M42	43 (R/W)	B16 (R/W)	1 (W/R)	Yes
M42	43 (R/W)	Ground		No

OK or NG

OK >> GO TO 3.

NG >> Repair or replace harness.

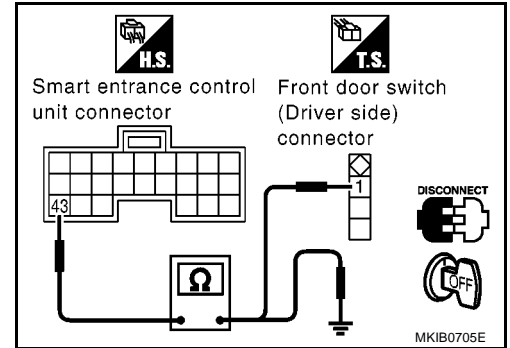

## 3. CHECK DOOR SWITCH (DRIVER SIDE)


Check continuity between front door switch (driver side) connector B16 terminal 1 (R/W) and body ground.

Terminals			Condition	Continuity
(+)		(-)		
Connector	Terminal (Wire color)			
B16	1 (R/W)	Ground	Door is open	Yes
			Door is closed	No

OK or NG

OK >> Front door switch (driver side) is OK.

NG >> Replace front door switch (driver side)

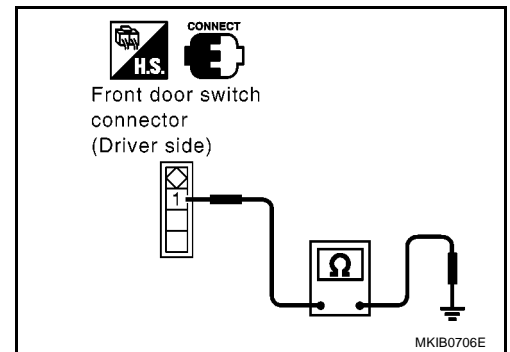

# WARNING CHIME

## Seat Belt Buckle Switch Check (Driver side)

EKS009D0

### 1. SMART ENTRANCE CONTROL UNIT SYSTEM INSPECTION

Perform the smart entrance control unit self-diagnosis. Refer to [BCS-33, "SELF-DIAG RESULTS MODE"](#) in "Body control system (BCS)" section.

OK or NG

OK >> GO TO 2.

NG >> Check smart entrance control system.

### 2. COMBINATION METER SELF-DIAGNOSIS INSPECTION

Perform combination meter self-diagnosis mode. Refer to [DI-36, "Combination Meter Self-Diagnosis"](#) (LHD models) or [DI-77, "Combination Meter Self-Diagnosis"](#) (RHD models).

OK or NG

OK >> GO TO 3.

NG >> Check combination meter system.

### 3. CHECK SEAT BELT BUCKLE SWITCH INPUT SIGNAL

1. Turn ignition switch "ON".
2. Check voltage between seat belt buckle switch (driver side) harness connector B12 terminal 1 (G/W) and ground.


Terminal		Condition (Driver side seat belt buckle switch)	Voltage [V]
(+)	(-)		
1 (G/W)	Ground	Fasten	Approx. 5
		Unfasten	0

OK or NG

OK >> Seat belt buckle switch is OK.

NG >> GO TO 4. (LHD models)

NG >> GO TO 5. (RHD models)

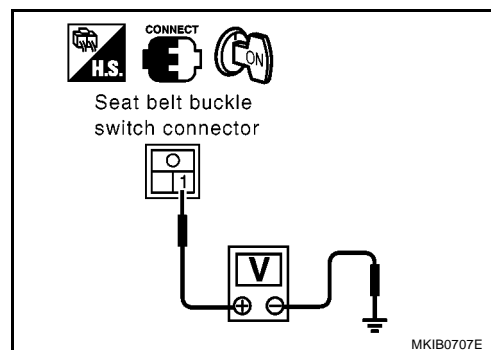

### 4. CHECK SEAT BELT BUCKLE SWITCH INPUT SIGNAL CIRCUIT (LHD MODELS)


1. Turn ignition switch "OFF".
2. Disconnect combination meter harness connector and seat belt buckle switch (driver side) harness connector.
3. Check the following.
  - Harness continuity between combination meter harness connector M36 terminal 8 (G/W) and seat belt buckle switch (driver side) harness connector B12 terminal 1 (G/W).
  - Harness continuity between combination meter harness connector M36 terminal 8 (G/W) and body ground.

Terminal				Continuity
(+) (+)		(-) (-)		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M36	8 (G/W)	B12	1 (G/W)	Yes
M36	8 (G/W)	Ground		No

OK or NG

OK >> GO TO 6.

NG >> Repair or replace harness.

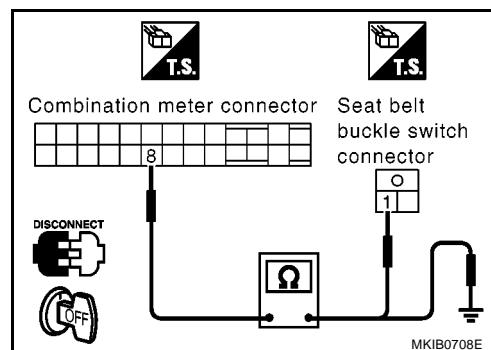



## WARNING CHIME

### 5. CHECK SEAT BELT BUCKLE SWITCH INPUT SIGNAL CIRCUIT (RHD MODELS)


1. Turn ignition switch "OFF".
2. Disconnect combination meter harness connector and seat belt buckle switch (driver side) harness connector.
3. Check the following.
  - Harness continuity between combination meter harness connector M36 terminal 21 (G/W) and seat belt buckle switch (driver side) harness connector B12 terminal 1 (G/W).
  - Harness continuity between combination meter harness connector M36 terminal 21 (G/W) and body ground.

Terminal				Continuity
(+)		(-)		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M36	21 (G/W)	B12	1 (G/W)	Yes
M36	21 (G/W)	Ground		No

OK or NG

OK >> GO TO 6.

NG >> Repair or replace harness.

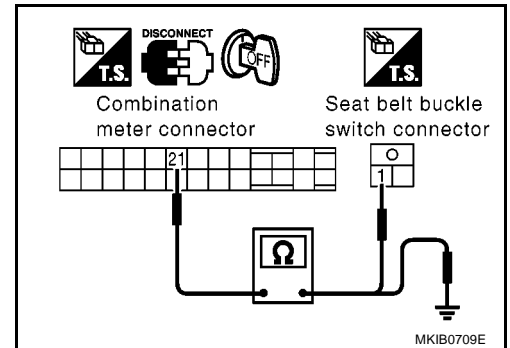

### 6. CHECK SEAT BELT BUCKLE SWITCH GROUND CIRCUIT


Check harness continuity between seat belt buckle switch (driver side) harness connector B12 terminal 2 (B) and body ground.

**Continuity should exist.**

OK or NG

OK >> GO TO 7.

NG >> Repair or replace harness.

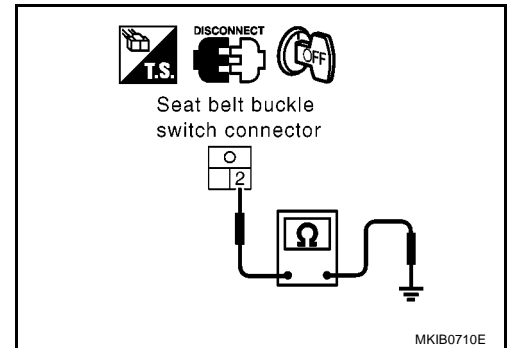

### 7. CHECK SEAT BELT BUCKLE SWITCH

Check continuity between seat belt buckle switch (driver side) connector B12 terminal 1 and 2.


**When seat belt fastened : Continuity should not exist.**

**When seat belt unfastened : Continuity should exist.**

OK or NG

OK >> INSPECTION END.

NG >> Replace seat belt buckle switch (driver side).

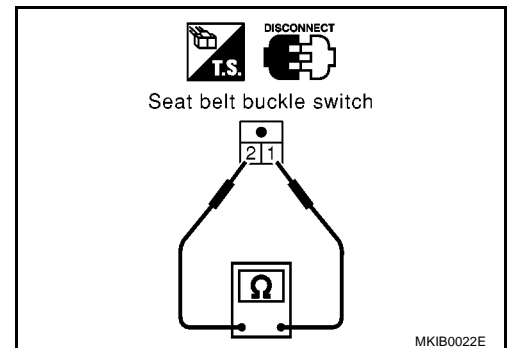

## WARNING CHIME

### Seat Belt Buckle Switch (Passenger Side) and Seat Pressure Switch Check EKS009D1

#### 1. SMART ENTRANCE CONTROL UNIT SYSTEM INSPECTION

Perform the smart entrance control unit self-diagnosis. Refer to [BCS-33, "SELF-DIAG RESULTS MODE"](#) in "Body control system (BCS)" section.

OK or NG

OK >> GO TO 2.

NG >> Check smart entrance control system.

#### 2. COMBINATION METER SELF-DIAGNOSIS INSPECTION

Perform combination meter self-diagnosis mode. Refer to [DI-36, "Combination Meter Self-Diagnosis"](#) (LHD models) or [DI-77, "Combination Meter Self-Diagnosis"](#) (RHD models).

OK or NG

OK >> GO TO 3. (LHD models)

OK >> GO TO 4. (RHD models)

NG >> Check combination meter system.

#### 3. CHECK SEAT BELT BUCKLE SWITCH INPUT SIGNAL (LHD MODELS)

1. Turn ignition switch "OFF".
2. Disconnect combination meter harness connector.
3. Check continuity between combination meter harness connector M36 terminal 9 (G/B) and ground.

##### NOTE:


When performing the following procedure, a person is sitting on the passenger side seat. (As a result, the seat pressure sensor is turned ON.)

Terminal		Condition (Passenger side seat belt buckle switch)	Continuity
9 (G/B)	Ground	Fasten	No
		Unfasten	Yes

OK or NG

OK >> Seat belt buckle switch is OK.

NG >> GO TO 5.

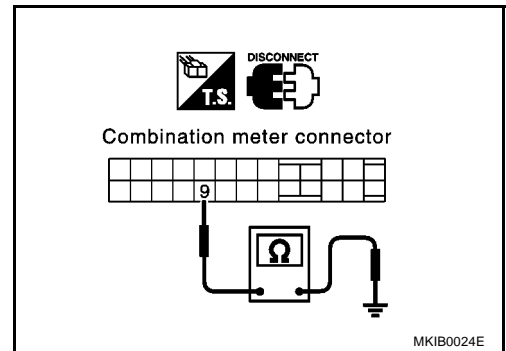

## WARNING CHIME

### 4. CHECK SEAT BELT BUCKLE SWITCH INPUT SIGNAL (RHD MODELS)

1. Turn ignition switch "OFF".
2. Disconnect combination meter harness connector.
3. Check continuity between combination meter harness connector M36 terminal 22 (G/B) and ground.


**NOTE:**

When performing the following procedure, a person is sitting on the passenger side seat. (As a result, the seat pressure sensor is turned ON.)

Terminal		Condition (Passenger side seat belt buckle switch)	Continuity
22 (G/B)	Ground	Fastened	No
		Unfastened	Yes

**OK or NG**

- OK >> Seat belt buckle switch is OK.  
NG >> GO TO 5.

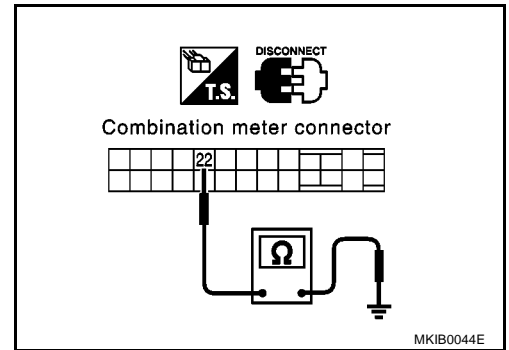


### 5. CHECK SEAT PRESSURE SWITCH INPUT SIGNAL

1. Reconnect combination meter harness connector.
2. Disconnect seat belt buckle switch (passenger side) harness connector.
3. Turn ignition switch "ON".
4. Check voltage between seat belt buckle switch (passenger side) harness connector B111 terminal 1 (G) and ground.

Terminal		Condition (Seat pressure switch)	Voltage [V]
(+)	(-)		
1 (G)	Ground	Person is not sitting in passenger side seat. (Seat pressure switch "OFF")	0
		Person is sitting in passenger side seat. (Seat pressure switch "ON")	Approx. 5

**OK or NG**

- OK >> GO TO 10.  
NG >> GO TO 6. (LHD models)  
NG >> GO TO 7. (RHD models)

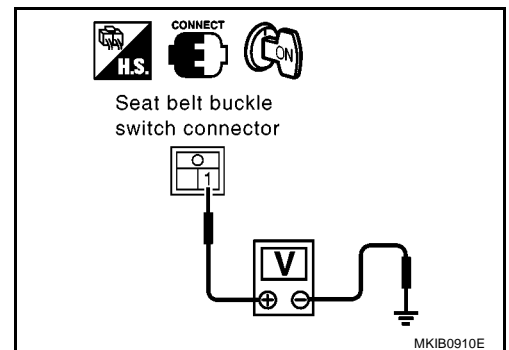

# WARNING CHIME


## 6. CHECK SEAT PRESSURE SWITCH INPUT SIGNAL CIRCUIT (LHD MODELS)

1. Turn ignition switch "OFF".
2. Disconnect combination meter harness connector and seat pressure switch harness connector.
3. Check the following.
  - Harness continuity between combination meter harness connector M36 terminal 9 (G/B) and seat pressure switch harness connector B110 terminal 2 (G/B).
  - Harness continuity between combination meter harness connector M36 terminal 9 (G/B) and body ground.

Terminal				Continuity
(+)		(-)		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M36	9 (G/B)	B110	2 (G/B)	Yes
M36	9 (G/B)	Ground		No

OK or NG

- OK >> GO TO 8.  
 NG >> Repair or replace harness.

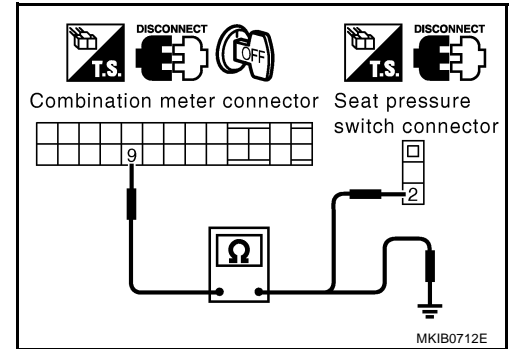


## 7. CHECK SEAT PRESSURE SWITCH INPUT SIGNAL CIRCUIT (RHD MODELS)

1. Turn ignition switch "OFF".
2. Disconnect combination meter harness connector and seat pressure switch harness connector.
3. Check the following.
  - Harness continuity between combination meter harness connector M36 terminal 22 (G/B) and seat pressure switch harness connector B110 terminal 2 (G/B).
  - Harness continuity between combination meter harness connector M36 terminal 22 (G/B) and body ground.

Terminal				Continuity
(+)		(-)		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
M36	22 (G/B)	B110	2 (G/B)	Yes
M36	22 (G/B)	Ground		No

OK or NG

- OK >> GO TO 8.  
 NG >> Repair or replace harness.

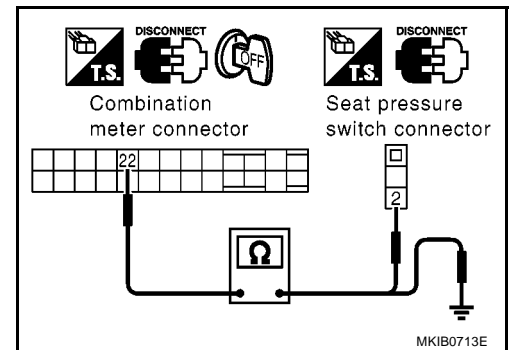

# WARNING CHIME

## 8. CHECK SEAT BELT BUCKLE SWITCH INPUT SIGNAL CIRCUIT


1. Disconnect seat belt buckle switch (passenger side) and seat pressure switch harness connector.
2. Check the following.
  - Harness continuity between seat belt buckle switch (passenger side) harness connector B111 terminal 1 (G) and seat pressure switch harness connector B110 terminal 1 (G).
  - Harness continuity between seat pressure switch harness connector B110 terminal 1 (G) and body ground.

Terminal				Continuity
(+)		(-)		
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)	
B110	1 (G)	B111	1 (G)	Yes
B110	1 (G)	Ground		No

OK or NG

OK >> GO TO 9.

NG >> Repair or replace harness.

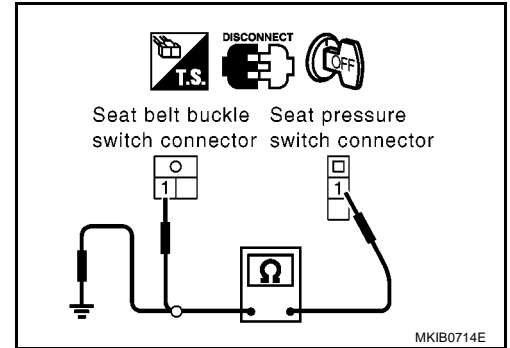

## 9. CHECK SEAT PRESSURE SWITCH


Check continuity between seat pressure switch connector B110 terminals 1 and 2.

Terminal		Condition (Seat pressure switch)	Continuity
(+)	(-)		
1	2	Person is not sitting in passenger side seat. (Seat pressure switch "OFF")	No
		Person is sitting in passenger side seat. (Seat pressure switch "ON")	Yes

OK or NG

OK >> GO TO 10.

NG >> Replace seat pressure switch.

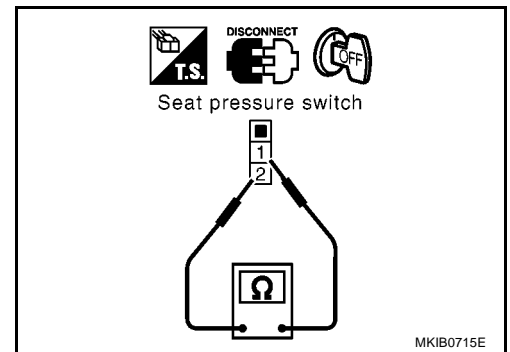

## 10. CHECK SEAT BELT BUCKLE SWITCH GROUND CIRCUIT


Check harness continuity between seat belt buckle switch (passenger side) harness connector B111 terminal 2 (B) and body ground.

**Continuity should exist.**

OK or NG

OK >> GO TO 11.

NG >> Repair or replace harness.

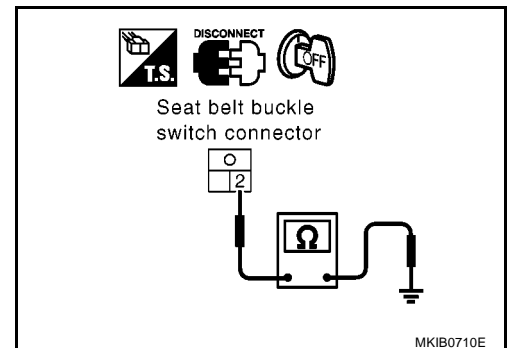

## WARNING CHIME

### 11. CHECK SEAT BELT BUCKLE SWITCH

Check continuity between seat belt buckle switch (passenger side) connector B111 terminals 1 and 2.


**When seat belt fastened:**      **Continuity should not exist.**

**When seat belt unfastened:**      **Continuity should exist.**

OK or NG

OK    >> INSPECTION END.



NG    >> Replace seat belt buckle switch (passenger side)

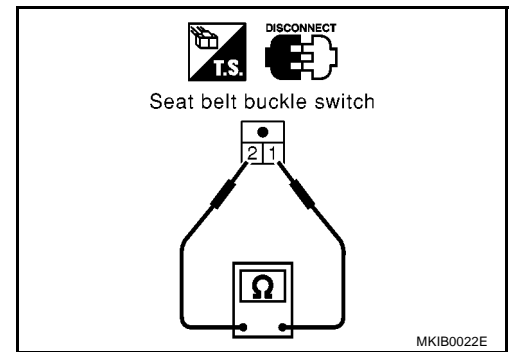

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
**I**  
L  
M

## EKS009D2

## DI-CLOCK-01

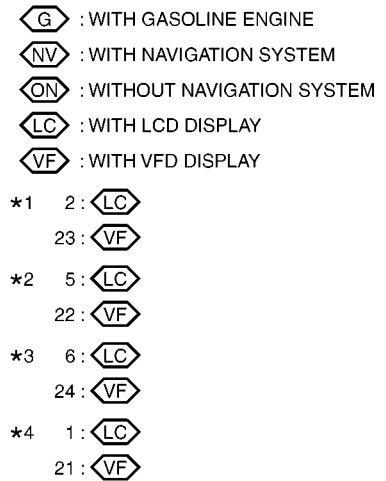

## REAR VIEW MONITOR

PFP:28260

### System Description

EKS009D3

- The rear view monitor is equipped to check the rearward of the vehicle with display when the selector lever is in R position.
- The lines of vehicle sides and the distance from the rear end of the vehicle are provided on display as a guide. It allows the driver to know the distance between the vehicle and a rearward object, and the width of the vehicle much easier.

### POWER SUPPLY AND GROUND

Power is supplied at all time

- through 15 A fuse (No.33, located in fuse and fusible link box)
- to rear view camera control unit terminal 7.

When ignition switch is ACC or ON position, power is supplied

- through 10 A fuse [No.1, located in fuse block (J/B)]
- to rear view camera control unit terminal 6.

When ignition switch is ON or START position, power is supplied

- through 10 A fuse [NO.30, located in fuse block (J/B)]
- to back-up lamp switch terminal 1 (M/T models) or
- to park/neutral position switch terminal 3 (CVT or A/T models).

Ground is supplied

LHD models

- to rear view camera control unit terminal 16
- through body ground B120, and
- to rear view camera terminal 3
- through body ground B120 (sedan models), B17, B24 and D94 (wagon models) or B17,B24 and B55 (hatch back models).

RHD models

- to rear view camera control unit terminal 16
- through body ground B17 and B24 (sedan models), B17, B24 and D94 (wagon models) or B17, B24 and B55 (hatch back models), and
- to rear view camera terminal 3
- through body ground B17 and B24 (sedan models), B17, B24 and D94 (wagon models) or B17, B24 and B55 (hatch back models).

### REAR VIEW CAMERA OPERATION

When A/T selector lever is reverse position, signal is supplied

- through back-up lamp switch terminal 2 (M/T models) or
- through park/neutral position switch terminal 8 (CVT or A/T models)
- to rear view camera control unit terminal 14, and
- to AV and NAVI control unit terminal 32 (with navigation system) or
- to display unit terminal 7 (without navigation system).

Then, camera ON signal is sent

- through rear view camera control unit terminal 5
- to rear view camera terminal 4.

An image taken by rear view camera is sent

- through rear view camera terminal 2
- to rear view camera control unit terminal 3.

Then an image is sent

- through rear view camera control unit terminal 2 and 13
- to display terminal 9 and 10 (with navigation system) or
- to display unit terminal 23 and 24 (without navigation system).



# REAR VIEW MONITOR

An image of rear view will be projected on the display.


## Rear View Camera Guide Line (With Navigation System)

- from AV and NAVI control unit terminal 37
- to rear view camera control unit terminal 15.

Rear view guideline will be projected on the display.

## Component Location

EKS009D4

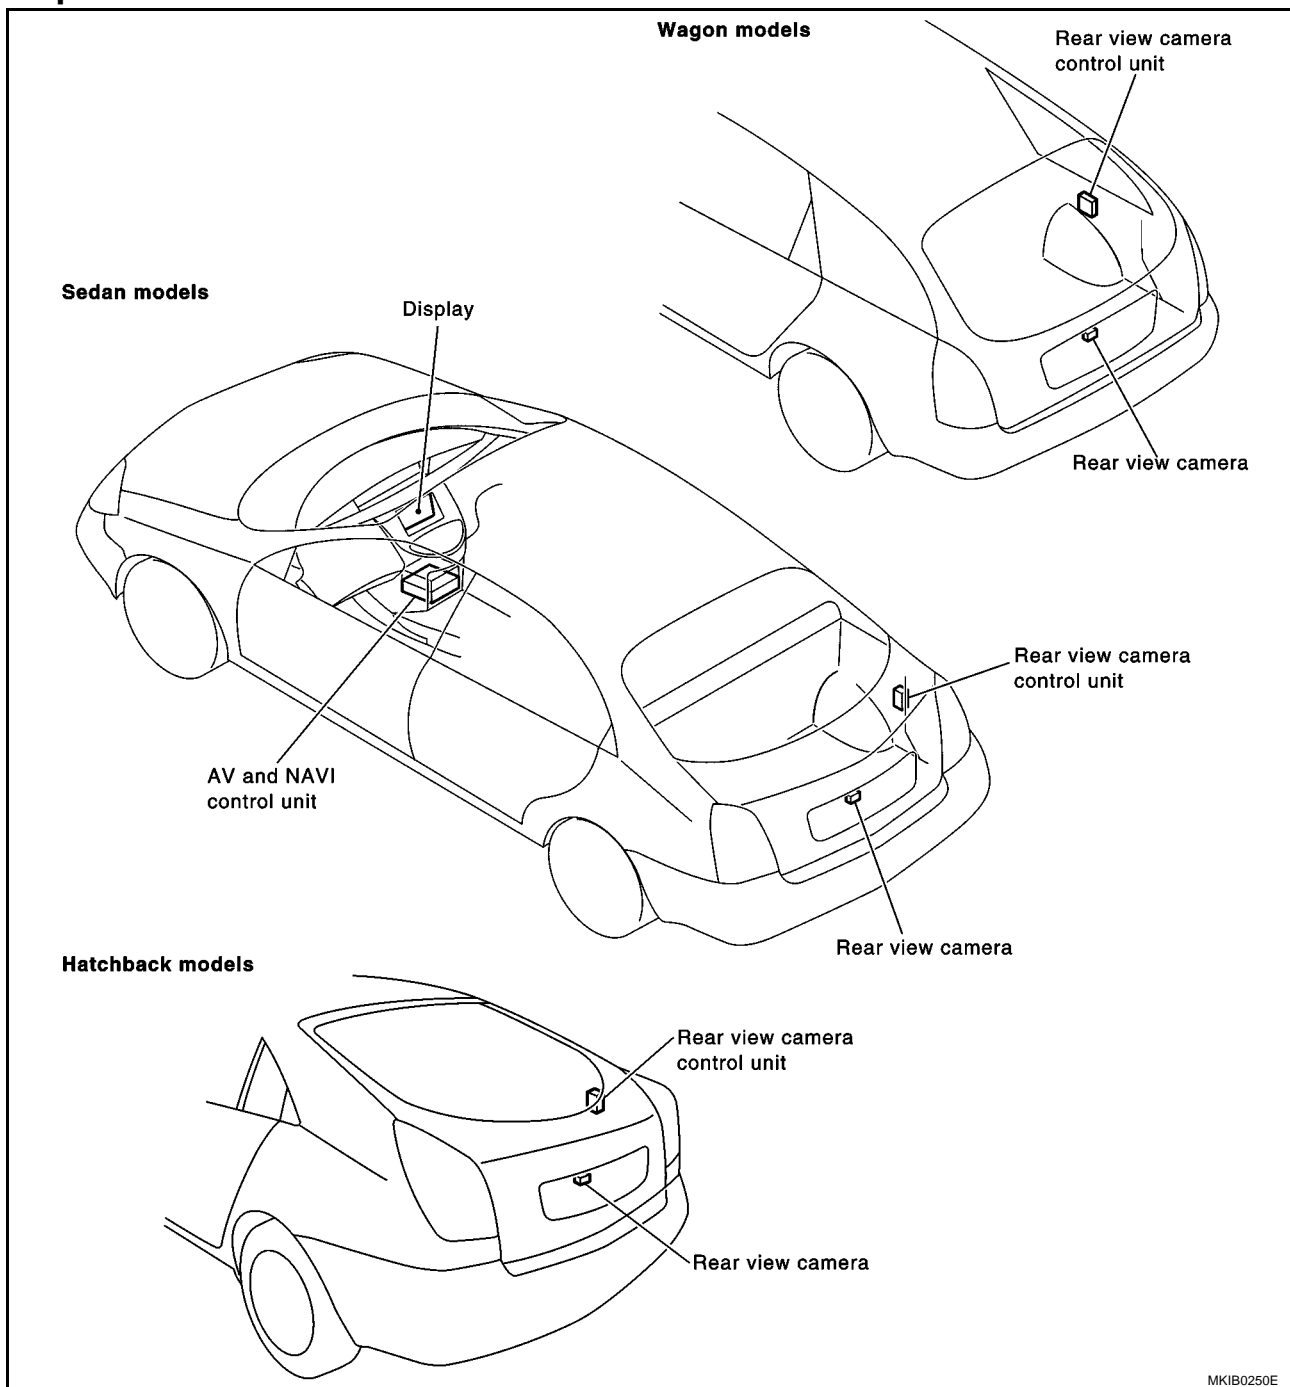


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
DI  
L  
M

# REAR VIEW MONITOR

## Schematic

EKS009D5

- (A) : With A/T  
 (C) : With CVT  
 (M) : With M/T  
 (NV) : With navigation system  
 (ON) : Without navigation system  
 (LH) : LHD models for hatchback  
 (XL) : Except (LH)

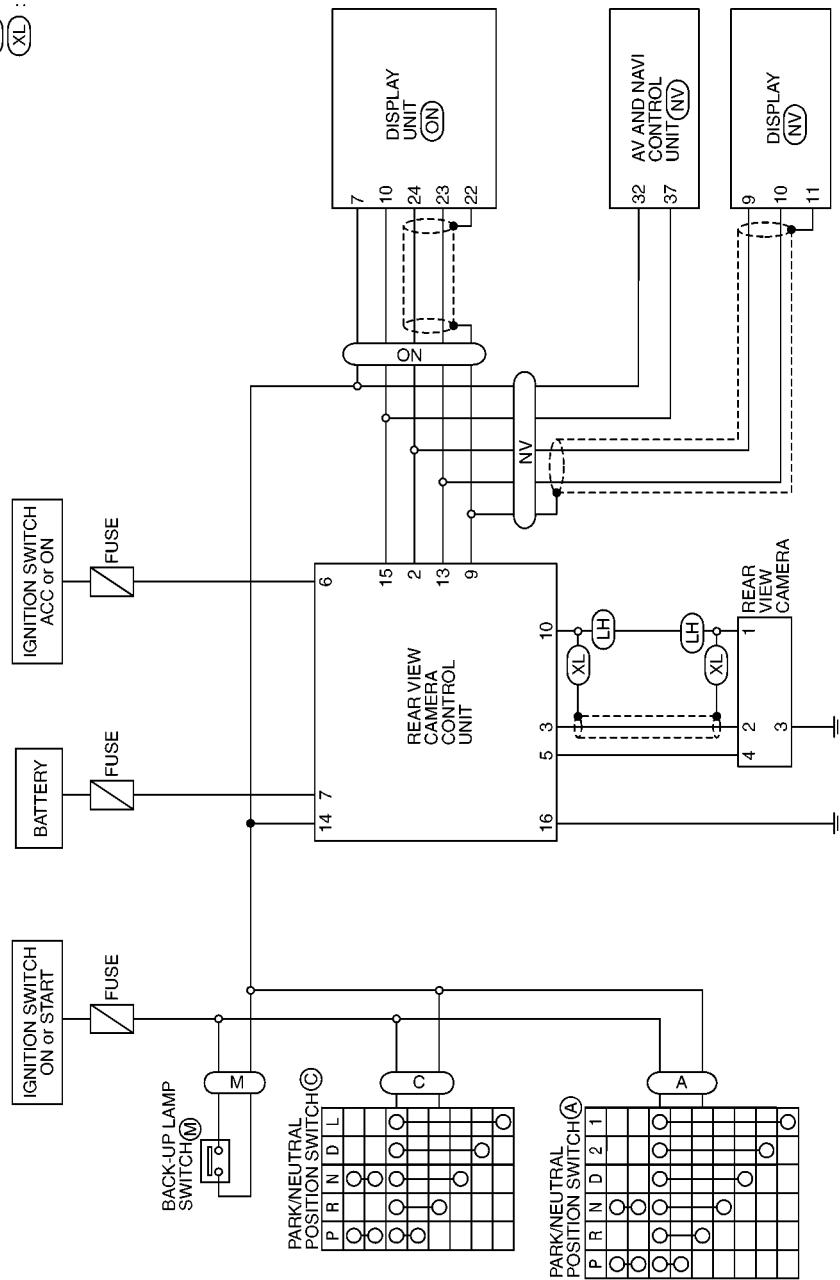


MKWA1042E

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

## EKS009D6



DI

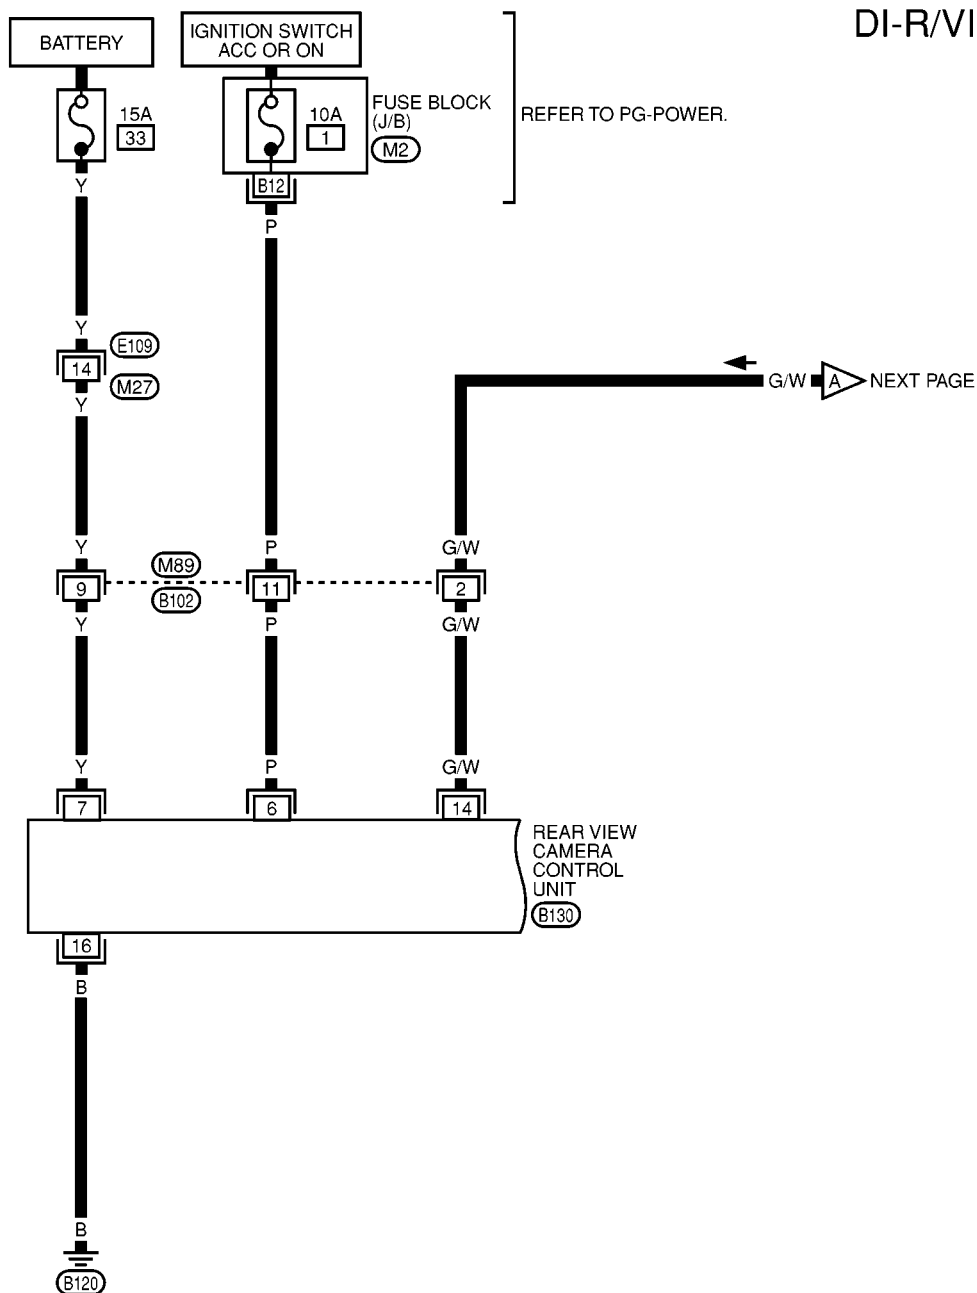

REFER TO THE FOLLOWING.  
(M2) -FUSE BLOCK-  
JUNCTION BOX (J/B)

# REAR VIEW MONITOR

## DI-R/VIEW-02

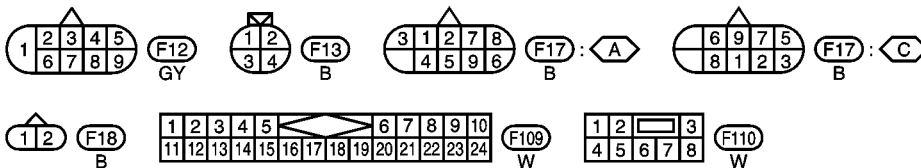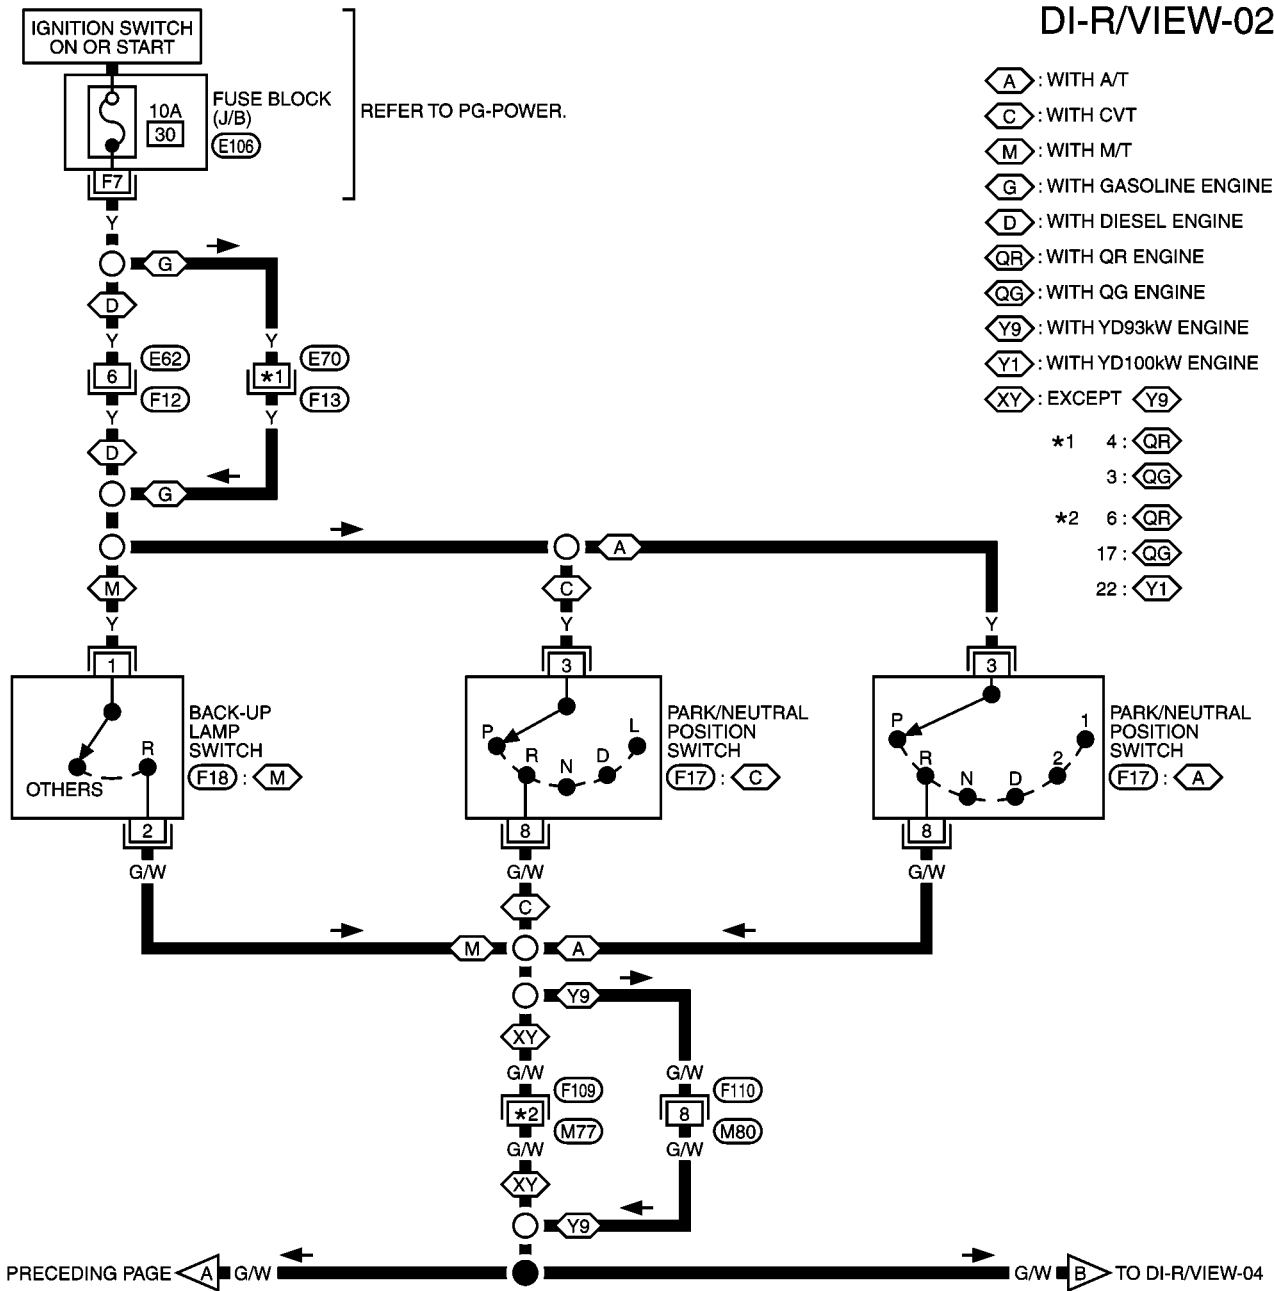

REFER TO THE FOLLOWING.  
(E106) -FUSE BLOCK-  
JUNCTION BOX (J/B)



# REAR VIEW MONITOR

DI-R/VIEW-03

REAR VIEW  
CAMERA CONTROL  
UNIT  
(B130)

(S) : SEDAN  
(H) : HATCHBACK  
(W) : WAGON

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
DI  
L  
M

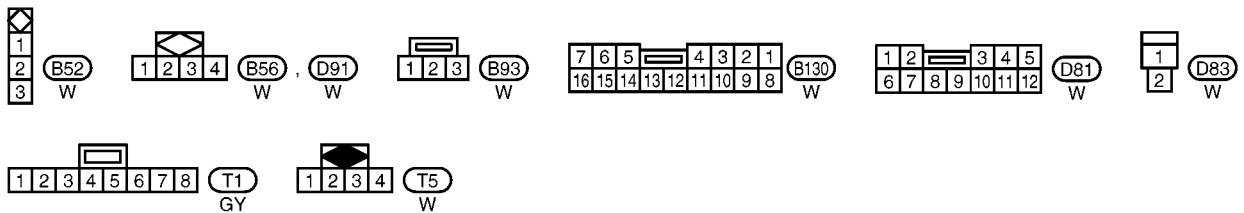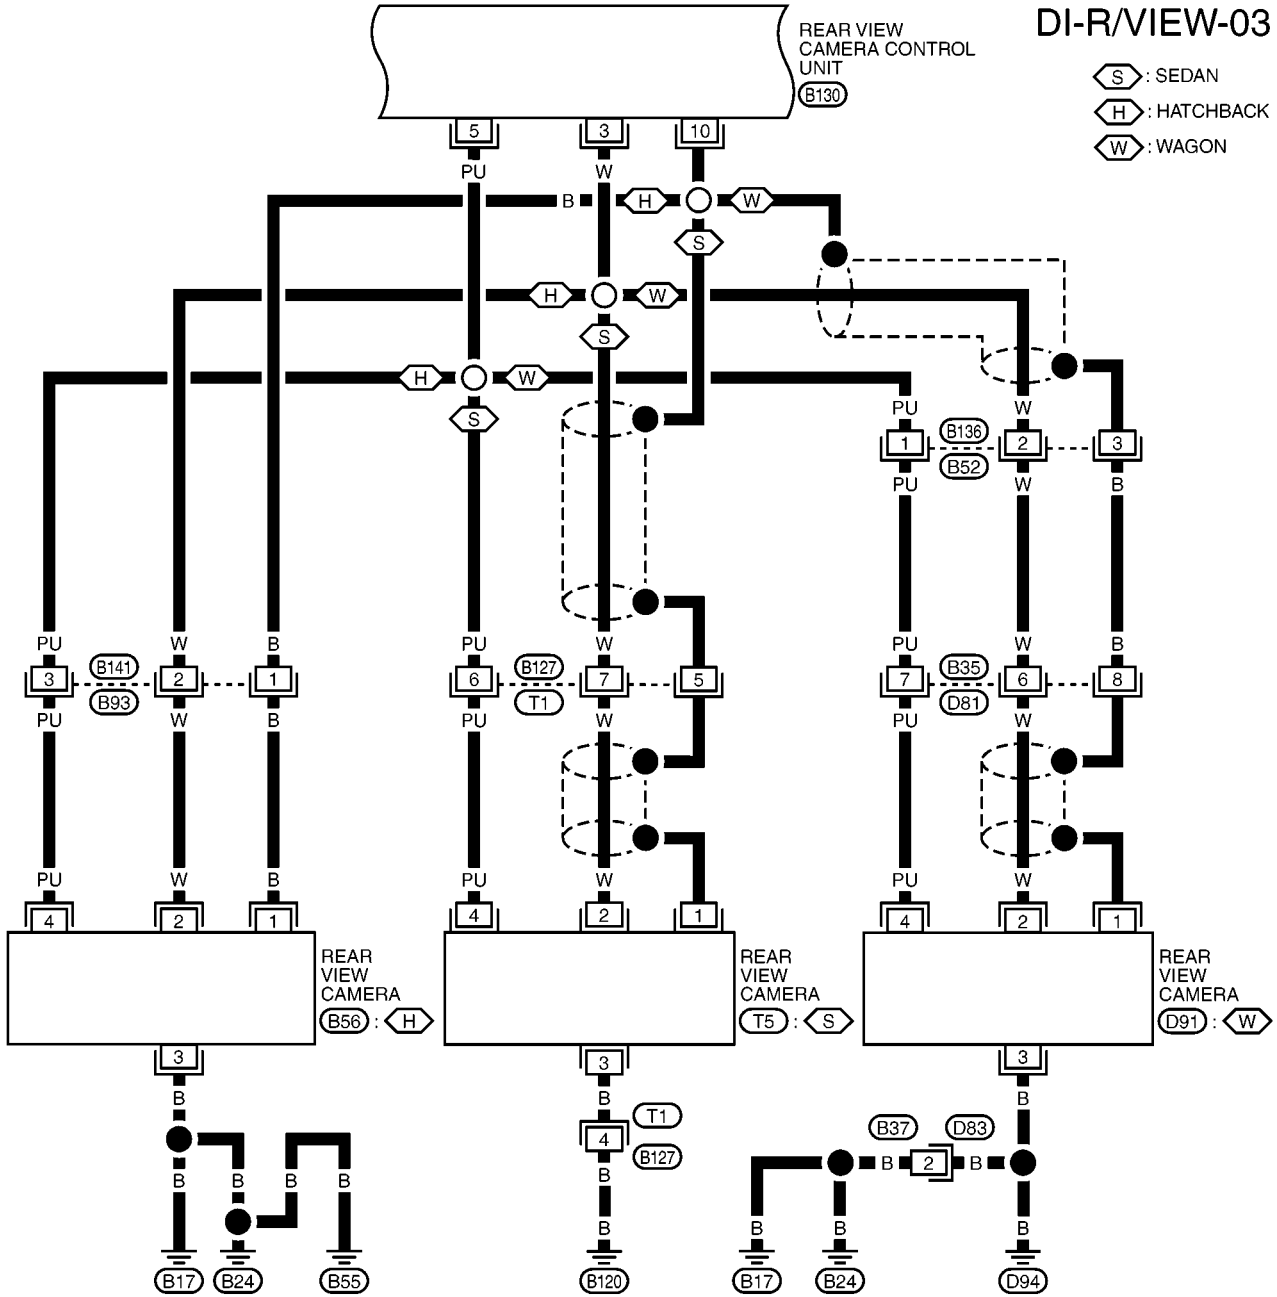


MKWA1044E

# REAR VIEW MONITOR

DI-R/VIEW-04

: WITH NAVIGATION SYSTEM

: WITHOUT NAVIGATION SYSTEM

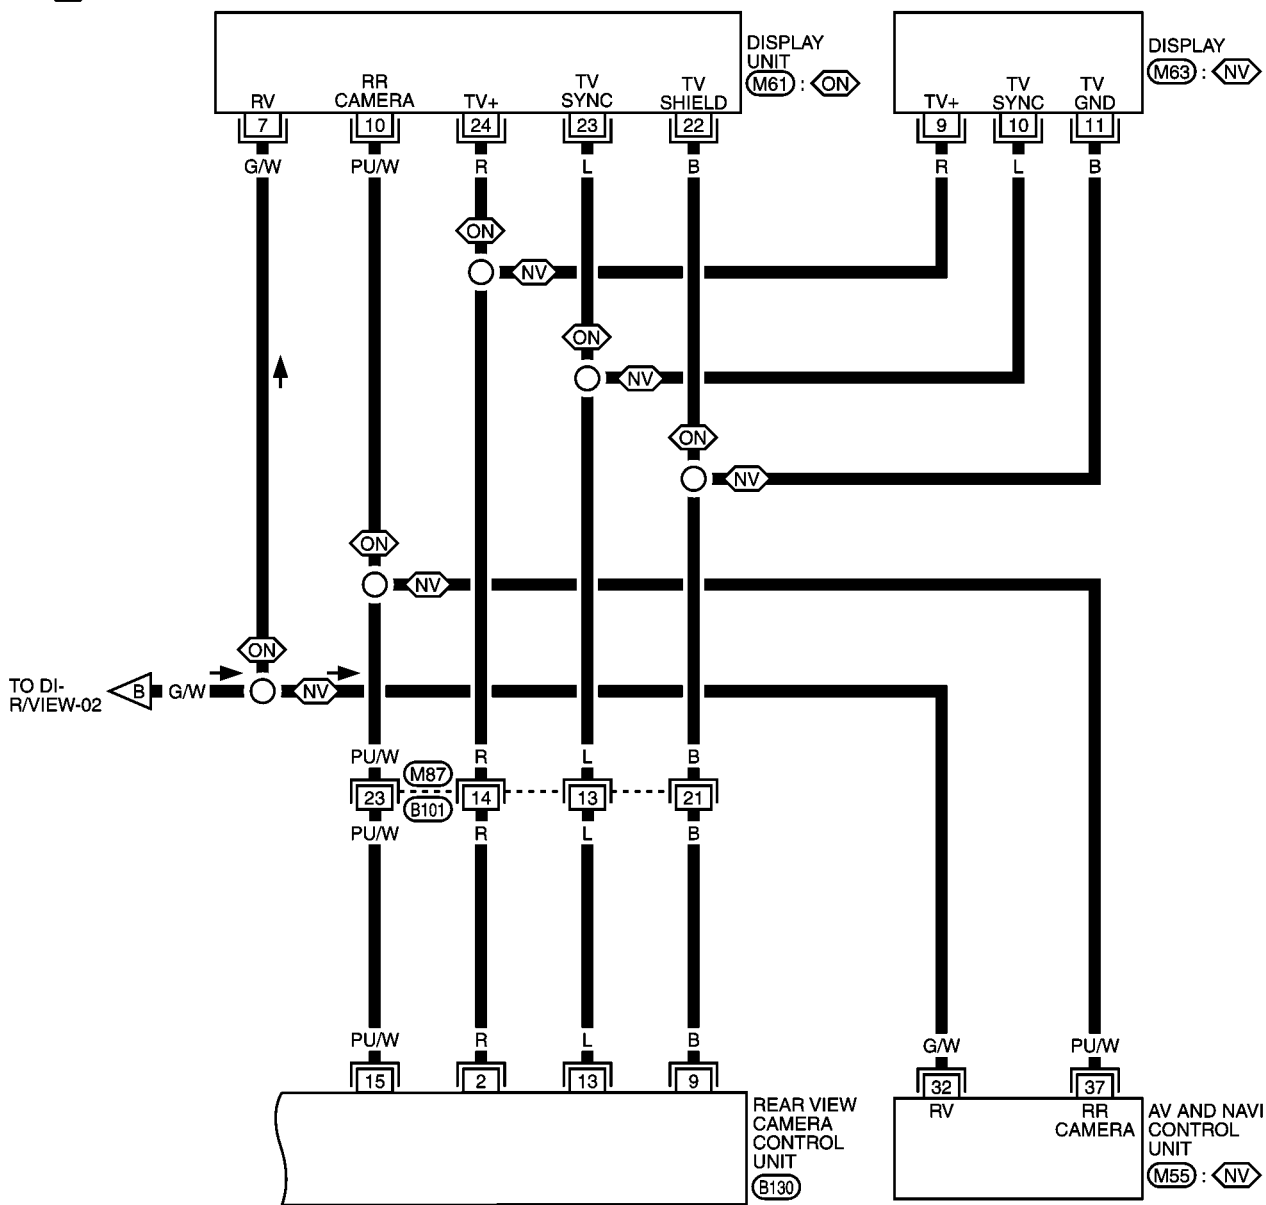

48	45	42	39	37	35	33	30	27
47	44	41	38	36	34	32	29	26
46	43	40				31	28	25

(M55)  
GY

24	22	20	18	16	14	12	11	10	8	6	4	2
23	21	19	17	15	13	12	11	9	7	5	3	1

(M61)  
BR

(M63)  
GY

1	2	3	4	5	6			7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22	23	24

(M87)  
W


7	6	5			4	3	2	1
16	15	14	13	12	11	10	9	8

(B130)  
W

# REAR VIEW MONITOR

## LHD MODELS FOR F9Q ENGINE

DI-R/VIEW-05

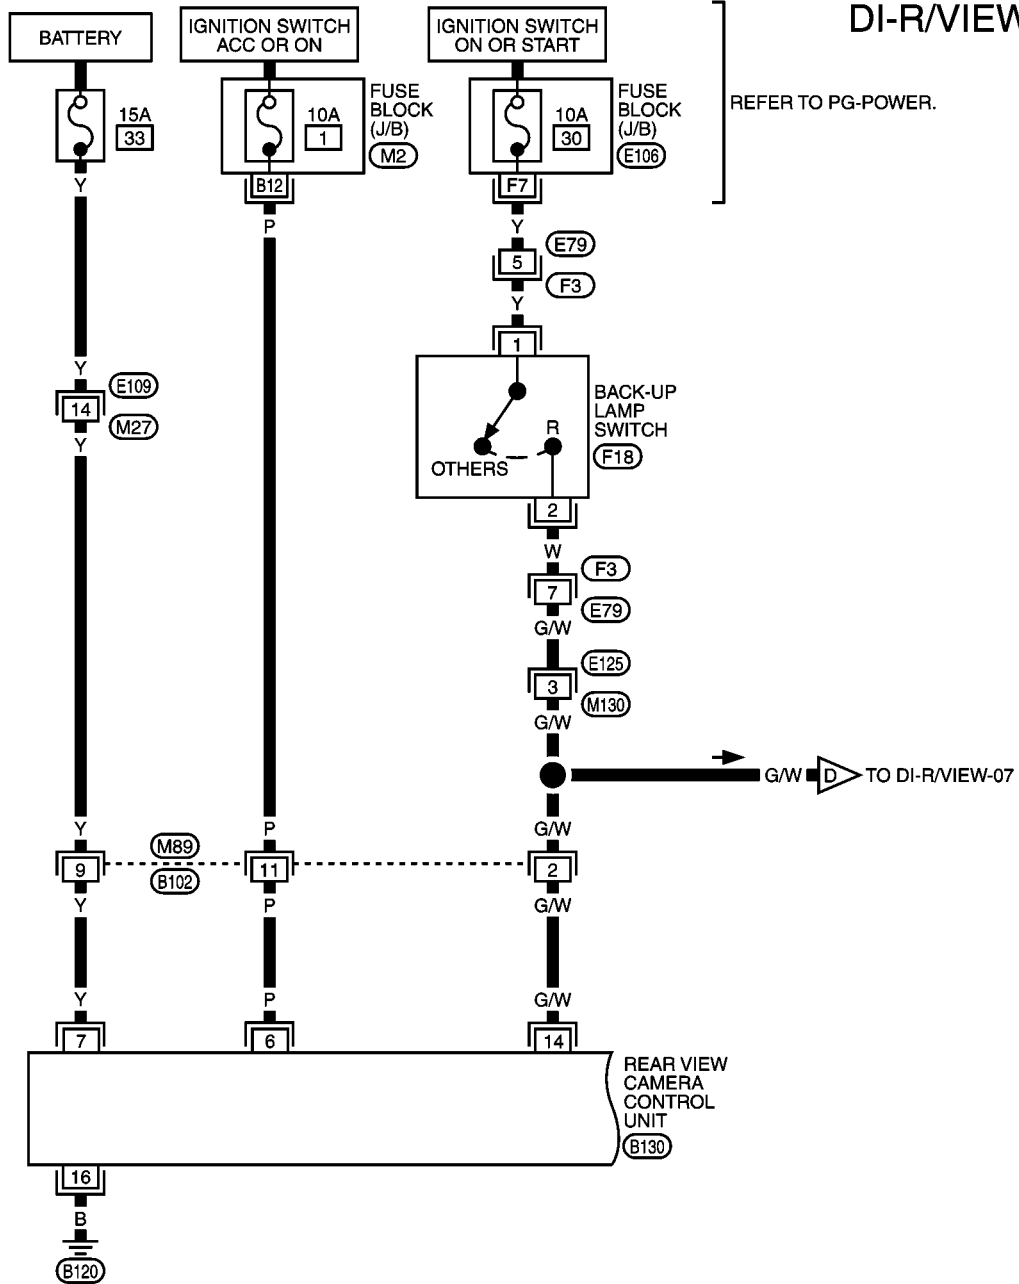

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

M89  
W

E109  
W

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24									

E125  
W

1	2	3	4
5	6	7	8

F3  
B

1	2
---	---



F18  
B

7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

B130  
W

REFER TO THE FOLLOWING.  
M2, E106 - FUSE BLOCK-JUNCTION BOX (J/B)

# REAR VIEW MONITOR

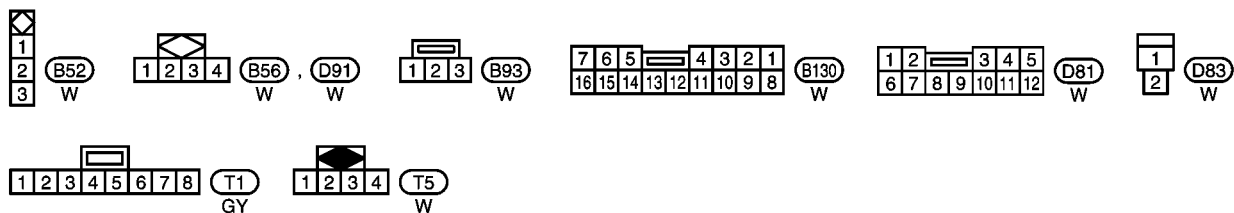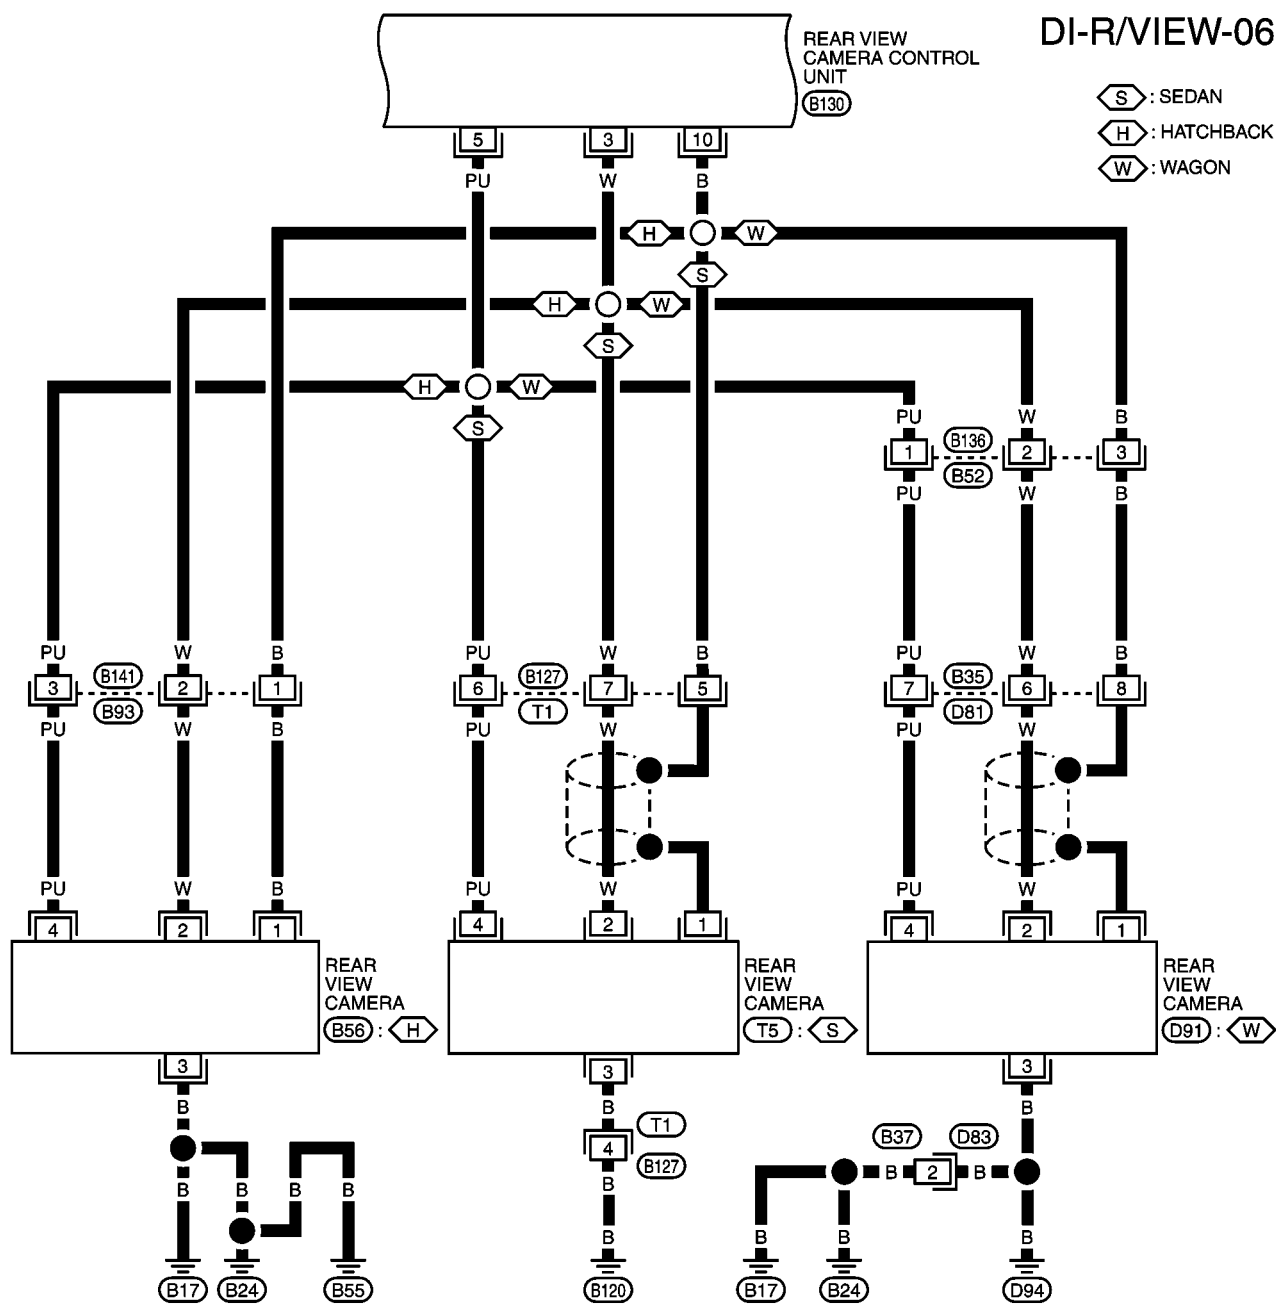

MKWA1909E




# REAR VIEW MONITOR

## DI-R/VIEW-07

**NV** : WITH NAVIGATION SYSTEM

**ON** : WITHOUT NAVIGATION SYSTEM

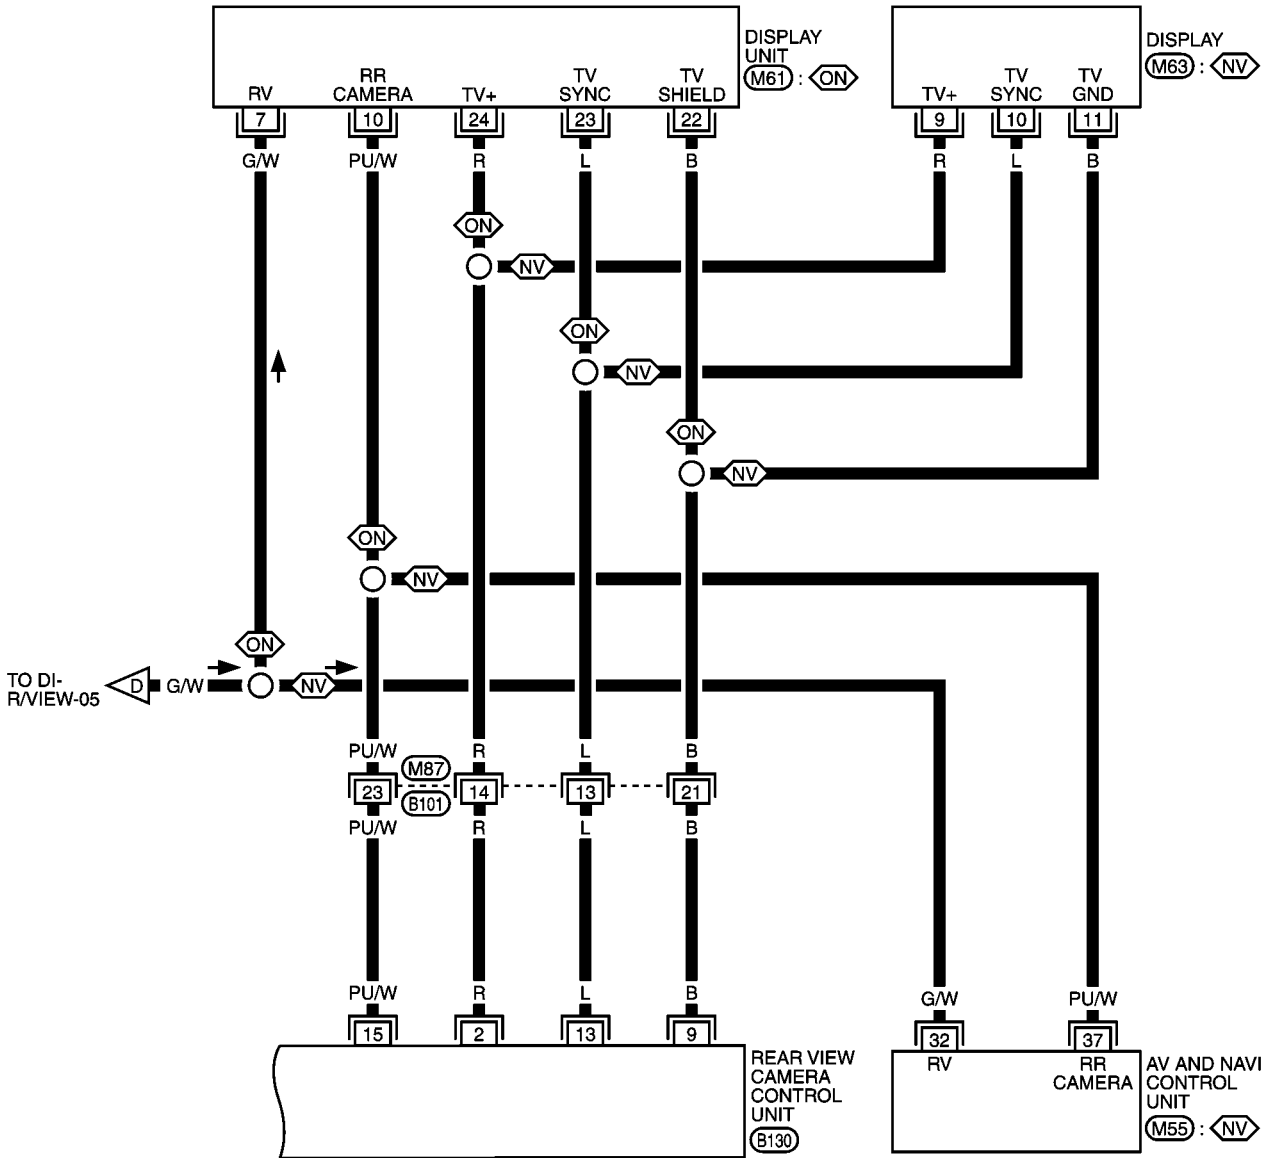


48	45	42	39	37	35	33	30	27
47	44	41	38	36	34	32	29	26
46	43	40				31	28	25

(M55)  
GY

24	22	20	18	16	14		10	8	6	4	2	
23	21	19	17	15	13	12	11	9	7	5	3	1

(M61), (M63)  
BR GY

1	2	3	4	5	6			7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22	23	24

M87

W

7	6	5			4	3	2	1
16	15	14	13	12	11	10	9	8

B130


W



# REAR VIEW MONITOR


DI-R/VIEW-09

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
DI  
L  
M

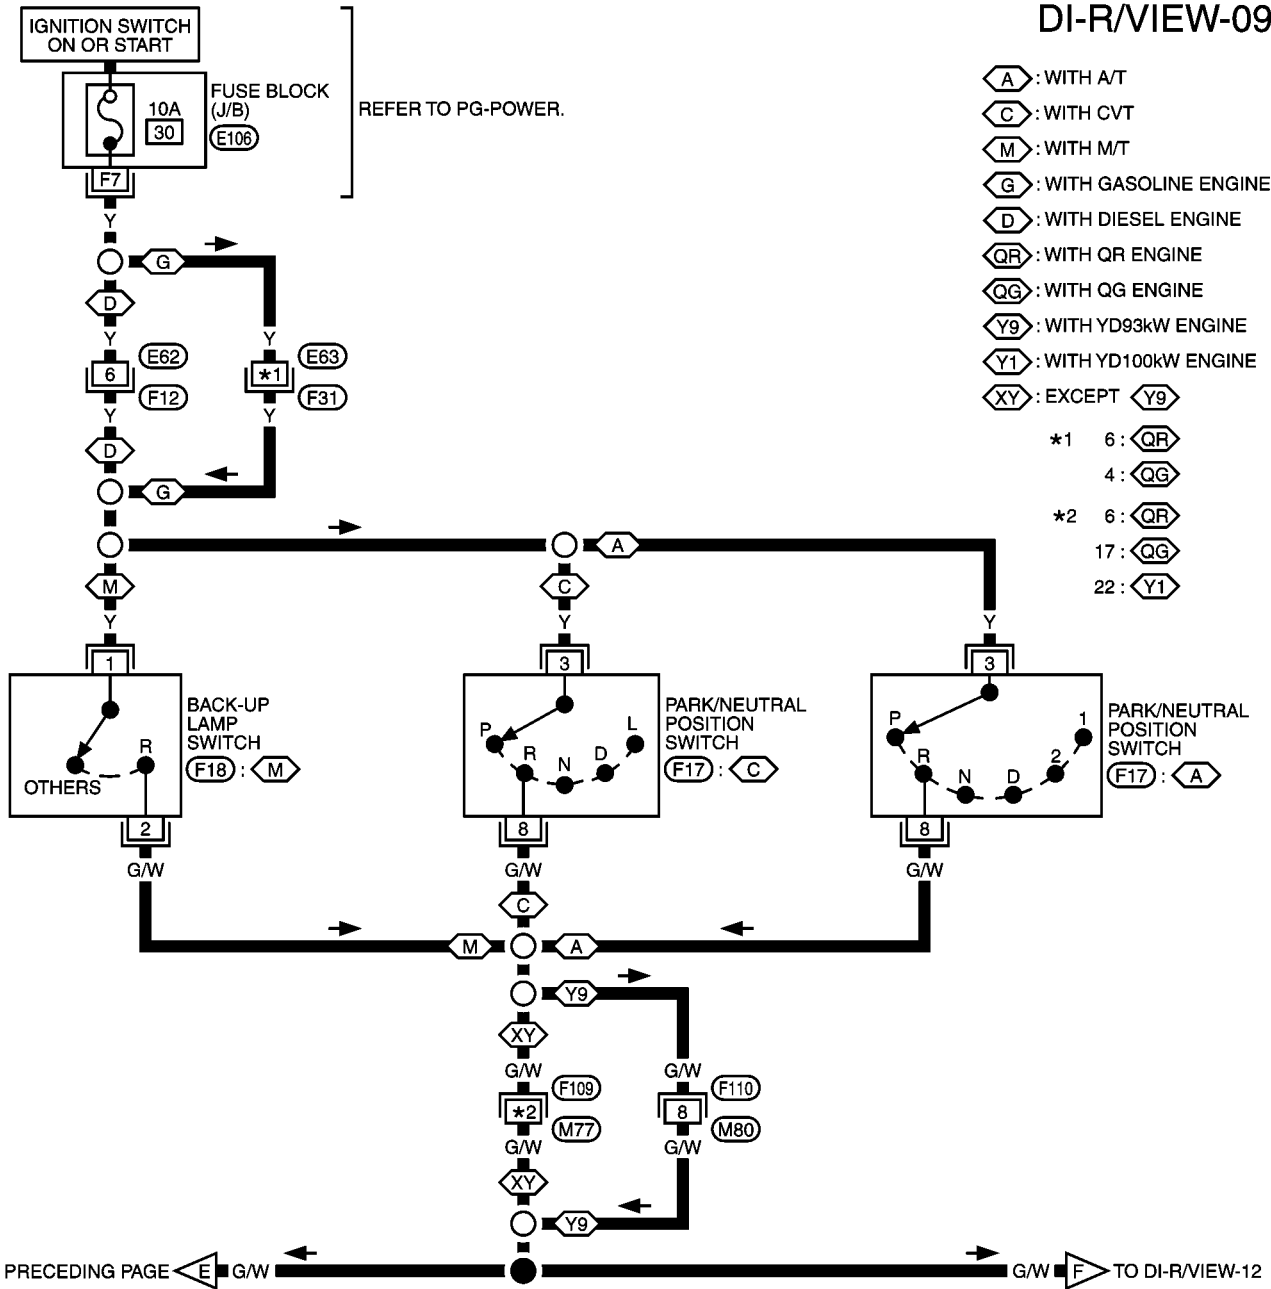

- (A) : WITH A/T
- (C) : WITH CVT
- (M) : WITH M/T
- (G) : WITH GASOLINE ENGINE
- (D) : WITH DIESEL ENGINE
- (QR) : WITH QR ENGINE
- (QG) : WITH QG ENGINE
- (Y9) : WITH YD93kW ENGINE
- (Y1) : WITH YD100kW ENGINE
- (XY) : EXCEPT (Y9)








- \*1 6 : (QR)
- 4 : (QG)
- \*2 6 : (QR)
- 17 : (QG)
- 22 : (Y1)

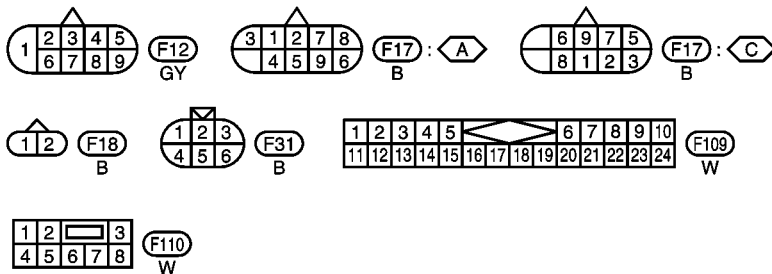

REFER TO THE FOLLOWING.  
(E106) - FUSE BLOCK-  
JUNCTION BOX (J/B)

# REAR VIEW MONITOR

DI-R/VIEW-10

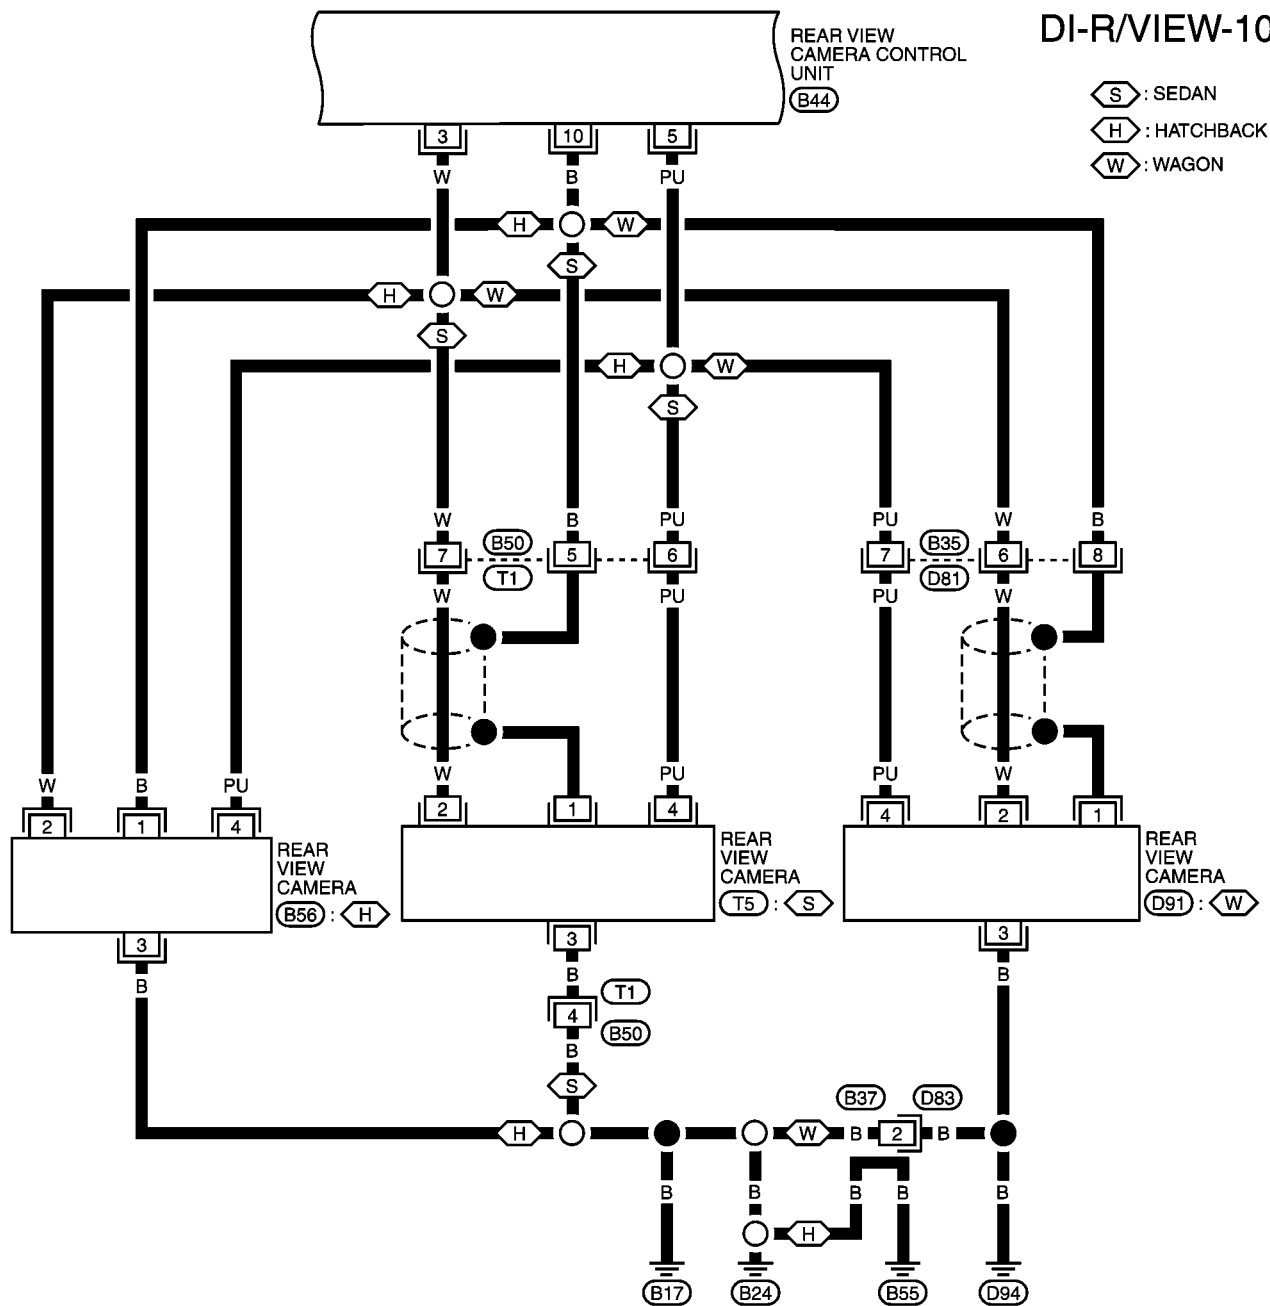


# REAR VIEW MONITOR

## DI-R/VIEW-11

◊NV◊ : WITH NAVIGATION SYSTEM

◊ON◊ : WITHOUT NAVIGATION SYSTEM

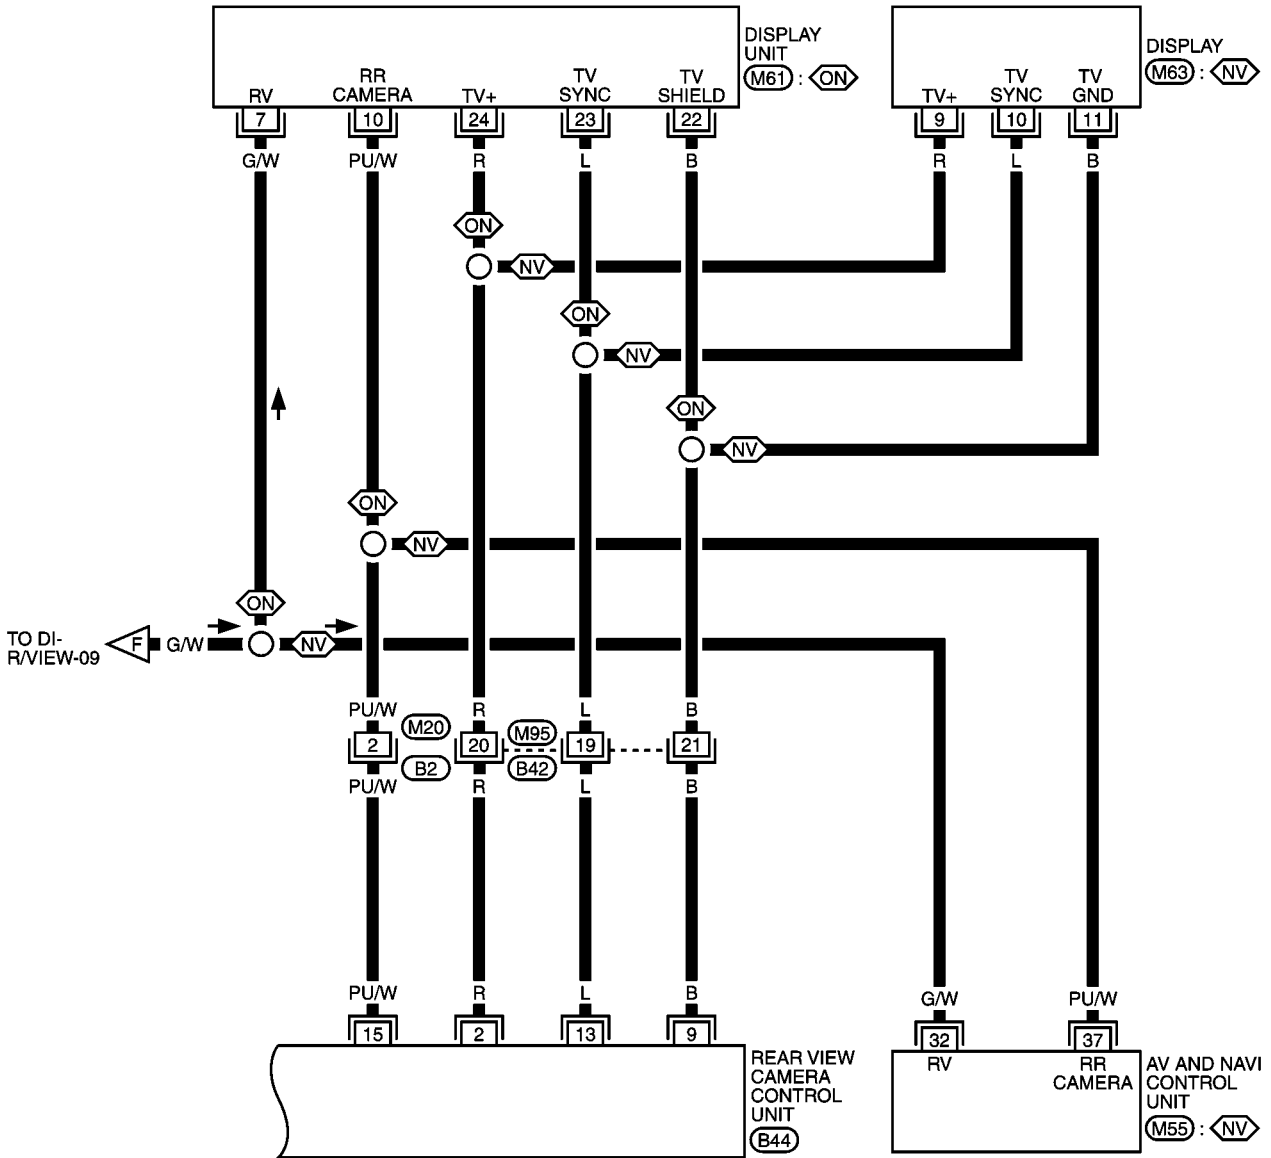

48	45	42	39	37	35	33	30	27
47	44	41	38	36	34	32	29	26
46	43	40				31	28	25

(M55)  
GY

24	22	20	18	16	14	12	10	8	6	4	2
23	21	19	17	15	13	11	9	7	5	3	1

(M61) , (M63)  
BR GY

1	2	3	4	5	6	7
8	9	10	11	12	13	14

(B2)  
BR

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22

(B42)  
GY




7	6	5	4	3	2	1
16	15	14	13	12	11	10

(B44)  
W

# REAR VIEW MONITOR

## Terminals and Reference Value for Rear View Camera Control Unit

EKS009D7

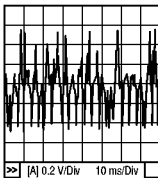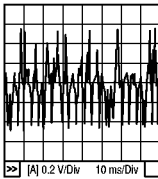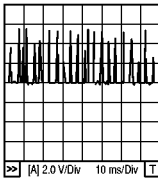TERMINALS			ITEM	CONDITION		Voltage [V]
(+) (−)		Igni- tion switch		Operation		
TER- MINAL	WIRE COLOR					
2	R	Ground	Image signal (out- put	ON	Gear position: “R” position	Approximately 0V  MKIB0189E
3	W	Ground	Camera image signal (input)	ON	Gear position “R” position	Approximately 0V  MKIB0189E
5	PU	Ground	Camera power output	ON	Gear position: R-position	Approximately 6.5V
6	P	Ground	ACC power	ACC	—	Battery voltage
7	Y	Ground	Battery power	OFF	—	Battery voltage
9	—	Ground	Shield ground	ON	—	—
10	—	Ground	Shield ground	ON	—	—
13	L	Ground	Image synchro- nous signal (out- put)	ON	Gear position: R-position	Approximately 5V  MKIB0190E
14	G/W	Ground	Reverse signal input	ON	Gear position: “R” position	Battery voltage
					Gear position: Other position	Approximately 0V
15	PU/W	Ground	Connected recog- nition signal	ON	—	Approximately 0V
16	B	Ground	Ground	ON	—	—

# REAR VIEW MONITOR

## Power Supply and Ground Circuit Check

EKS009D8

### 1. CHECK THE FUSES

- Check that the fuses for rear view camera control unit are blown.

Unit	Power source	Fuse No.
Rear view camera control unit	Battery Power	33
	Ignition switch ACC or ON	1

OK or NG

OK >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse. Refer to [PG-3](#), "POWER SUPPLY ROUTING".

### 2. POWER SUPPLY CIRCUIT CHECK


- Disconnect camera control unit connector.
- Check voltage rear view camera control unit harness connector B130 (LHD models) or B44 (RHD models) terminal 6 (P) and 7(Y), and ground.

Terminals			OFF	ACC	ON
(+)		(-)			
Connector	Terminal (Wire color)				
B130 or B44	6 (P)	Ground	0V	Battery voltage	Battery voltage
B130 or B44	7 (Y)	Ground	Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NO >> Check harness for open or short between rear view camera control unit and fuse.

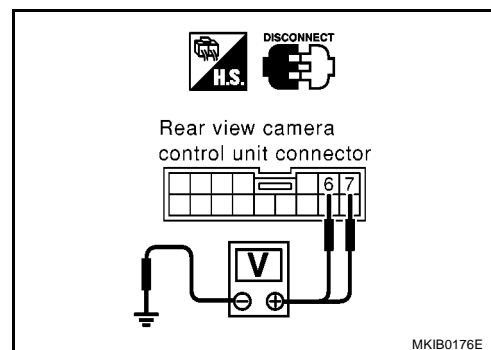

### 3. GROUND CIRCUIT CHECK

Check the following.


- Continuity between rear view camera control unit harness connector B130 (LHD models) or B44 (RHD models) terminal 16 (B) and ground.

Continuity should exist.

OK or NG

OK >> Inspection end.

NG >> Check ground harness.

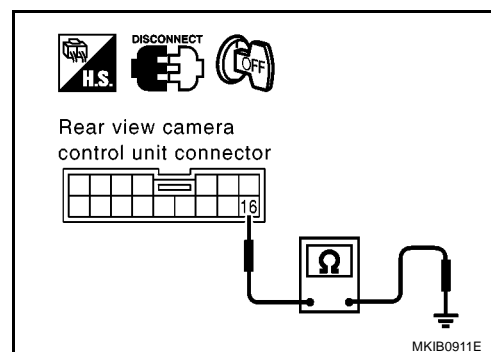

# REAR VIEW MONITOR

## Rear View Is Not Displayed With The Selector Lever In R-position

EKS009D9

### 1. BACKUP LAMP INSPECTION

1. Turn ignition switch ON position.
2. Shift the selector lever to R-position.

Dose backup lamp illuminate?

- YES >> GO TO 2.  
NO >> Check backup lamp system.


### 2. CHECK REVERSE POSITION INPUT SIGNAL -I

1. Turn ignition switch OFF.
2. Disconnect rear view camera control unit connector.
3. Turn ignition switch ON.
4. Shift the selector lever to R-position.
5. Check voltage between rear view camera control unit harness connector B130 (LHD models) or B44 (RHD models) terminal 14 (G/W) and ground.

**Battery voltage should exist.**

OK or NG

- OK >> GO TO 3 (with navigation system).  
OK >> GO TO 4 (without navigation system).  
NG >> Check harness for open or short between rear view camera control unit and backup lamp switch (M/T models) or park/neutral position switch (CVT or A/T models).

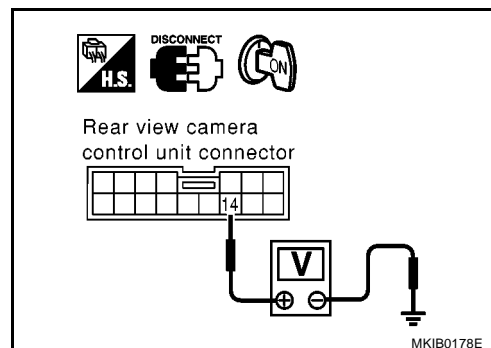


### 3. CHECK REVERSE POSITION INPUT SIGNAL -II

1. Turn ignition switch OFF.
2. Disconnect rear AV and NAVI control unit connector.
3. Turn ignition switch ON.
4. Shift the selector lever to R-position.
5. Check voltage between AV and NAVI control unit harness connector M55 terminal 32 (G/W) and ground.

**Battery voltage should exist.**

OK or NG

- OK >> GO TO 5.  
NG >> Check harness for open or short between AV and NAVI control unit and backup lamp switch (M/T models) or park/neutral position switch (CVT or A/T models).

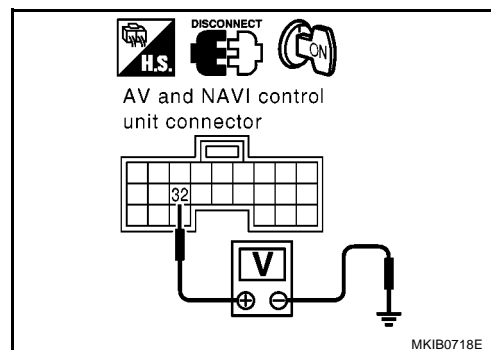



## REAR VIEW MONITOR

### 4. CHECK REVERSE POSITION INPUT SIGNAL -III


1. Turn ignition switch OFF.
2. Disconnect display unit connector.
3. Turn ignition switch ON.
4. Shift the selector lever to R-position.
5. Check voltage between display unit harness connector M61 terminal 7 (G/W) and ground.

**Battery voltage should exist.**

OK or NG

OK >> GO TO 5.

NG >> Check harness for open or short between display unit and back up lamp switch (M/T models) or park/neutral position switch (CVT or A/T models).

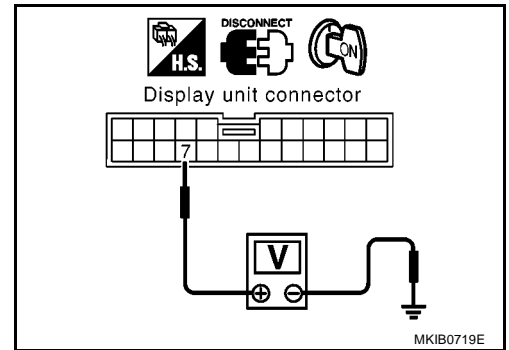

### 5. CHECK REAR VIEW CAMERA CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear view camera control unit connector and rear view camera connector.
3. Check the following.
  - Continuity between rear view camera control unit harness connector B130 (LHD models) or B44 (RHD models) terminal 3 (W) and rear view camera harness connector T5 (sedan models), D91 (wagon models) or B56 (hatch back models) each terminal 2 (W).

**Continuity should exist.**

- Continuity between rear view camera control unit harness connector B130 (LHD models) or B44 (RHD models) terminal 5 (PU) and rear view camera harness connector T5 (sedan models), D91 (wagon models) or B56 (hatch back models) each terminal 4 (PU).

**Continuity should exist.**


- Continuity between rear view camera harness connector T5 (sedan models), D91 (wagon models) or B56 (hatch back models) each terminal 3 (B) and ground.

**Continuity should exist.**

OK or NG

OK >> GO TO 6.

NG >> Repair or replace harness.

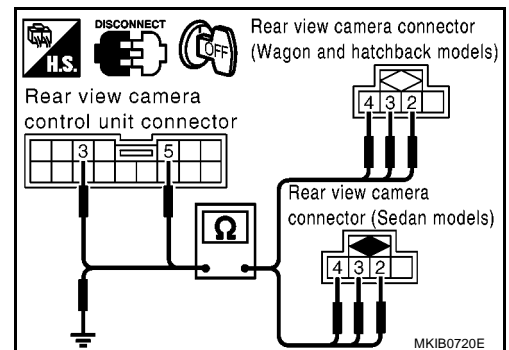

### 6. CHECK REAR VIEW CAMERA CONTROL UNIT OUTPUT SIGNAL


1. Connect rear view camera control unit connector.
2. Turn ignition switch ON.
3. Shift the selector lever to R-position.
4. Check voltage between rear view camera control unit harness connector B130 (LHD models) or B44 (RHD models) terminal 5 (PU) and ground.

**Approx. 6.5V**

OK or NG

OK >> GO TO 7.

NG >> Replace rear view camera control unit.

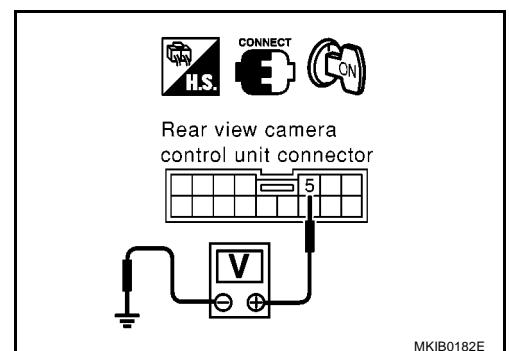


# REAR VIEW MONITOR


## 7. CHECK REAR VIEW CAMERA SIGNAL

1. Connect the rear view camera connector.
2. Check voltage between rear view camera harness connector T5 (sedan models), D91 (wagon models) or B56 (hatch back models) each terminal 2 (W) and ground.

2 - Ground:

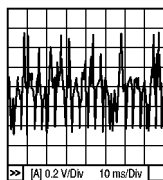

MKIB0189E

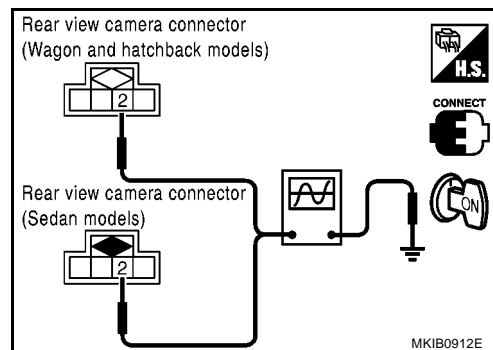

OK or NG

- OK >> Replace rear view camera control unit.
- NG >> Replace rear view camera.

## The Rear View Image Is Distorted

EKS009DA

### 1. CHECK SYNCHRO SIGNAL OPEN OR SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear view camera control unit connector and display unit.
3. Check the following
  - Continuity between rear view camera control unit harness connector B130 (LHD models) or B44 (RHD models) terminal 2 (R) and display unit harness connector M61 terminal 24 (R) (without navigation system).

Continuity should exist.

- Continuity between rear view camera control unit harness connector B130 (LHD models) or B44 (RHD models) terminal 2 (R) and display harness connector M63 terminal 9 (R) (with navigation system).


Continuity should exist.

- Continuity between rear view camera control unit harness connector B130 (LHD models) or B44 (RHD models) terminal 2 (R) and ground.


Continuity should not exist.

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace harness.

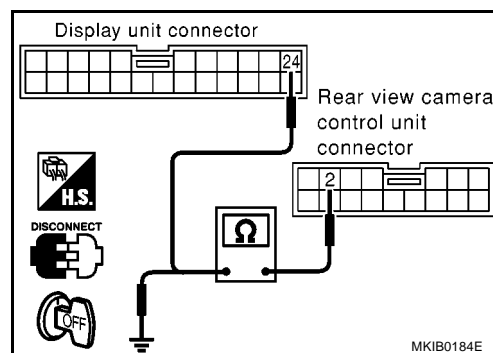

MKIB0184E

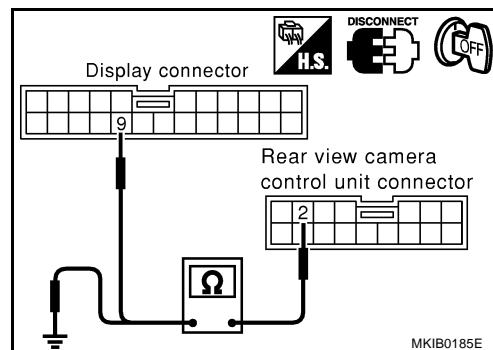


MKIB0185E

# REAR VIEW MONITOR

## 2. CHECK SYNCHRO SIGNAL OPEN OR SHORT CIRCUIT


1. Check the following.
  - Continuity between rear view camera control unit harness connector B130 (LHD models) or B44 (RHD models) terminal 9 and display unit harness connector M61 terminal 23 (without navigation system).

**Continuity should exist.**

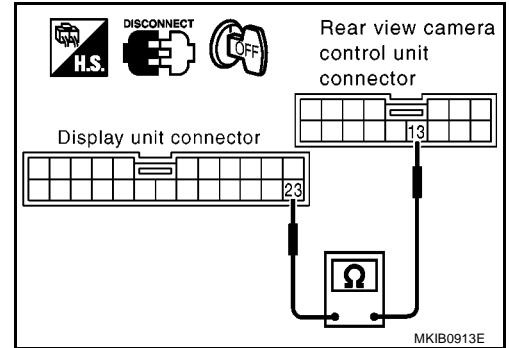

- Continuity between rear view camera control unit harness connector B130 (LHD models) or B44 (RHD models) terminal 9 and display harness connector M63 terminal 10 (with navigation system).

**Continuity should exist.**

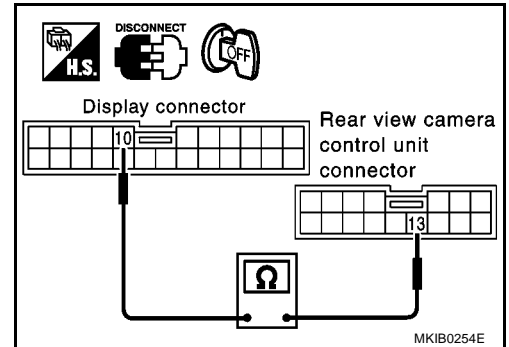


OK or NG

- OK >> GO TO 3.  
NG >> Repair or replace harness.


## 3. CHECK REAR VIEW CONTROL UNIT SYNCHRO SIGNAL

1. Connect rear view camera control unit connector.
2. Turn ignition switch ON.
3. Shift the selector lever to R-position.
4. Check signal between rear view camera control unit harness connector B130 (LHD models) or B44 (RHD models) terminal 13 (L) and ground with oscilloscope or CONSULT-II.

**13 - Ground:**

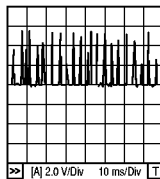

MKIB0190E

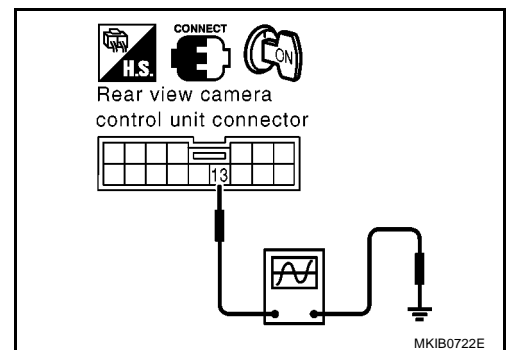

OK or NG

- OK >> Replace display unit or display.  
NG >> Replace rear view camera control unit.

## REAR VIEW MONITOR

### Removal and Installation of Rear View Camera

EKS009DB

1. Remove the trunk trim. Refer to.
2. Remove the license plate finisher. Refer to [EI-21, "LICENSE PLATE FINISHER"](#).
3. Remove the nuts (2), and remove the rear view monitor camera.

